

**APU AND STARTER-GENERATOR AIR INTAKE AND EXHAUST DUCTS - INSPECTION/CHECK**

*EFFECTIVITY: FOR AIRCRAFT WITH APU T-62T-40C14*

1. General

- A. This section gives the procedures to do the visual inspection of the APU and starter-generator air intake and exhaust ducts.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
49-15-01-200-801-A ◆	APU AND STARTER-GENERATOR AIR INTAKE AND EXHAUST DUCTS - INSPECTION	FOR AIRCRAFT WITH APU T-62T-40C14

TASK 49-15-01-200-801-A

*EFFECTIVITY: FOR AIRCRAFT WITH APU T-62T-40C14*

## 2. APU AND STARTER-GENERATOR AIR INTAKE AND EXHAUST DUCTS - INSPECTION

### A. General

- (1) Obey the instructions below to inspect the APU and starter-generator air intake and exhaust ducts.

### B. References

REFERENCE	DESIGNATION
<a href="#">AMM MPP 49-00-00/200</a>	- MAINTENANCE PRACTICES

### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
313		APU cowling

### D. Tools and Equipment

Not Applicable

### E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
	Workstand	To get access to the APU	1

### F. Consumable Materials

Not Applicable

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Tail cone

### I. Preparation

#### **SUBTASK 841-002-A**

- (1) On the left power control and distribution box, open the APU GEN START circuit breaker and attach DO-NOT-CLOSE tag to it.
- (2) Put the work stand in the work area.

- J. Inspect (Visual Inspection) APU and Starter-Generator Air Intake and Exhaust Ducts for Foreign Material or Obstruction ([Figure 601](#))

*SUBTASK 212-002-A*

**WARNING: BEFORE YOU DO THE TASK OBEY THE SAFETY PRECAUTIONS GIVEN IN [AMM MPP 49-00-00/200](#) TO PREVENT INJURY TO PERSONS AND DAMAGE TO THE MATERIAL.**

- (1) Do a visual inspection of the APU and starter-generator air intake and exhaust ducts to make sure that there is no unwanted matter or blockage. Remove the unwanted matter or blockage if applicable.

- K. Follow-on


*SUBTASK 842-002-A*

- (1) On the left power control and distribution box, remove the DO-NOT-CLOSE tag and close the APU GEN START circuit breaker.
- (2) Remove the work stand from the work area.

EFFECTIVITY: FOR AIRCRAFT WITH APU T-62T-40C14

APU and Starter-Generator Air Intake and Exhaust Ducts - Inspection

Figure 601

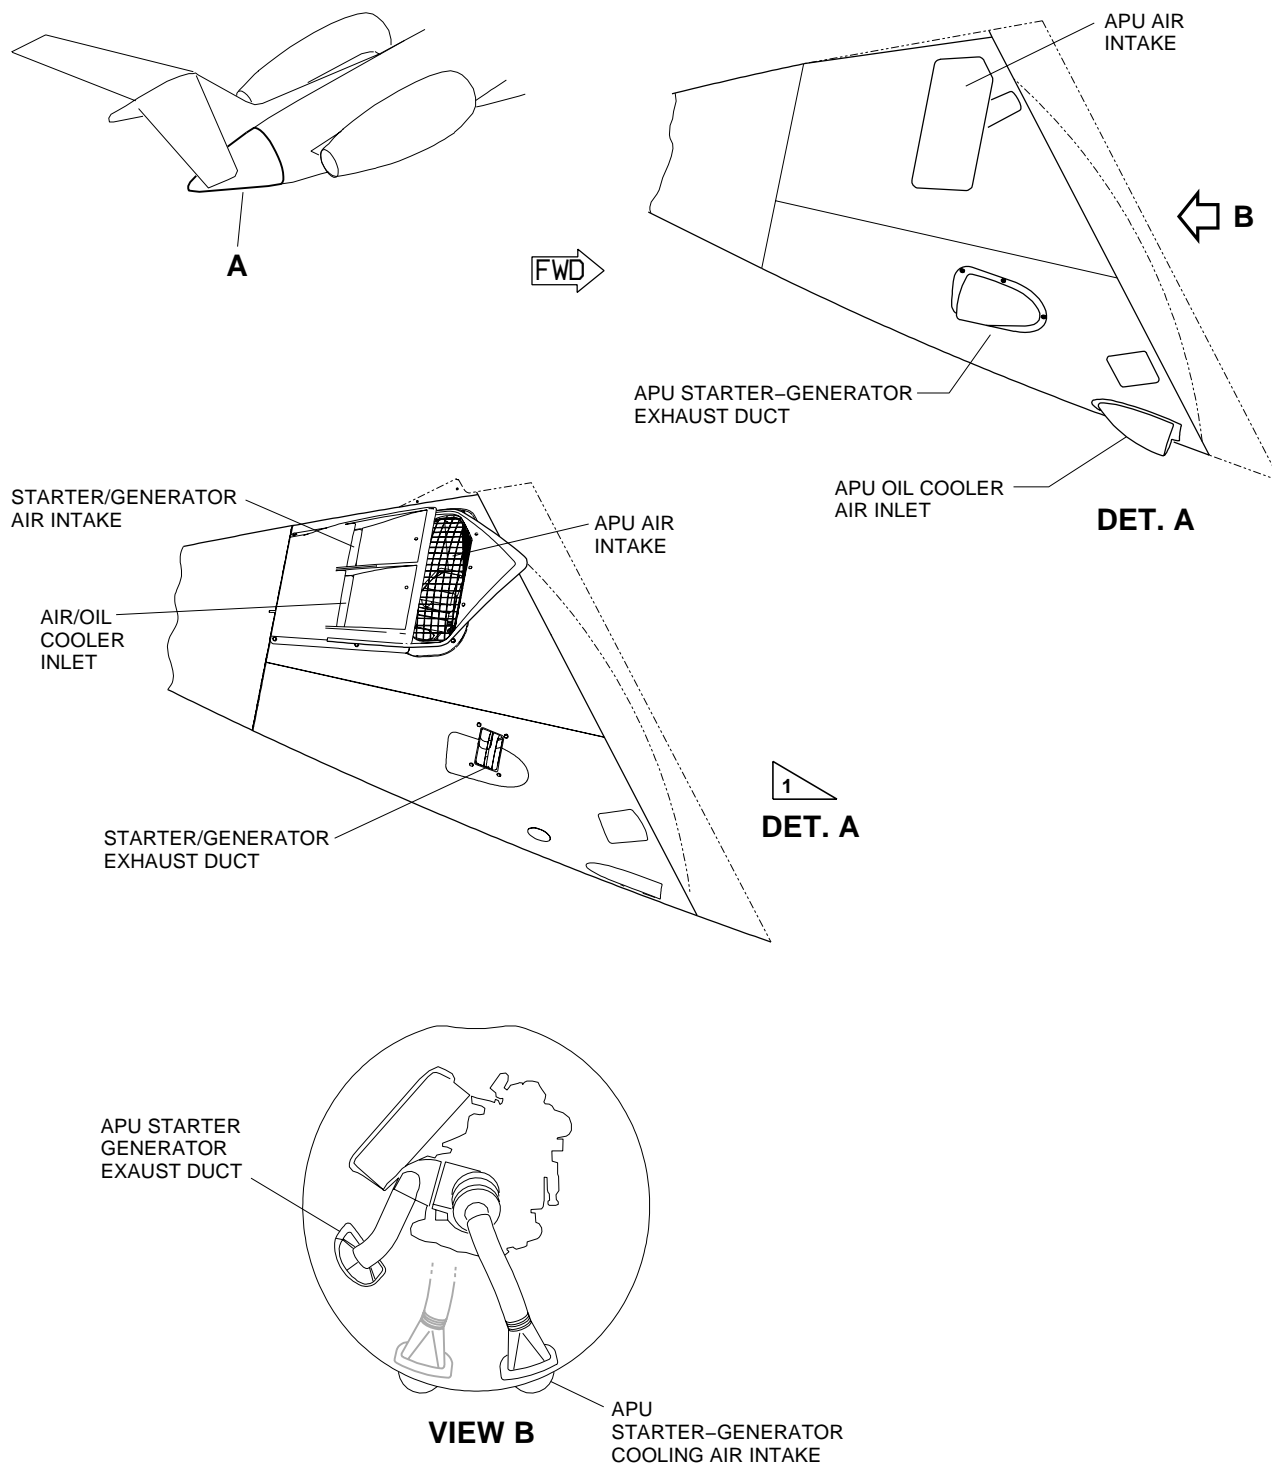

VALID FOR AIRCRAFT WITH APU COWLING 145-54858 SERIES

145AMM490294.MCE A