

TEMPERATURE CONTROL MODULE - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. The temperature control module is installed in the cockpit, below the RH lateral console lining.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
21-60-05-000-801-A	TEMPERATURE CONTROL MODULE - REMOVAL	ALL
21-60-05-400-801-A	TEMPERATURE CONTROL MODULE - INSTALLATION	ALL

TASK 21-60-05-000-801-A

EFFECTIVITY: ALL

2. TEMPERATURE CONTROL MODULE - REMOVAL

A. General

(1) This task gives the procedures to remove the temperature control module.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-03/100	- COMPONENT LOCATION

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
224	224FRW	RH lateral console of the cockpit
224	224KRW	RH lateral console of the cockpit

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

I. Preparation

SUBTASK 841-002-A

(1) On the circuit breaker panel, open the PACK 1 circuit breaker and attach a DO-NOT-CLOSE tag to it.

(2) Open access panels 224FRW and 224KRW ([AMM MPP 06-41-03/100](#)).

J. Removal (Figure 401)

SUBTASK 020-002-A

(1) Disconnect the electrical connector.


(2) Remove the screws and the washers.

(3) Remove the temperature control module.

EFFECTIVITY: ALL

Temperature Control Module - Removal/Installation

Figure 401

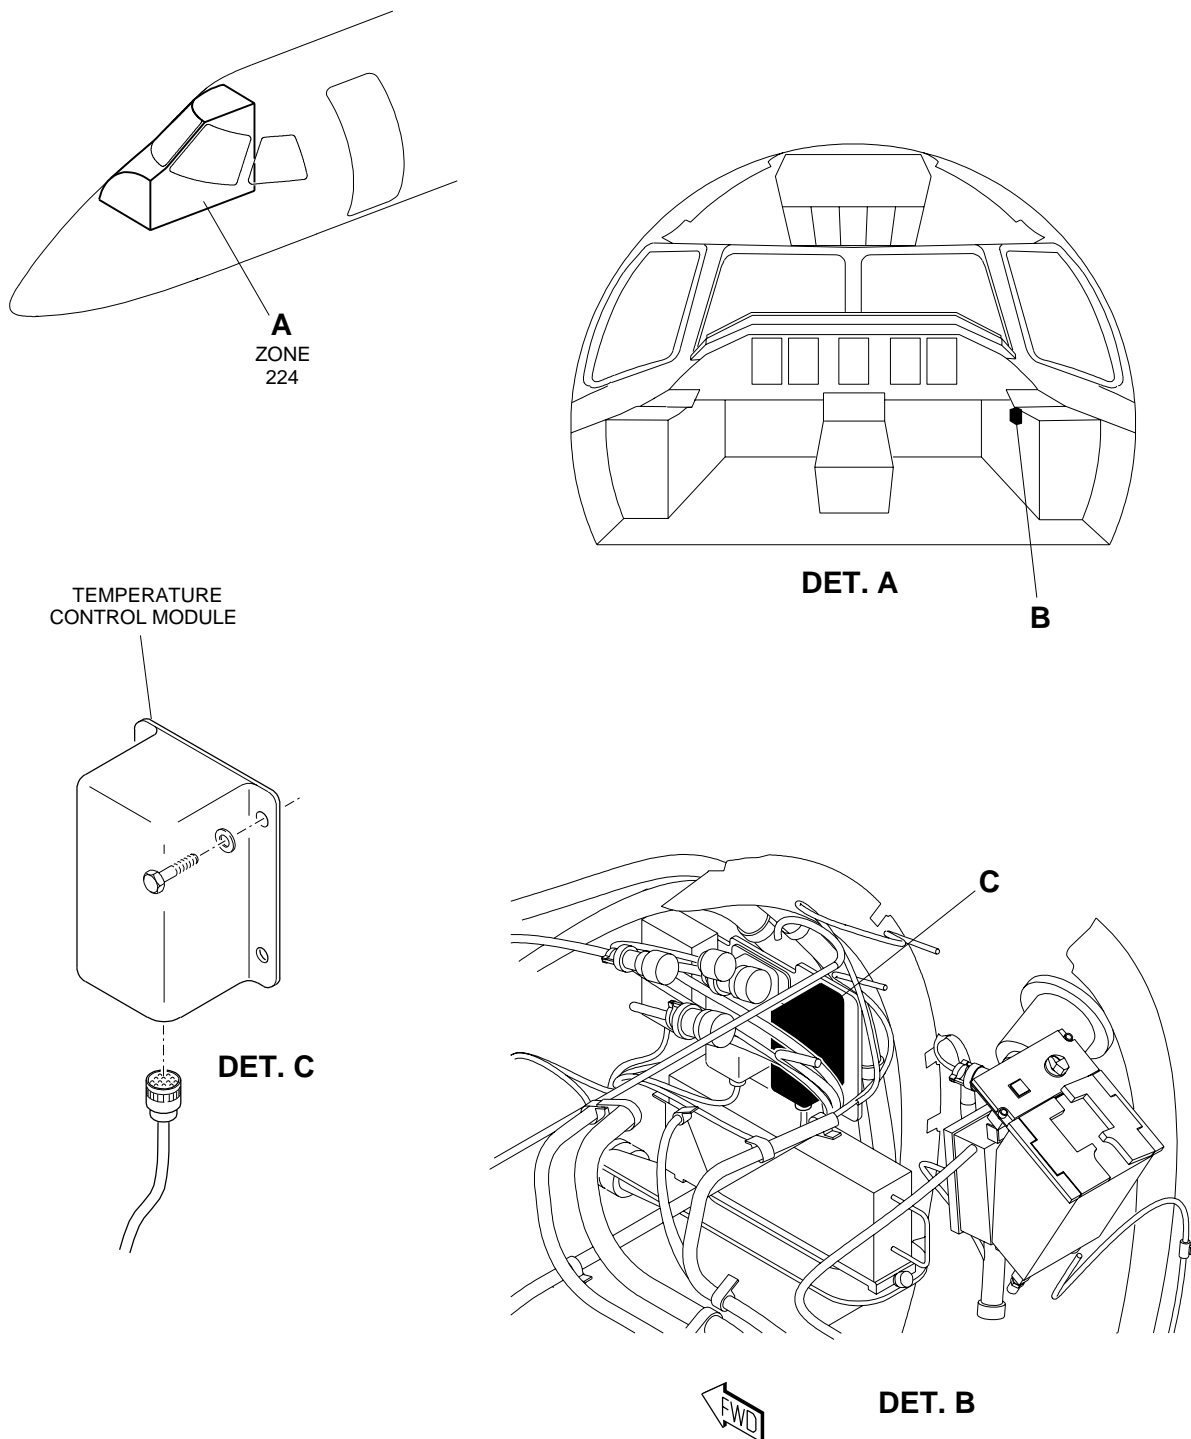

145AMM210039.MCE A

TASK 21-60-05-400-801-A

EFFECTIVITY: ALL

3. TEMPERATURE CONTROL MODULE - INSTALLATION

A. General

(1) This task gives the procedures to install the temperature control module.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-03/100	- COMPONENT LOCATION
AMM TASK 21-60-00-700-801-A/500	TEMPERATURE CONTROL SYSTEM - OPERATION-AL CHECK

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
224	224FRW	RH lateral console of the cockpit
224	224KRW	RH lateral console of the cockpit

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

I. Preparation

SUBTASK 841-003-A

(1) On the circuit breaker panel, open the PACK 1 circuit breaker and attach a DO-NOT-CLOSE tag to it.

J. Installation (Figure 401)

SUBTASK 420-002-A

(1) Put the temperature control module in the installation position.

(2) Install the washers and the screws.

- (3) Connect the electrical connector.

K. Follow-on

SUBTASK 842-002-A

- (1) Close access panels 224FRW and 224KRW ([AMM MPP 06-41-03/100](#)).
- (2) Remove the tag and close the PACK 1 circuit breaker.
- (3) Do the Temperature Control System - Operational Check ([AMM TASK 21-60-00-700-801-A/500](#)).

