

AIR FILTER - MAINTENANCE PRACTICES

EFFECTIVITY: ALL

1. General

- A. The air filter is installed on the rear pressure bulkhead and it has a filter element that can be discarded and replaced when necessary.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
21-31-08-960-801-A ♦	AIR FILTER ELEMENT - REPLACEMENT	ALL

TASK 21-31-08-960-801-A

EFFECTIVITY: ALL

2. AIR FILTER ELEMENT - REPLACEMENT

A. General

(1) This task gives the procedures to replace the air filter element.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-01/100	-
IPC 21-30-00	PRESSURIZATION DISTRIBUTION SYSTEM

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
272	272DR	Rear fuselage I

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expendable Parts

ITEM	IPC REFERENCE (VENDOR REFERENCE)	QTY
Air Filter	IPC 21-30-00	1

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	In rear fuselage I

I. Preparation

SUBTASK 841-002-A

(1) Open access door 272DR (AMM MPP 06-41-01/100).

J. Replace Air Filter Element (Figure 201)

SUBTASK 960-002-A

(1) Remove the air filter element from the air filter.

(2) Discard the air filter element.

(3) Install a new air filter element in the air filter.

K. Follow-on


SUBTASK 842-002-A

(1) Close access door 272DR (AMM MPP 06-41-01/100).

EFFECTIVITY: ALL

Air Filter Element - Replacement

Figure 201

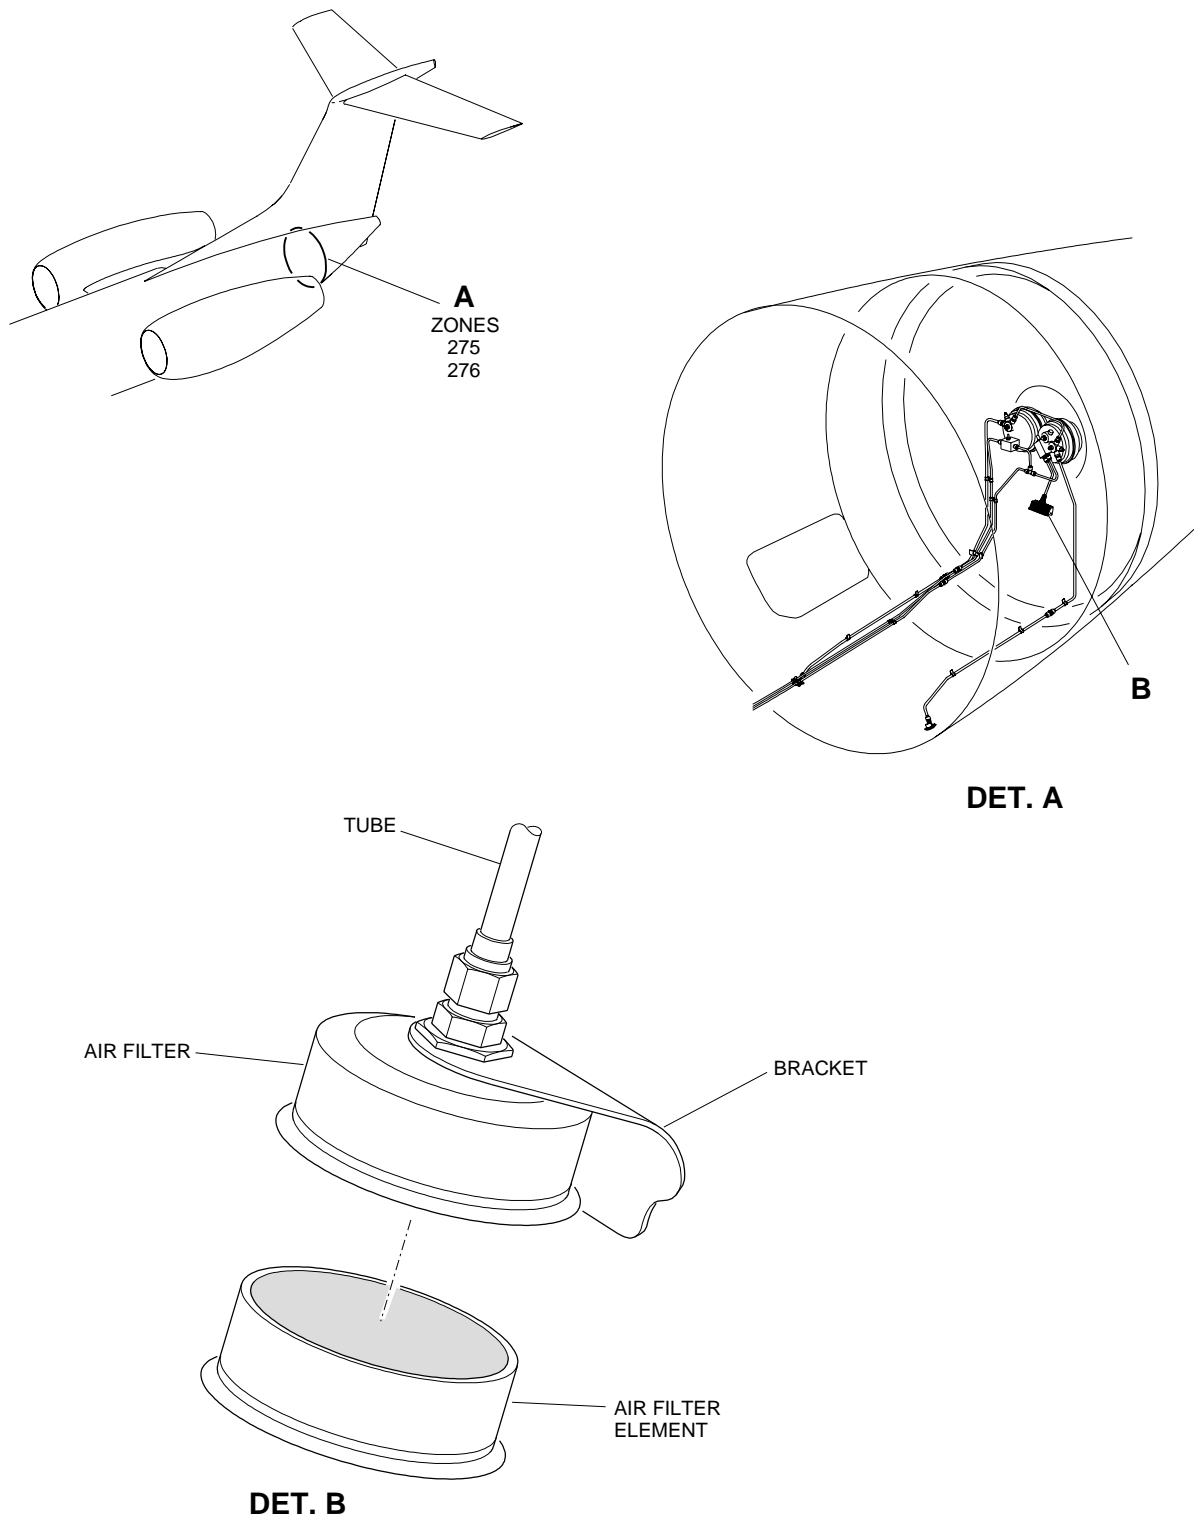

145AMM210034.MCE A