

FUELING-CONTROL-PANEL&PRESSURE-REFUELING-ADAPTER COMPARTMENT ACCESS DOOR - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the access door of the fueling-control-panel and pressure-refueling-adapter compartment.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
52-45-00-000-801-A	FUELING CONTROL PANEL & PRES-SURE REFUELING ADAPTER COMPART-MENT ACCESS DOOR - REMOVAL	ALL
52-45-00-400-801-A	FUELING CONTROL PANEL & PRES-SURE REFUELING ADAPTER COMPART-MENT ACCESS DOOR - INSTALLATION	ALL

TASK 52-45-00-000-801-A

EFFECTIVITY: ALL

2. FUELING CONTROL PANEL & PRESSURE REFUELING ADAPTER COMPARTMENT ACCESS DOOR - REMOVAL

A. General

- (1) This procedure gives the instructions to remove the access door of the fueling-control-panel and pressure-refueling-adapter compartment.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-30-00/100	-
AMM TASK 52-45-01-000-801-A/400	FUELING-CONTROL-PANEL & PRESSURE-REFUELING-ADAPTER COMPARTMENT LINING - REMOVAL
IPC 53-04-01	FWD FAIRING - WING/FUSELAGE

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
191	191BR	Forward lower fairing

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expendable Parts

ITEM	IPC REFERENCE (VENDOR REFERENCE)	QTY
Cotter pin	IPC 53-04-01	2/LRU

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Forward lower fairing

I. Preparation

SUBTASK 841-002-A

- (1) Open fueling-control-panel and pressure-refueling-adapter compartment access door 191BR (AMM MPP 06-30-00/100).
- (2) Remove the lining of the fueling-control-panel and pressure-refueling-adapter compartment ([AMM TASK 52-45-01-000-801-A/400](#)).




J. Removal ([Figure 401](#))

SUBTASK 020-002-A

- (1) Remove the cotter pins (7) and (9), nuts (6) and (10), washers (3), (5), (11), and (13), and bolts (2) and (14) to disconnect the arms (8) and (15) from the supports (4) and (12).
- (2) Remove the access door (1).

EFFECTIVITY: ALL

Fueling Control Panel and Pressure-Refueling Adapter Compartment Access Door - Removal/Installation
Figure 401

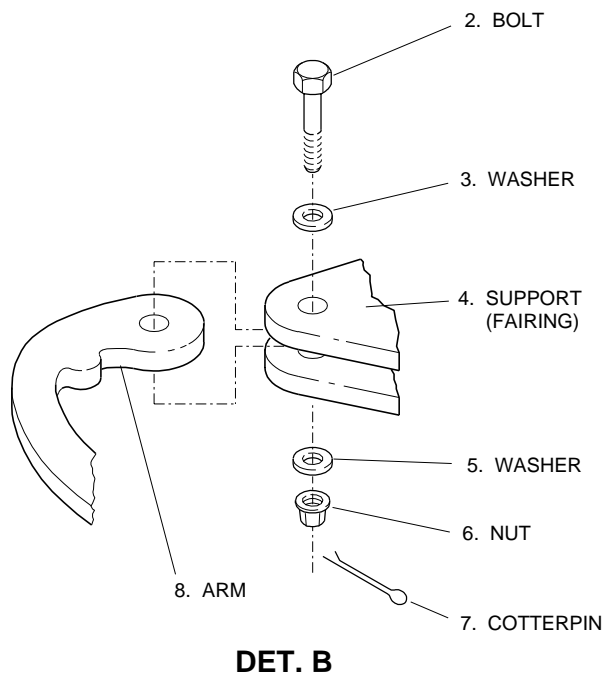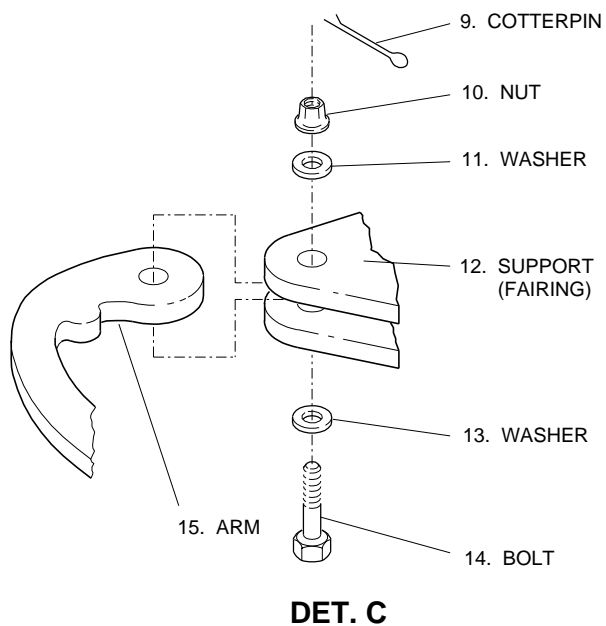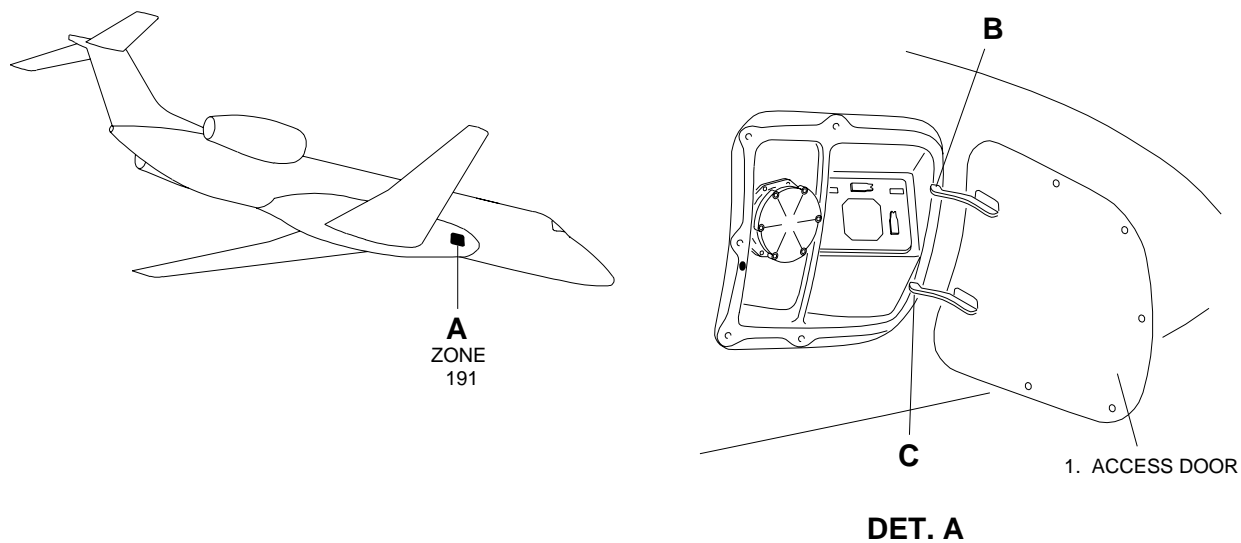

145AMM520146.MCE A

TASK 52-45-00-400-801-A

EFFECTIVITY: ALL

3. FUELING CONTROL PANEL & PRESSURE REFUELING ADAPTER COMPARTMENT ACCESS DOOR - INSTALLATION

A. General

- (1) This procedure gives the instructions to install the access door of the fueling-control-panel and pressure-refueling-adapter compartment.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-30-00/100	-
AMM TASK 28-41-00-200-801-A/600	-
AMM TASK 52-45-01-400-801-A/400	FUELING-CONTROL-PANEL & PRESSURE-REFUELING-ADAPTER COMPARTMENT LINING - INSTALLATION
AMM TASK 52-78-00-700-801-A/500	FUELING CONTROL PANEL AND PRESSURE REFUELING ADAPTER ACCESS DOOR CAUTION MESSAGE - OPERATIONAL TEST

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
191	191BR	Forward lower fairing

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Forward lower fairing

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Put the arms (8) and (15) of the access door (1) in the supports (4) and (12).
- (2) Attach the arms (8) and (15) to the supports (4) and (12) with the bolts (2) and (14), washers (3), (5), (13), and (11), nuts (6) and (10), and cotter pins (7) and (9).

J. Follow-on

SUBTASK 842-002-A

- (1) Do an operational check of the caution message related to the access door of the fueling-control-panel and pressure-refueling-adapter compartment ([AMM TASK 52-78-00-700-801-A/500](#)).
- (2) Install the lining of the fueling-control-panel and pressure-refueling-adapter compartment ([AMM TASK 52-45-01-400-801-A/400](#)).
- (3) Do an inspection on the fuel quantity indication harness (AMM TASK 28-41-00-200-801-A/600).

NOTE: The inspection of fuel quantity indication harness is part of Critical Design Configuration Control Limitations (CDCCL) in the Airworthiness Limitations of the Aircraft Maintenance Program.

- (4) Close fueling-control-panel and pressure-refueling-adapter compartment access door 191BR (AMM MPP 06-30-00/100).