

ATTENDANT-CALL PANEL ASSEMBLY - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the attendant-call panel assembly.
- B. The attendant-call panel is installed outside the LH forward partition of the toilet compartment. It gives the attendant a visual indication when there is a call from the pilot or from a passenger.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
33-25-07-000-801-A	ATTENDANT-CALL PANEL ASSEMBLY - REMOVAL	ALL
33-25-07-400-801-A	ATTENDANT CALL-PANEL ASSEMBLY - INSTALLATION	ALL

TASK 33-25-07-000-801-A
EFFECTIVITY: ALL

2. ATTENDANT-CALL PANEL ASSEMBLY - REMOVAL

A. General

(1) This task gives the procedures for the removal of the attendant-call panel assembly.

B. References

REFERENCE	DESIGNATION
AMM SDS 24-60-00/1	

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
261		Toilet forward partition, LH

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	In the passenger cabin

I. Preparation

SUBTASK 841-002-A

- (1) On the RH electrical-power control/distribution box ([AMM SDS 24-60-00/1](#)), open the RDNG LT/ATTD CALL 3 circuit breaker and attach a DO-NOT-CLOSE tag to it (Location Tip: RB SHED DC BUS 2 - RDNG LT/ATTD CALL 3).

J. Removal ([Figure 401](#)) ([Figure 402](#))

SUBTASK 020-002-A

- (1) Remove the screws (4).
- (2) Remove the attendant call panel (3).
- (3) Carefully pull the base assembly (2).
- (4) Disconnect the electrical connector (1) from the base assembly (2).




EMB145 – EMB135

AIRCRAFT MAINTENANCE MANUAL


-
- (5) Remove the base assembly (2).

EFFECTIVITY: AIRCRAFT FOR 37 PASSENGERS
Attendant-Call Panel Assembly - Removal/Installation
Figure 401

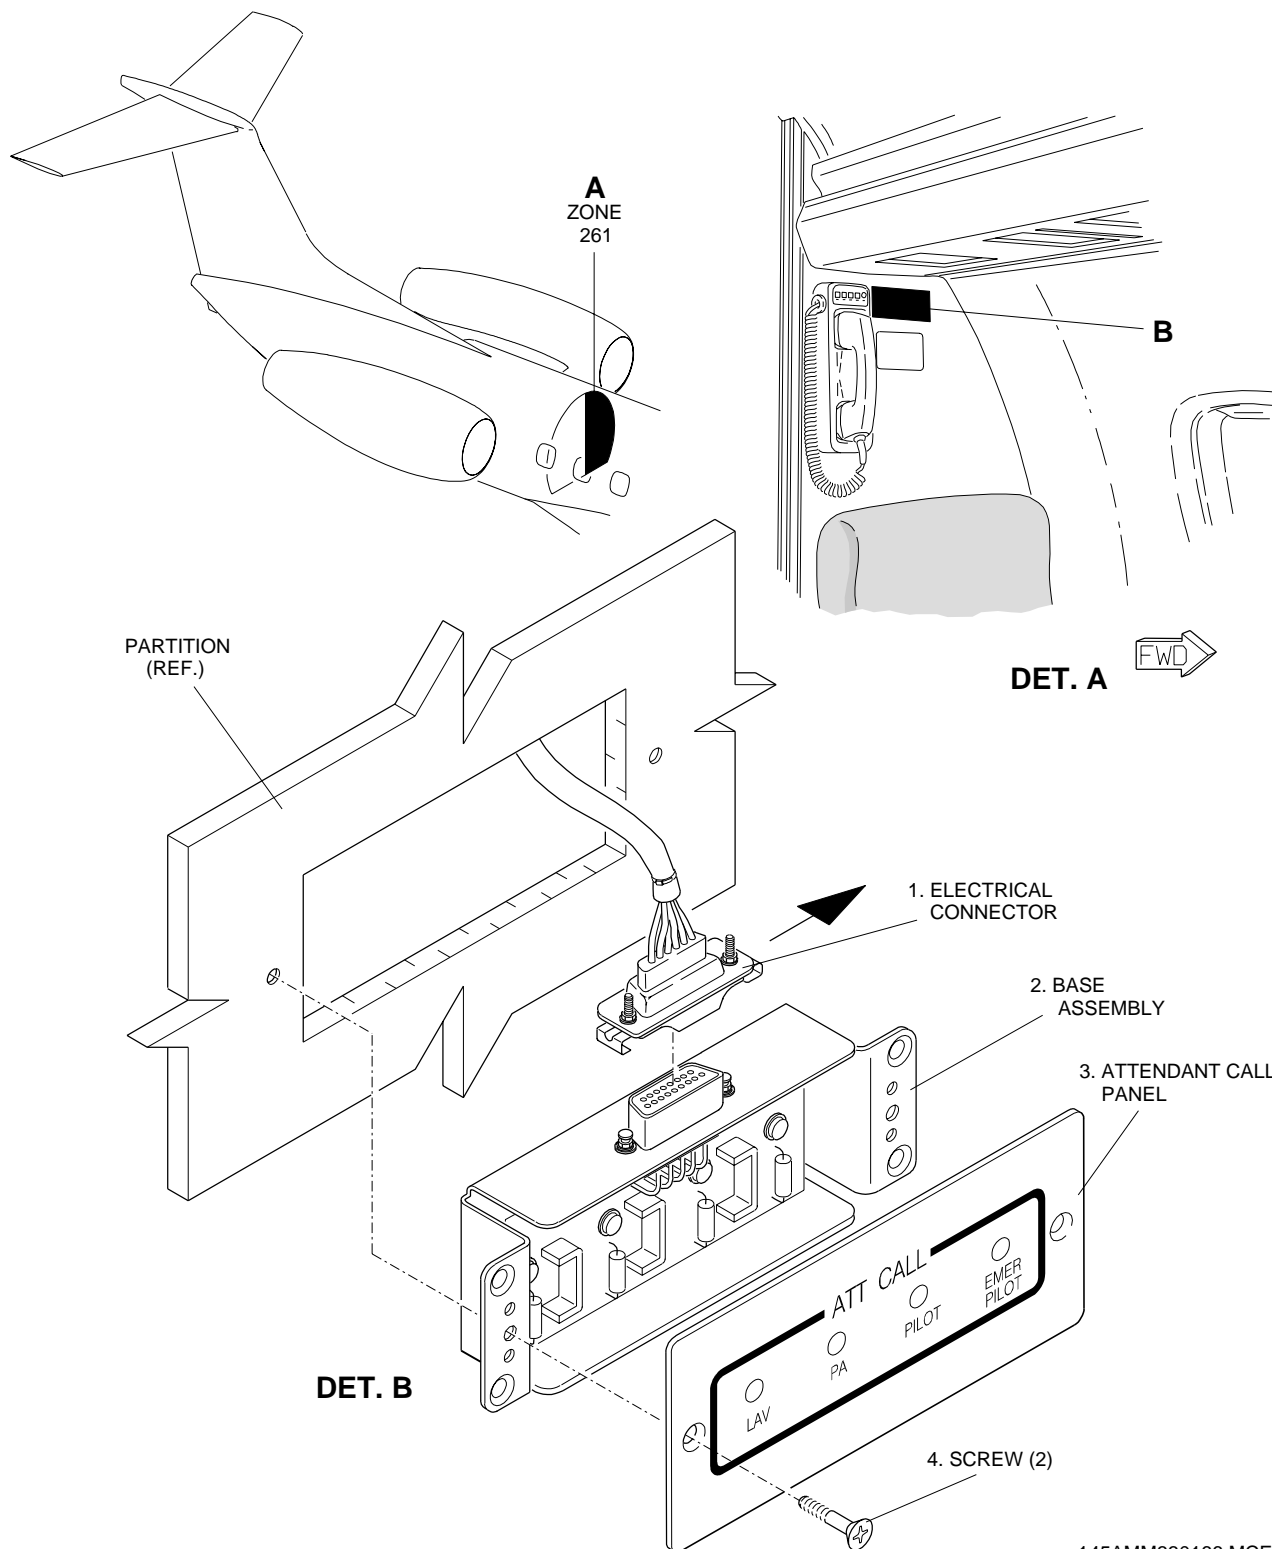

145AMM330166.MCE

EFFECTIVITY: AIRCRAFT FOR 16 PASSENGERS
Attendant-Call Panel Assembly - Removal/Installation
Figure 402

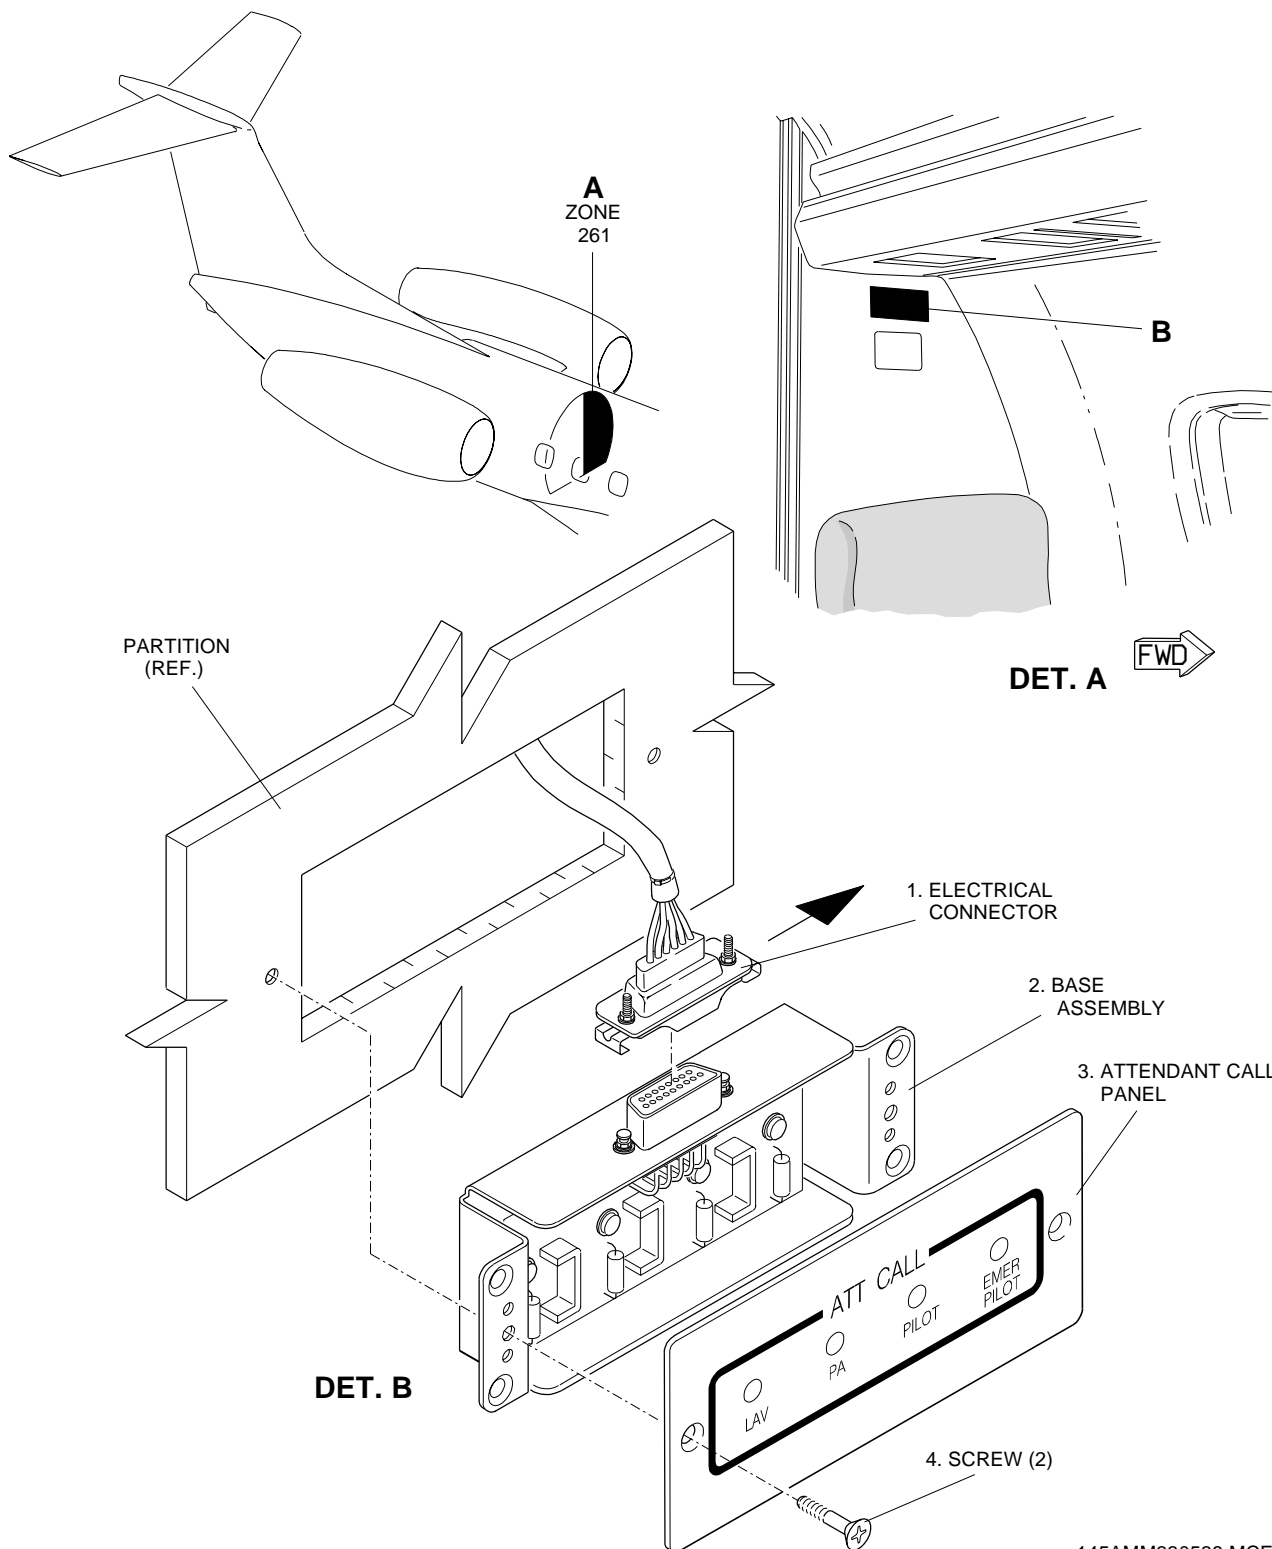

145AMM330538.MCE

TASK 33-25-07-400-801-A

EFFECTIVITY: ALL

3. ATTENDANT CALL-PANEL ASSEMBLY - INSTALLATION

A. General

(1) This task gives the procedures for the installation of the attendant-call panel assembly.

B. References

REFERENCE	DESIGNATION
AMM SDS 24-60-00/1	
AMM TASK 33-25-00-700-801-A/500	READING AND ATTENDANT CALL LIGHTS (1) - OPERATIONAL TEST

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
261		Toilet forward partition, LH

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

I. Installation (Figure 401) (Figure 402)

SUBTASK 420-002-A

- (1) Connect the electrical connector (1) to the base assembly (2).
- (2) Carefully put the base assembly (2) in its installation position.
- (3) Put the attendant call panel (3) in position.
- (4) Install the screws (4).

J. Follow-on

SUBTASK 842-002-A

- (1) On the RH electrical-power control/distribution box ([AMM SDS 24-60-00/1](#)), close the RDNG LT/ATTD CALL 3 circuit breaker and remove the DO-NOT-CLOSE tag from it (Location Tip: RB SHED DC BUS 2 - RDNG LT/ATTD CALL 3).
- (2) Do the Reading-and-Attendant-Call Lights test ([AMM TASK 33-25-00-700-801-A/500](#)).

