

FLAP SELECTOR LEVER - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the flap selector lever.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
27-53-03-000-801-A	FLAP SELECTOR LEVER - REMOVAL	ALL
27-53-03-400-801-A	FLAP SELECTOR LEVER - INSTALLATION	ALL

TASK 27-53-03-000-801-A

EFFECTIVITY: ALL

2. FLAP SELECTOR LEVER - REMOVAL

A. General

(1) This task gives the procedures to remove the flap selector lever.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

H. Preparation

SUBTASK 841-002-A

(1) Make sure that the aircraft is safe for maintenance.

(2) On the Circuit Breaker Panel, open the FLAP 1 and FLAP 2 circuit breakers and attach a DO-NOT-CLOSE tag to them.

I. Removal [\(Figure 401\)](#)

SUBTASK 020-002-A

(1) Loosen the bolt (2) to remove the flap selector lever (1) from the control pedestal (4).



(2) Disconnect the electrical connector (3).

(3) Remove the flap selector lever (1).

EFFECTIVITY: ALL

Flap Selector Lever - Removal/Installation

Figure 401

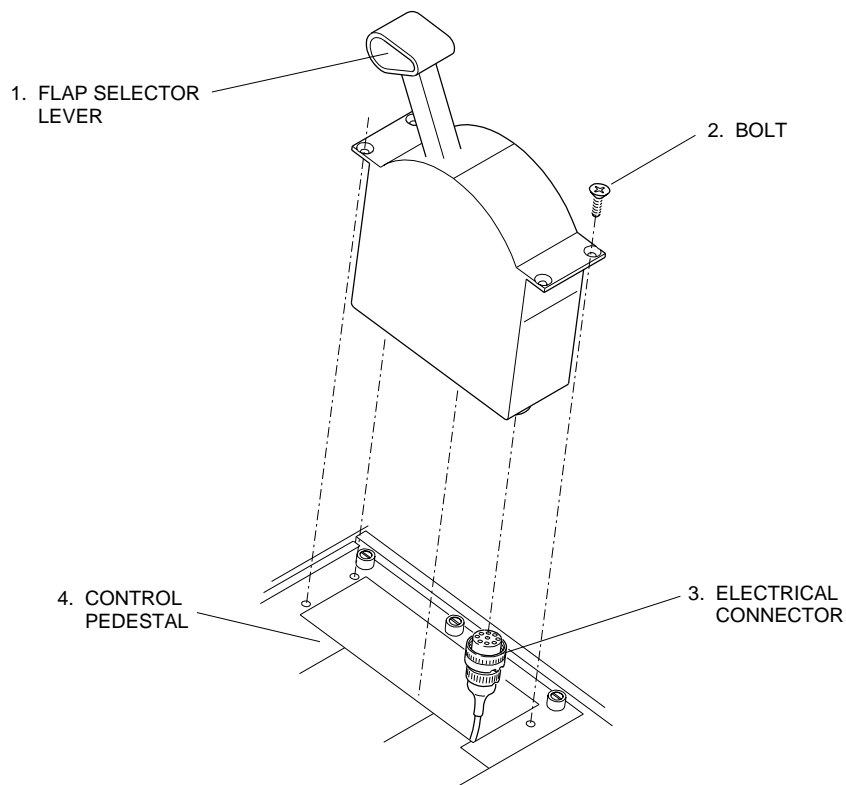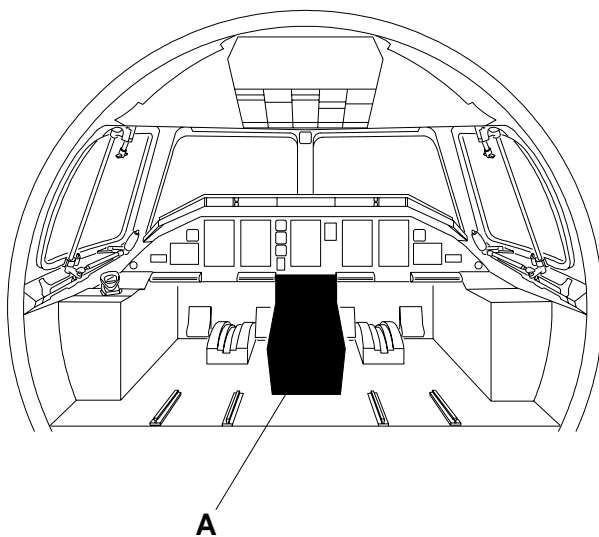

DET. A

145AMM270504.MCE

TASK 27-53-03-400-801-A

EFFECTIVITY: ALL

3. FLAP SELECTOR LEVER - INSTALLATION

A. General

(1) This task gives the procedures to install the flap selector lever.

B. References

REFERENCE	DESIGNATION
AMM TASK 27-53-00-700-802-A/500	-

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Connect the electrical connector (3).
- (2) Put the flap selector lever (1) on the control pedestal (4).
- (3) Tighten the bolt (2).

J. Follow-on

SUBTASK 842-002-A

- (1) On the Circuit Breaker Panel, close the FLAP 1 and FLAP 2 circuit breakers and remove the DO-NOT-CLOSE tag from them.
- (2) Do the operational check of the flap control system (AMM TASK 27-53-00-700-802-A/500).