

COCKPIT UNDERFLOOR ACCESS HATCH - SERVICING

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to lubricate the Cockpit Underfloor Access Hatch.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

<i>TASK NUMBER</i>	<i>DESCRIPTION</i>	<i>EFFECTIVITY</i>
12-21-06-600-801-A	COCKPIT UNDERFLOOR ACCESS HATCH - LUBRICATION	ALL

TASK 12-21-06-600-801-A

EFFECTIVITY: ALL

2. COCKPIT UNDERFLOOR ACCESS HATCH - LUBRICATION

A. General

- (1) This procedure helps the door internal mechanism to operate correctly and the door to move freely. This makes the opening/closing operations easier.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-01/100	-

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
123	123BL	Area below cockpit floor - LH

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Brush	To lubricate the cockpit underfloor access hatch	AR

F. Consumable Materials

SPECIFICATION (BRAND)	DESCRIPTION	QTY
MIL-G-23827	Grease	AR

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	On the cockpit underfloor access hatch

I. Preparation

SUBTASK 841-002-A

- (1) Remove cockpit underfloor access hatch 123BL (AMM MPP 06-41-01/100).

J. Lubrication (Figure 301)

SUBTASK 610-002-A

- (1) Lubricate the latch pins.

K. Follow-on


SUBTASK 842-002-A

- (1) Install cockpit underfloor access hatch 123BL (AMM MPP 06-41-01/100).

EFFECTIVITY: ALL

Lubrication of Cockpit Underfloor Access Hatch

Figure 301

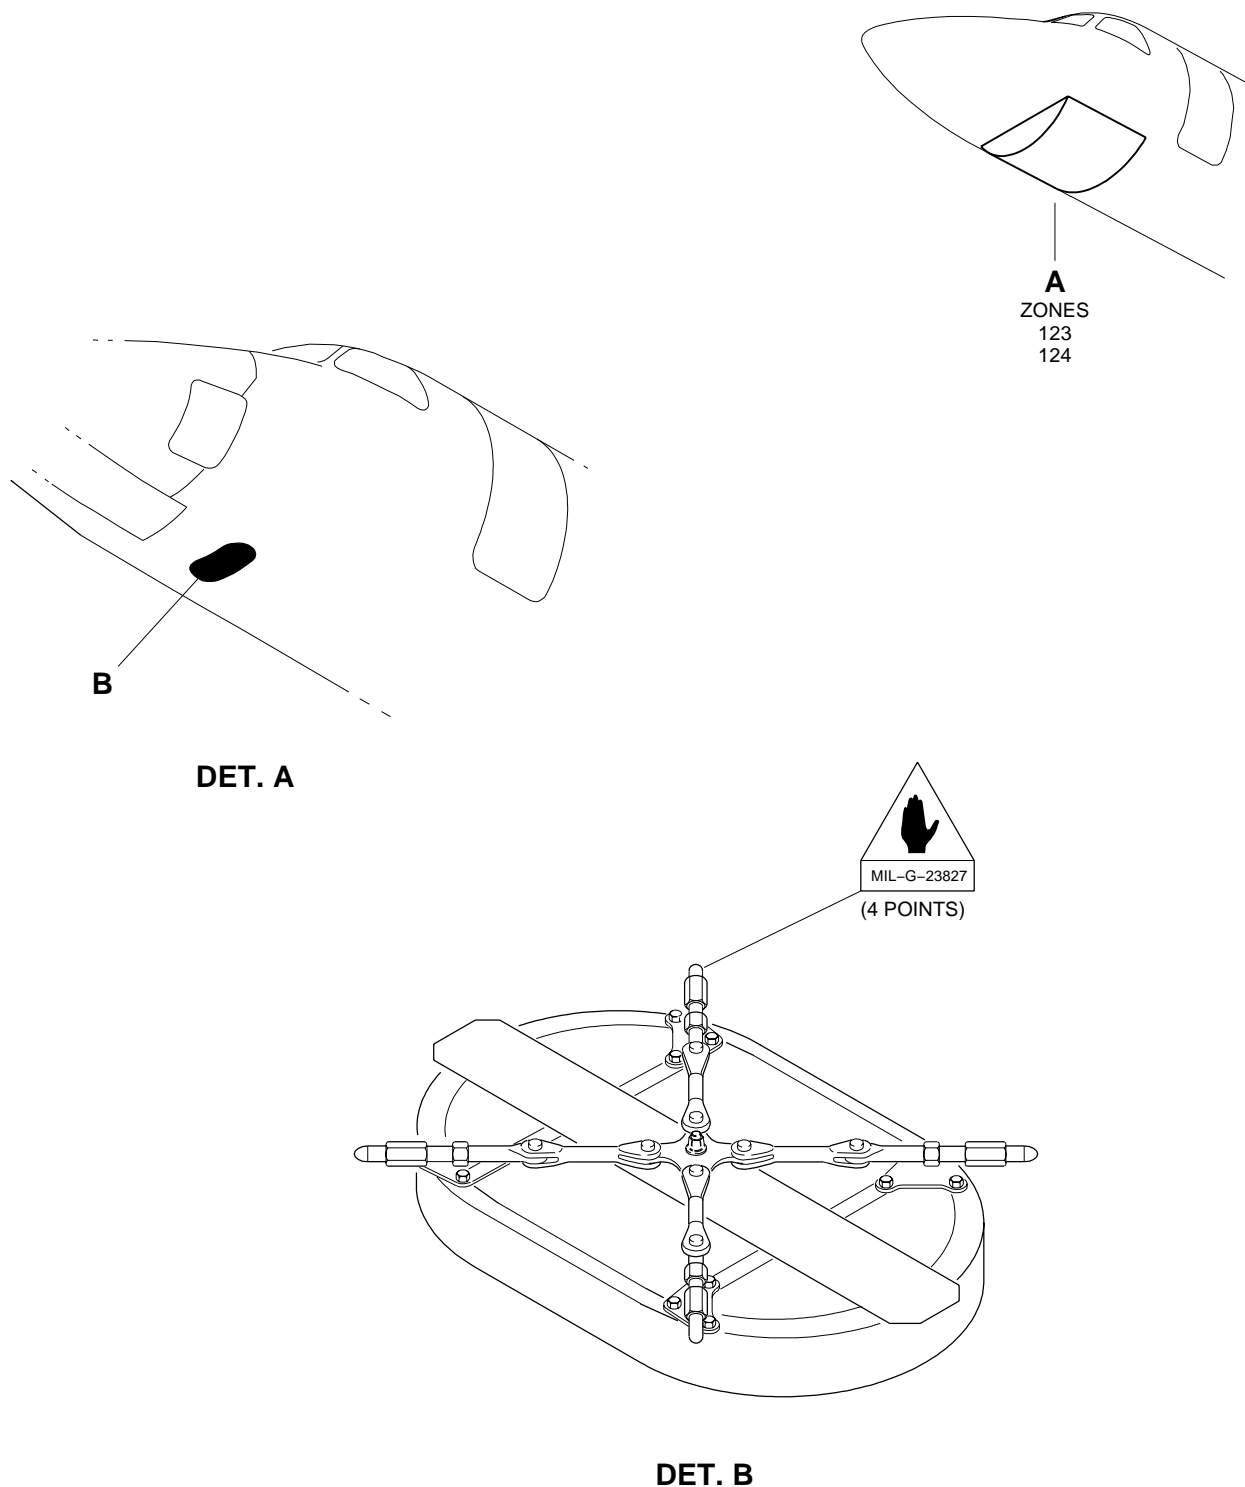

EM145AMM120192A.DGN