

## BAGGAGE COMPARTMENT FAN - REMOVAL/INSTALLATION

*EFFECTIVITY: CLASS-C BAGGAGE COMPARTMENT*

1. General

- A. This section gives the procedures to remove and install the baggage compartment fan.
- B. The baggage compartment fan is installed at the aft pressure bulkhead partition.
- C. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
21-27-01-000-801-A	BAGGAGE COMPARTMENT FAN - REMOVAL	CLASS-C BAGGAGE COMPARTMENT
21-27-01-400-801-A	BAGGAGE COMPARTMENT FAN - INSTALLATION	CLASS-C BAGGAGE COMPARTMENT

TASK 21-27-01-000-801-A

EFFECTIVITY: CLASS-C BAGGAGE COMPARTMENT

## 2. BAGGAGE COMPARTMENT FAN - REMOVAL

### A. General

(1) This task gives the procedures to remove the baggage compartment fan.

### B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-01/100	-

### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
272	272DR	Rear fuselage II

### D. Tools and Equipment

Not Applicable

### E. Auxiliary Items

Not Applicable

### F. Consumable Materials

Not Applicable

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Aft electronic compartment

### I. Preparation

#### SUBTASK 841-002-A

(1) On the circuit breaker panel, open the MISCELLANEOUS/BAGGAGE - RECIRC FAN circuit breaker and attach a DO-NOT-CLOSE tag to it.

(2) Open access panel 272DR (AMM MPP 06-41-01/100).

### J. Removal (Figure 401)

#### SUBTASK 020-002-A

(1) Disconnect the electrical connector (4).


(2) Remove the screws (3) and washers (2).

(3) Remove the baggage compartment fan (1).

**EFFECTIVITY: CLASS-C BAGGAGE COMPARTMENT**

Baggage Compartment Fan - Removal/Installation

Figure 401

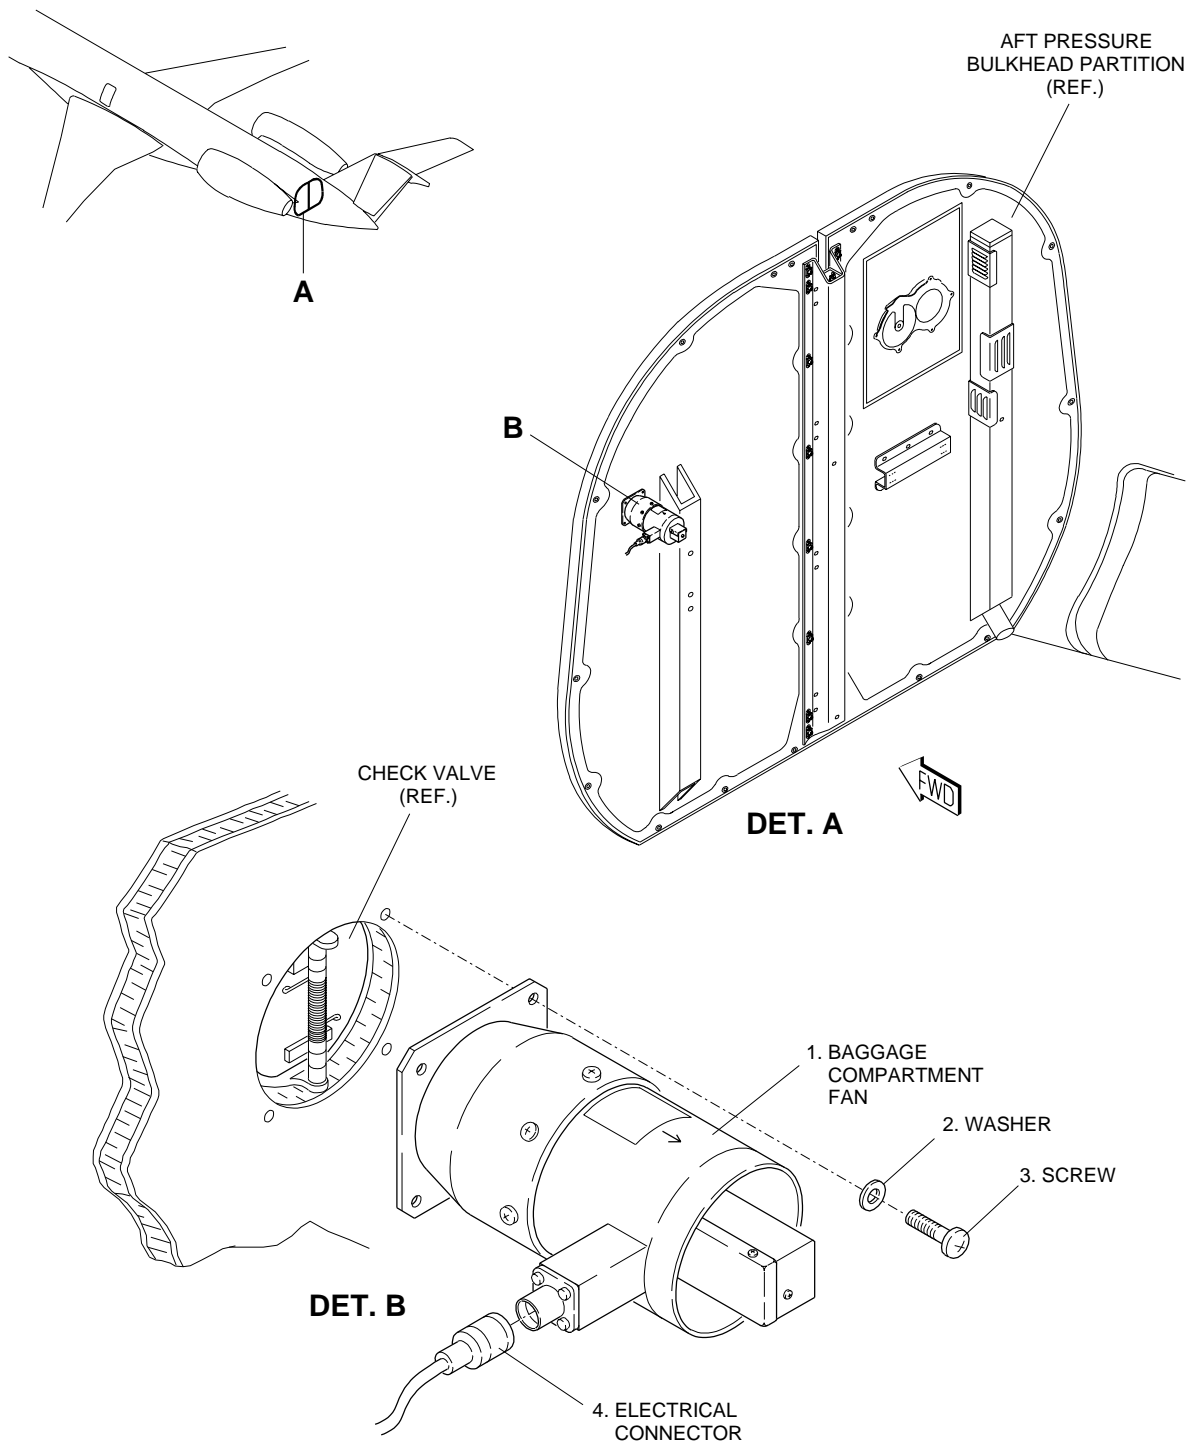

145AMM210182.MCE C

TASK 21-27-01-400-801-A

EFFECTIVITY: CLASS-C BAGGAGE COMPARTMENT

### 3. BAGGAGE COMPARTMENT FAN - INSTALLATION

#### A. General

(1) This task gives the procedures to install the baggage compartment fan.

#### B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-01/100	-

#### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
272	272DR	Rear fuselage II

#### D. Tools and Equipment

Not Applicable

#### E. Auxiliary Items

Not Applicable

#### F. Consumable Materials

Not Applicable

#### G. Expandable Parts

Not Applicable

#### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Aft electronic compartment

#### I. Preparation

**SUBTASK 841-003-A**

(1) Make sure that the MISCELLANEOUS/BAGGAGE - RECIRC FAN circuit breaker is open and safetied.

#### J. Installation (Figure 401)

**SUBTASK 420-002-A**

- (1) Position the baggage compartment fan (1).
- (2) Install the washers (2) and screws (3).
- (3) Connect the electrical connector (4).

K. Follow-on

*SUBTASK 842-002-A*

- (1) On the circuit breaker panel, close the MISCELLANEOUS/BAGGAGE - RECIRC FAN circuit breaker and remove the DO-NOT-CLOSE tag from it.
- (2) Close access panel 272DR (AMM MPP 06-41-01/100).

