

ATTENDANT HANDSETS - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the attendant handset/cradle.
- B. The attendant handset/cradle is installed on the cockpit partition and, optionally, there is other attendant handset installed outside the LH forward partition of the toilet compartment.
- C. The two attendant handset/cradle are similar and the procedures in this section apply to the two attendant handset/cradle.
- D. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
23-31-03-000-801-A	ATTENDANT HANDSET/CRADLE - REMOVAL	AIRCRAFT WITH ATTENDANT HANDSET INSTALLED
23-31-03-400-801-A	ATTENDANT HANDSET/CRADLE - INSTALLATION	AIRCRAFT WITH ATTENDANT HANDSET INSTALLED

TASK 23-31-03-000-801-A

EFFECTIVITY: AIRCRAFT WITH ATTENDANT HANDSET INSTALLED

2. ATTENDANT HANDSET/CRADLE - REMOVAL

A. General

(1) This procedure gives the instructions to remove the attendant handset.

B. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
231		Cockpit partition, LH
261		Toilet forward partition, LH

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	In the passenger cabin

H. Preparation

SUBTASK 841-002-A

(1) On the cockpit ceiling, on the circuit breaker panel, open the PA circuit breaker and attach a DO-NOT-CLOSE tag to it (Location Tip: ESSENTIAL DC BUS 2/COMM/PA).

I. Removal [\(Figure 401\)](#) [\(Figure 402\)](#)


SUBTASK 020-002-A

- (1) Pull the attendant handset (2) off from the cradle (5).
- (2) Remove the screws (1).
- (3) Pull the cradle (5) and remove the screws (4) that attach the connector (3) to it.
- (4) Remove the cradle (5).

EFFECTIVITY: AIRCRAFT WITH ATTENDANT HANDSET INSTALLED


Cockpit Partition LH - Attendant Handset/Cradle - Removal/Installation

Figure 401

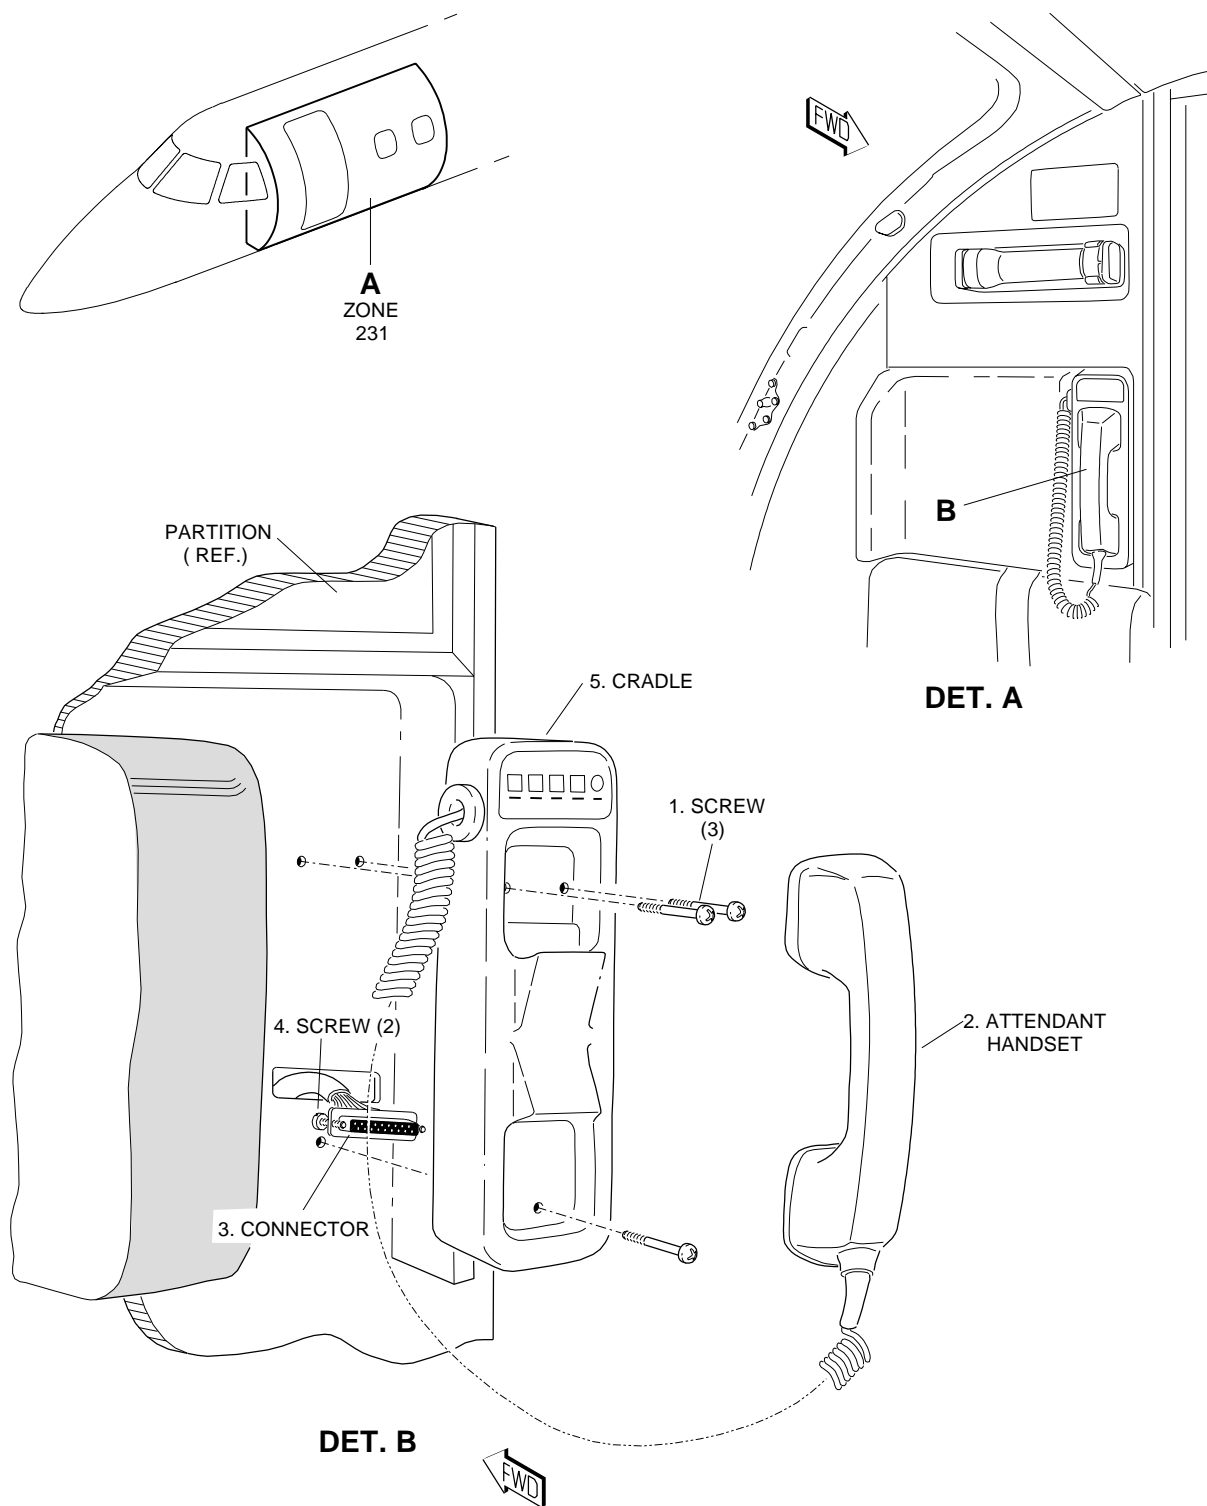

EM145AMM230129F.DGN

EFFECTIVITY: AIRCRAFT WITH THE OPTIONAL ATTENDANT HANDSET
Toilet Forward Partition LH - Attendant Handset/Cradle - Removal/Installation
Figure 402

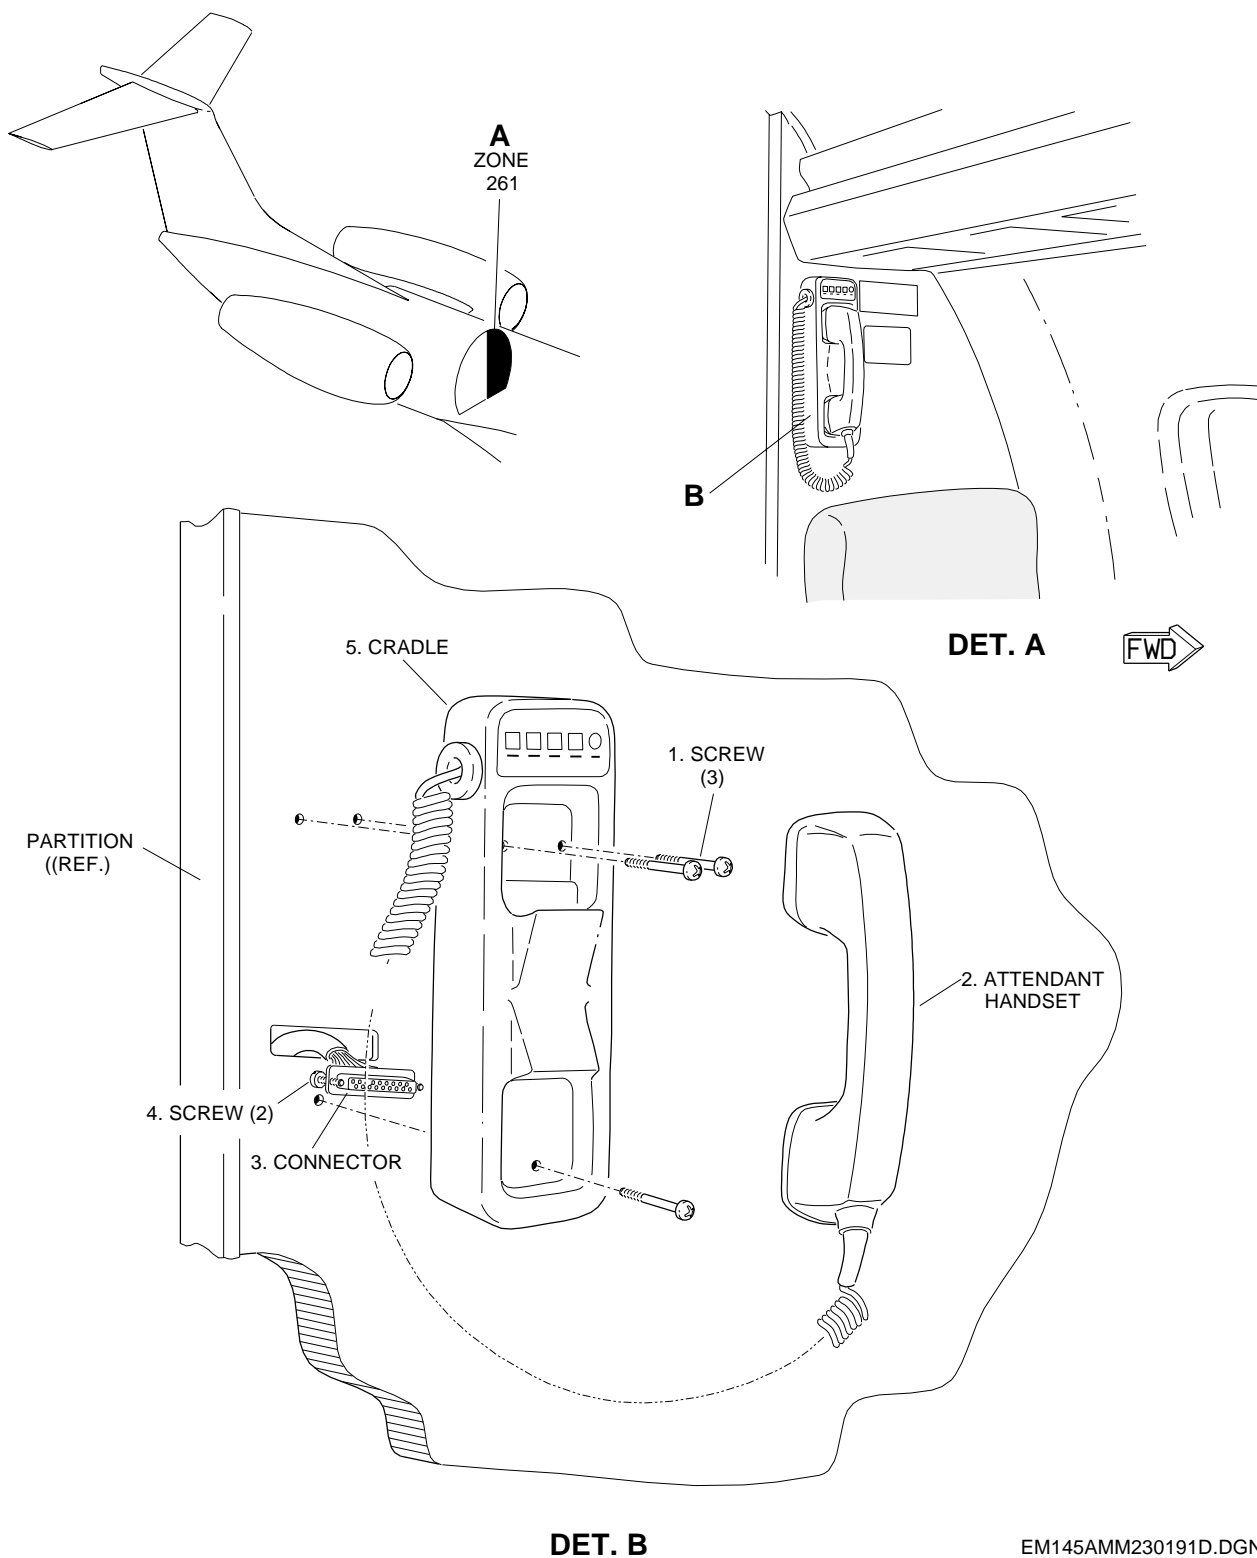

EM145AMM230191D.DGN

TASK 23-31-03-400-801-A

EFFECTIVITY: AIRCRAFT WITH ATTENDANT HANDSET INSTALLED

3. ATTENDANT HANDSET/CRADLE - INSTALLATION

A. General

(1) This procedure gives the instructions to install the attendant handset.

B. References

REFERENCE	DESIGNATION
AMM TASK 23-31-00-700-801-A/500	PASSENGER ADDRESS & CABIN INTERPHONE SYSTEM - OPERATIONAL TEST
AMM TASK 23-31-00-700-802-A/500	CABIN INTERPHONE EMER/BACKUP MODE - OPERATIONAL CHECK
AMM TASK 23-31-00-700-803-A/500	PASSENGER CABIN LOUDSPEAKER - OPERATIONAL CHECK
AMM TASK 23-31-00-820-801-A/500	PASSENGER-ADDRESS AUDIO VOLUME AND SENSITIVITY - ADJUSTMENT

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
231		Cockpit partition, LH
261		Toilet forward partition, LH

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	In the passenger cabin

I. Installation (Figure 401) (Figure 402)

SUBTASK 420-002-A

(1) Put the connector (3) in its installation position and install the screws (4) that attach the connector (3) to the cradle (5).

(2) Put the cradle (5) in its installation position.

- (3) Install the screws (1) that attach the cradle (5) to the partition.
- (4) Hang the attendant handset (2) up.

J. Follow-on

SUBTASK 842-002-A

- (1) On the cockpit ceiling, on the circuit breaker panel, close the PA circuit breaker and remove the DO-NOT-CLOSE tag from it (Location Tip: ESSENTIAL DC BUS 2/COMM/PA).
- (2) Do the passenger address & cabin interphone system operational test ([AMM TASK 23-31-00-700-801-A/500](#)).
- (3) Do the cabin interphone EMERG/BACKUP mode operational check ([AMM TASK 23-31-00-700-802-A/500](#)).
- (4) Do the passenger cabin loudspeaker operational check ([AMM TASK 23-31-00-700-803-A/500](#)).
- (5) Do the passenger-address audio volume and sensitivity adjustment ([AMM TASK 23-31-00-820-801-A/500](#)).