

## CHECK VALVE - SERVICING

*EFFECTIVITY: ALL*

### 1. General

- A. The two check valves are installed to the forward electronic-compartment exhaust hoses (between frames 5 and 6). The lubrication procedure is applicable to the two check valves.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
21-26-06-600-801-A	CHECK VALVE - LUBRICATION	ALL

TASK 21-26-06-600-801-A

EFFECTIVITY: ALL

## 2. CHECK VALVE - LUBRICATION

### A. General

(1) This task gives the procedures to lubricate the check valve.

### B. References

REFERENCE	DESIGNATION
<a href="#">AMM TASK 21-26-06-000-801-A/400</a>	CHECK VALVE - REMOVAL
<a href="#">AMM TASK 21-26-06-400-801-A/400</a>	CHECK VALVE - INSTALLATION

### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
113	113CZ	Nose-landing-gear compartment

### D. Tools and Equipment

Not Applicable

### E. Auxiliary Items

Not Applicable

### F. Consumable Materials

SPECIFICATION (BRAND)	DESCRIPTION	QTY
Molykote DC-33	Grease, light consistency	AR

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Forward electronic compartment

### I. Preparation

**SUBTASK 841-002-A**

(1) Remove the check valve ( [AMM TASK 21-26-06-000-801-A/400](#) ).

### J. Lubricate the Forward Electronic Compartment Check Valve (Figure 301)

**SUBTASK 640-002-A**

(1) Remove the screws (1), washers (2) and nuts (3) to disassemble the check valve.

(2) Lubricate the shaft of the flap-type check valve (4) with Molykote DC-33 light grease.


(3) Install the screws (1), washers (2) and nuts (3) to assemble the check valve.

K. Follow-on

*SUBTASK 842-002-A*

(1) Install the check valve ( [AMM TASK 21-26-06-400-801-A/400](#) ).

**EFFECTIVITY: ALL**  
Check Valve - Lubrication  
Figure 301

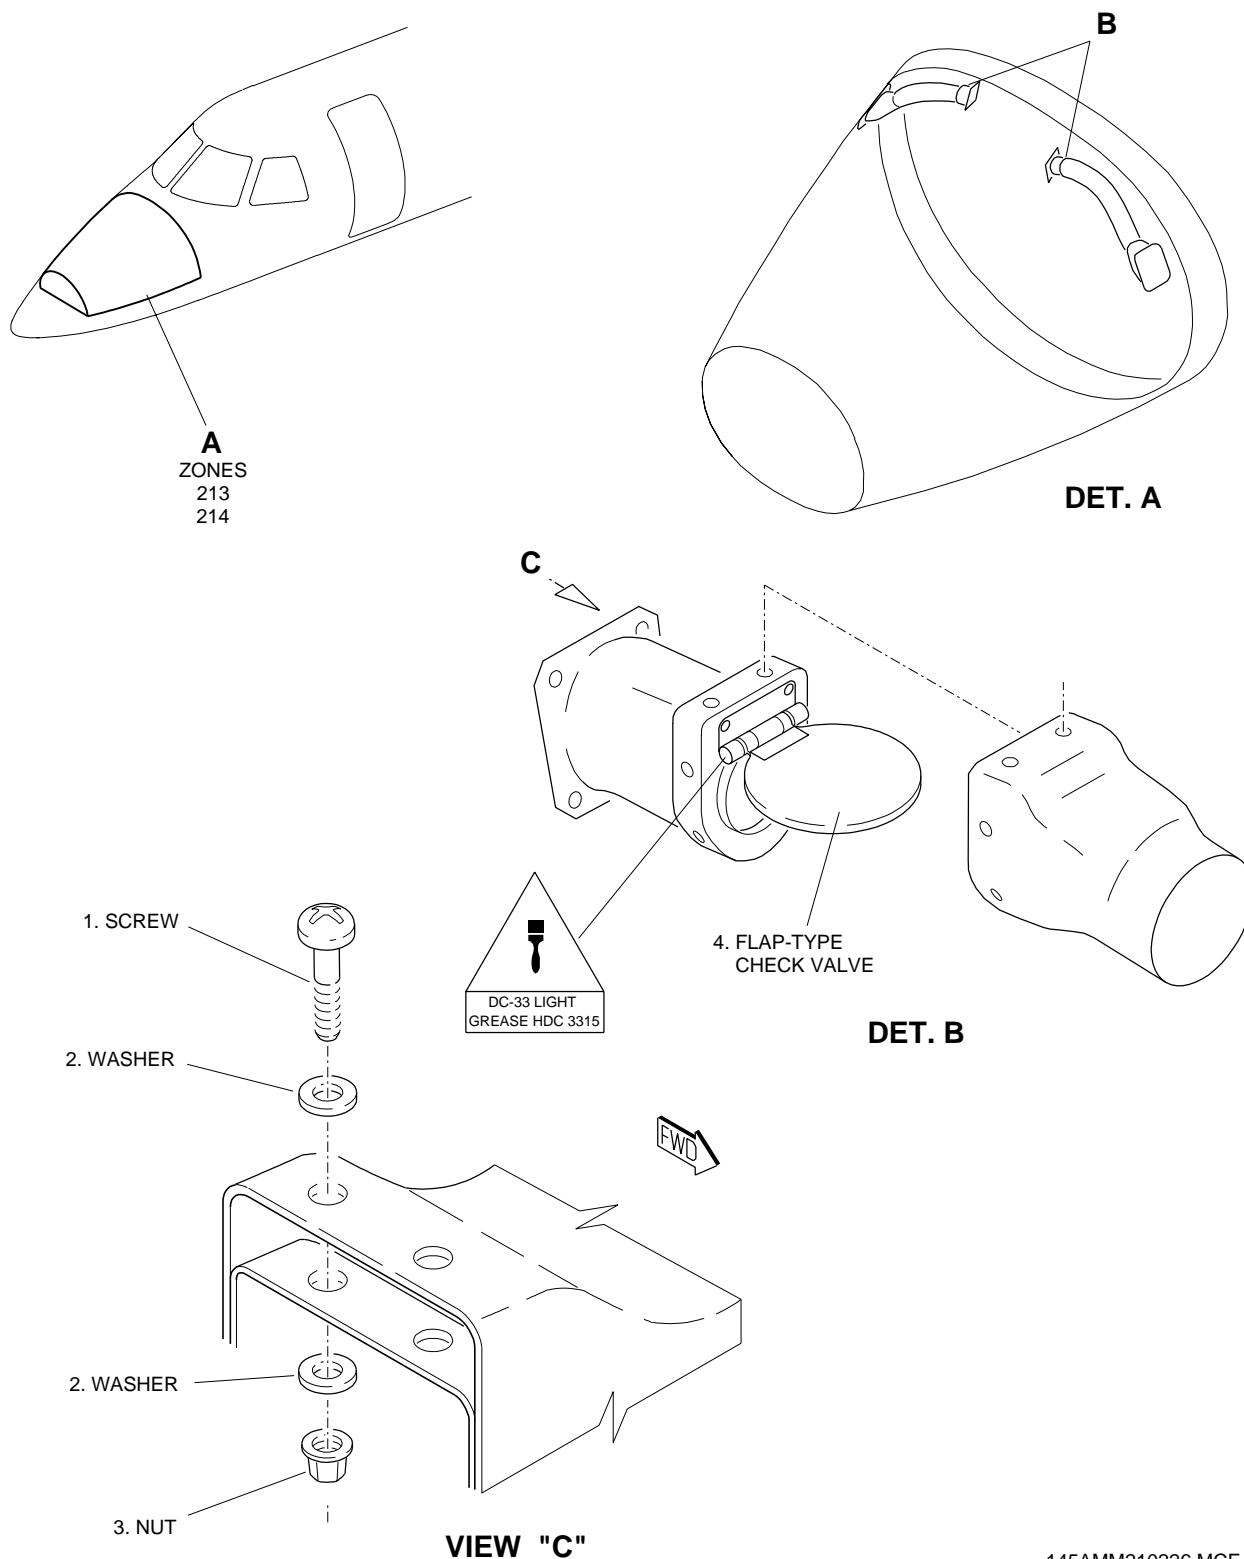

145AMM210226.MCE A