

ESCAPE ROPE - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove/install the escape ropes.
- B. The escape ropes are installed in the cockpit, at zones 225 and 226.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-60-07-000-801-A	ESCAPE ROPE - REMOVAL	ALL
25-60-07-400-801-A	ESCAPE ROPE - INSTALLATION	ALL

TASK 25-60-07-000-801-A

EFFECTIVITY: ALL

2. ESCAPE ROPE - REMOVAL

A. General

(1) This task gives the procedures to remove the escape ropes.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-03/100	- COMPONENT LOCATION

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
225	225BLC	Cockpit LH
226	226BRC	Cockpit RH

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit RH/Cockpit LH

I. Removal ([Figure 401](#))

SUBTASK 020-002-A

- (1) **NOTE:** Do the same procedures to remove the escape ropes on the LH and RH sides of the cockpit.


Open the access panels 225BLC and/or the 226BRC to get the access to the escape ropes ([AMM MPP 06-41-03/100](#)).

- (2) Remove the bolt (1), washer (2) and bushing (4) that attach the escape rope (3).
- (3) Remove the escape rope (3).
- (4) Close the access panels 225BLC and/or the 226BRC ([AMM MPP 06-41-03/100](#)).

EFFECTIVITY: ALL

Escape Rope - Removal/Installation

Figure 401 - Sheet 1

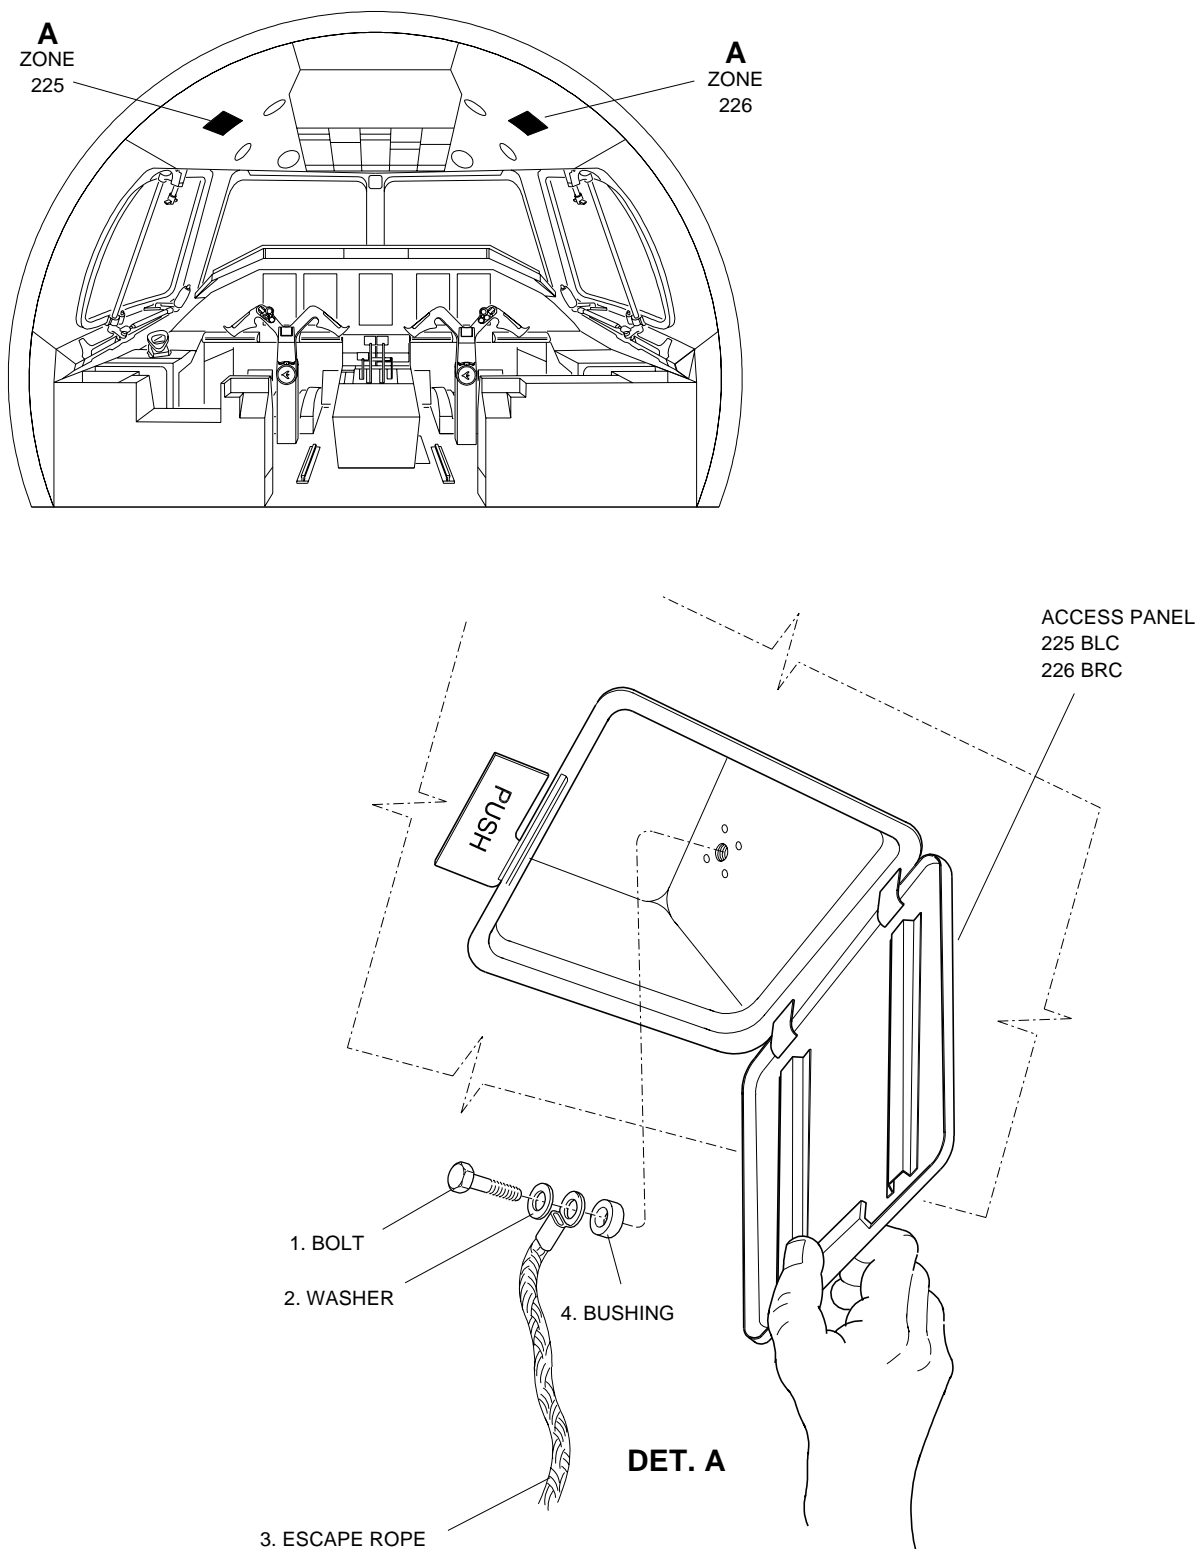


145AMM252439.MCE

EFFECTIVITY: ALL

Escape Rope - Removal/Installation

Figure 401 - Sheet 2

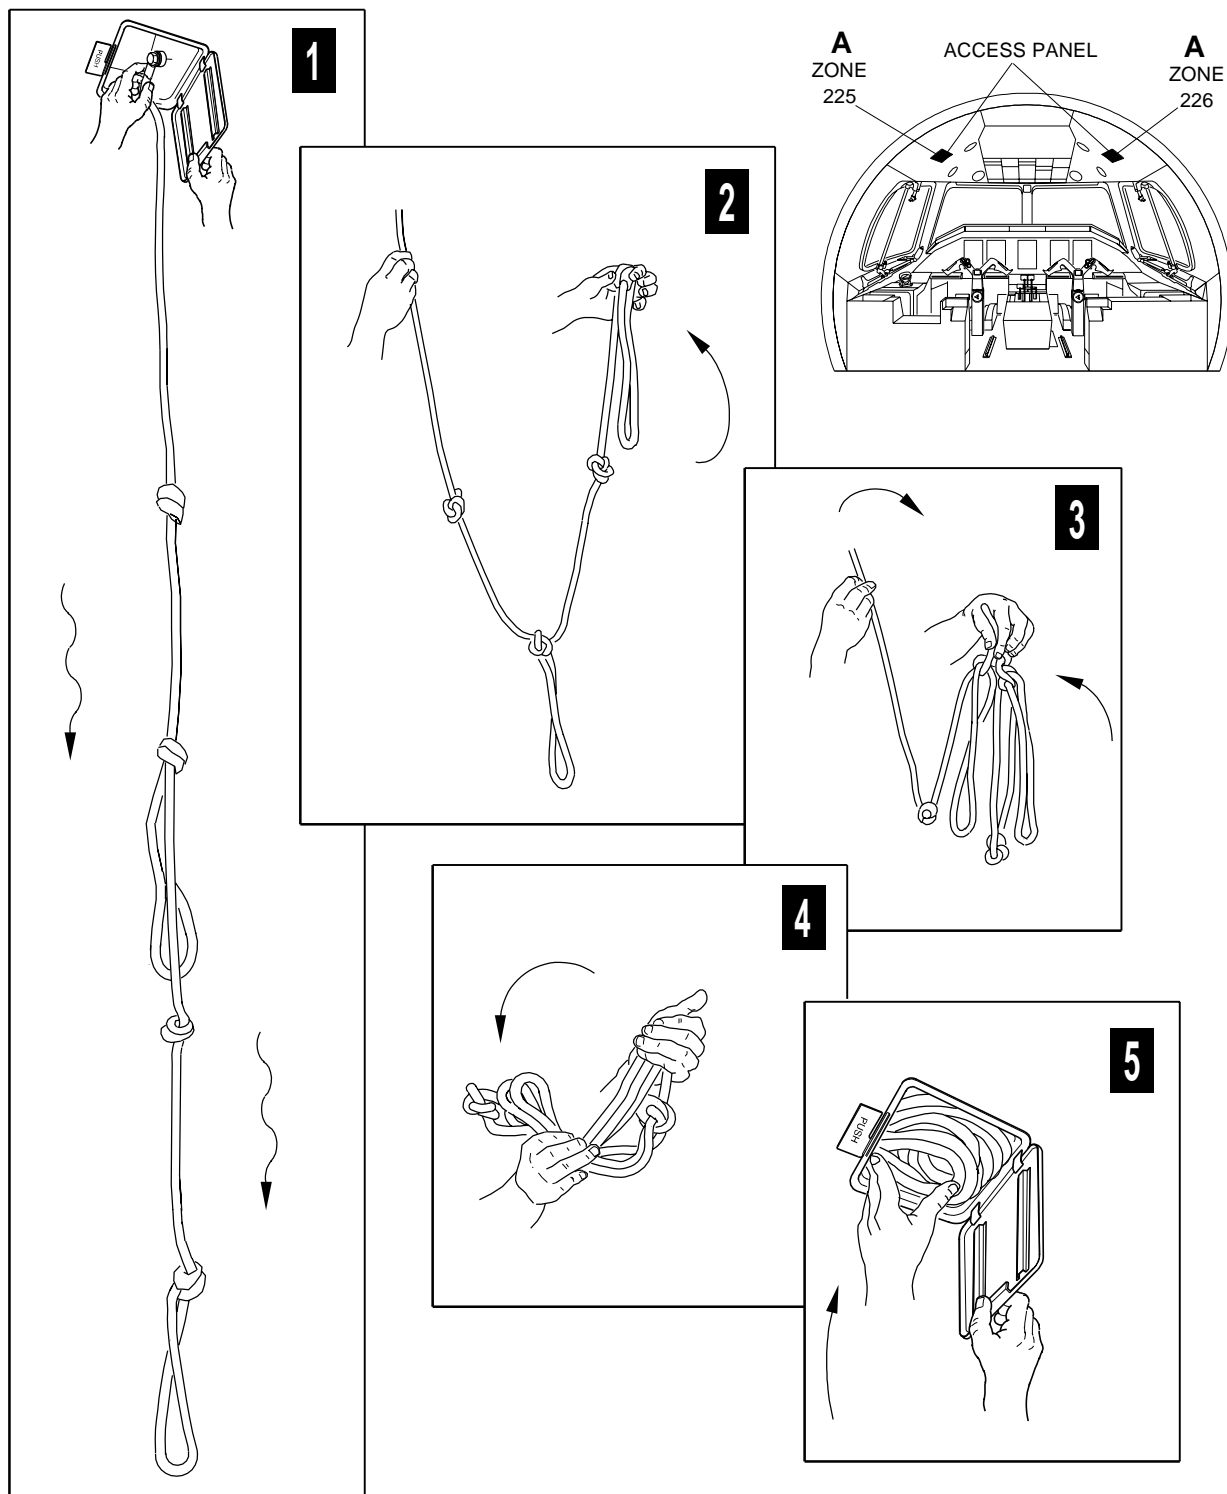

145AMM252600.MCE

TASK 25-60-07-400-801-A

EFFECTIVITY: ALL

3. ESCAPE ROPE - INSTALLATION

A. General

(1) This task gives the procedures to install the Escape Rope.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-03/100	- COMPONENT LOCATION

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
225	225BLC	Cockpit LH
226	226BRC	Cockpit RH

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit RH/Cockpit LH

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) **NOTE:** Do the same procedures to install the escape ropes on the LH and RH sides of the cockpit.

Open the access panels 225BLC and/or the 226BRC to get the access to the escape ropes ([AMM MPP 06-41-03/100](#)).

- (2) Tighten the bolt (1), washer (2) and bushing (4) that attach the escape rope (3).
- (3) Arrange the escape rope as shown in steps 1 thru 4. Keep it in the cockpit housing as shown in step 5.
- (4) Close the access panels 225BLC and/or the 226BRC ([AMM MPP 06-41-03/100](#)).

