

BAGGAGE DOOR WARNING - ADJUSTMENT/TEST

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to do a check of the baggage-door caution message.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
52-76-00-700-801-A ◆	BAGGAGE DOOR WARNING MESSAGE - OPERATIONAL CHECK	ALL

TASK 52-76-00-700-801-A

EFFECTIVITY: ALL

2. BAGGAGE DOOR WARNING MESSAGE - OPERATIONAL CHECK

A. General

- (1) The function of this check is to make sure that the caution message related to the baggage door is shown on the EICAS display.

B. References

REFERENCE	DESIGNATION
AMM SDS 23-41-00/1	
AMM TASK 20-40-01-860-801-A/200	ENERGIZATION OF THE AIRCRAFT WITH AN EXTERNAL POWER SOURCE

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
813		Baggage door

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	In the baggage compartment (rear fuselage)
1	Helps the other technician	Does the check of the EICAS display in the cockpit

I. Preparation

SUBTASK 841-002-A

- (1) Connect the ramp interphone to permit communication between the mechanics ([AMM SDS 23-41-00/1](#)).
- (2) Energize the aircraft ([AMM TASK 20-40-01-860-801-A/200](#)).
- (3) Make sure that these doors are closed and locked:
 - Forward Electronic-Compartment Access-Hatch.

- Rear Electronic-Compartment Access-Hatch.
- Cockpit Underfloor Access Hatch.
- Fueling Panel Door.
- Passenger-Cabin Escape-Hatches.
- Service Door.
- Main Door.

J. Operationally Check Baggage Door Warning Message ([Figure 501](#))

SUBTASK 710-002-A

- (1) Do the operational check as follows:

NOTE: There is a delay of 4 to 5 seconds between the locking of the door and the indications on the EICAS display.

- (a) Fully close the baggage door and, before you lock it, monitor the indication on the EICAS display.

Result:

- 1 The EICAS display shows the caution message:

- BAGGAGE DOOR OPN.

The MFD shows these indications:

- DOOR OPEN (in red).

- A red square that shows the baggage door.

- (b) Lock the baggage door and monitor the EICAS display.

Result:

- 1 On the EICAS display, the caution message below goes out of view:

- BAGGAGE DOOR OPN.

On the MFD, the indications below go out of view:

- DOOR OPEN.

- The red square that shows the baggage door becomes green.

K. Follow-on




SUBTASK 842-002-A

- (1) Disconnect the ramp interphone ([AMM SDS 23-41-00/1](#)).
- (2) Deenergize the aircraft ([AMM TASK 20-40-01-860-801-A/200](#)).

EFFECTIVITY: ALL

Baggage Door - Warning Message

Figure 501

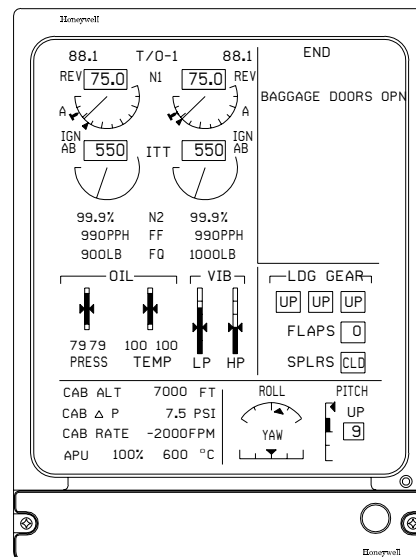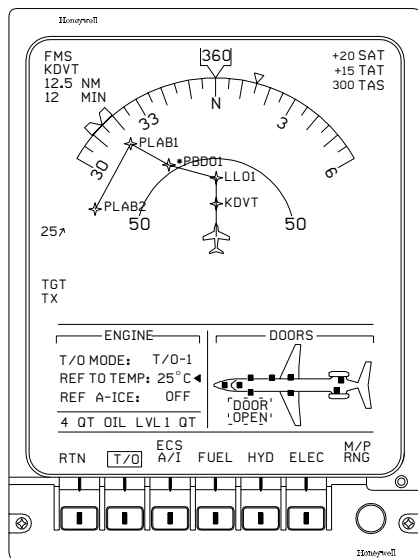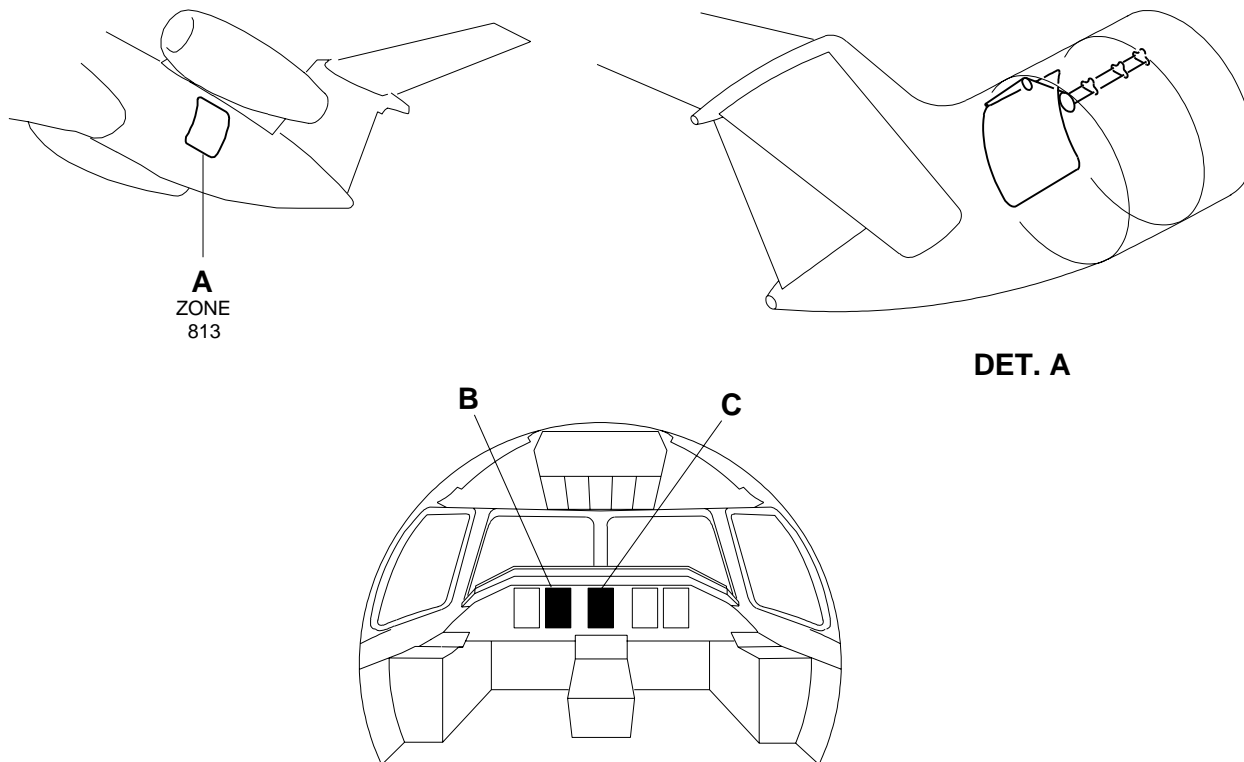

145AMM520067.MCE A