

IGNITER PLUG - INSPECTION/CHECK

EFFECTIVITY: AIRCRAFT WITH APU T-62T-40C14

1. General

- A. This section gives the procedures to do a detailed inspection on the APU igniter plug.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
49-44-03-200-801-A ◆	IGNITER PLUG - INSPECTION	AIRCRAFT WITH APU T-62T-40C14

TASK 49-44-03-200-801-A

EFFECTIVITY: AIRCRAFT WITH APU T-62T-40C14

2. IGNITER PLUG - INSPECTION

A. General

- (1) To do this task, refer to the instructions given in the latest revision of Hamilton Sundstrand Engine Cleaning, Inspection, and Repair Manual T-62T-40C14 (P/N 4504112), 49-42-01.

B. References

REFERENCE	DESIGNATION
AMM MPP 49-44-03/400	- REMOVAL/INSTALLATION
Hamilton Sundstrand Engine Cleaning, Inspection, and Repair Manual T-62T-40C14 (P/N 4504112), 49-42-01	-

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
313		APU Cowling

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Workstand	To get access to the APU work area	1

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	APU work area

I. Preparation

SUBTASK 841-002-A

WARNING: THE IGNITION SYSTEM VOLTAGE IS DANGEROUSLY HIGH AND CAN KILL OR CAUSE INJURY TO THE PERSONS. MAKE SURE THAT THE IGNITION SYSTEM IS SET TO OFF FOR A MINIMUM OF SIX (6) MINUTES, BEFORE YOU START THE WORK ON THE IGNITION SYSTEM COMPONENTS.

- (1) On the circuit breaker panel, open this circuit breaker and attach DO-NOT-CLOSE tag to it:

– APU FUEL SOV.

- (2) On the left power control and distribution box, open the APU GEN START circuit breaker and attach DO-NOT-CLOSE tag to it.
- (3) Remove the igniter plug ([AMM MPP 49-44-03/400](#)).

J. Inspect (Detailed Inspection) Igniter Plug (Erosion/Crack/Deterioration) ([Figure 601](#))

SUBTASK 220-002-A

- (1) Do a detailed inspection on the igniter plug for erosion, cracks or deterioration. Refer to the latest revision of Hamilton Sundstrand Engine Cleaning, Inspection, and Repair Manual T-62T-40C14 (P/N 4504112), 49-42-01.

K. Follow-on


SUBTASK 842-002-A

- (1) Install the igniter plug ([AMM MPP 49-44-03/400](#)).
- (2) On the circuit breaker panel, remove the DO-NOT-CLOSE tag and close this circuit breaker:
 - APU FUEL SOV.
- (3) On the left power control and distribution box, remove the DO-NOT-CLOSE tag and close the APU GEN START circuit breaker.

EFFECTIVITY: AIRCRAFT WITH APU T-62T-40C14

Igniter Plug - Component Location

Figure 601

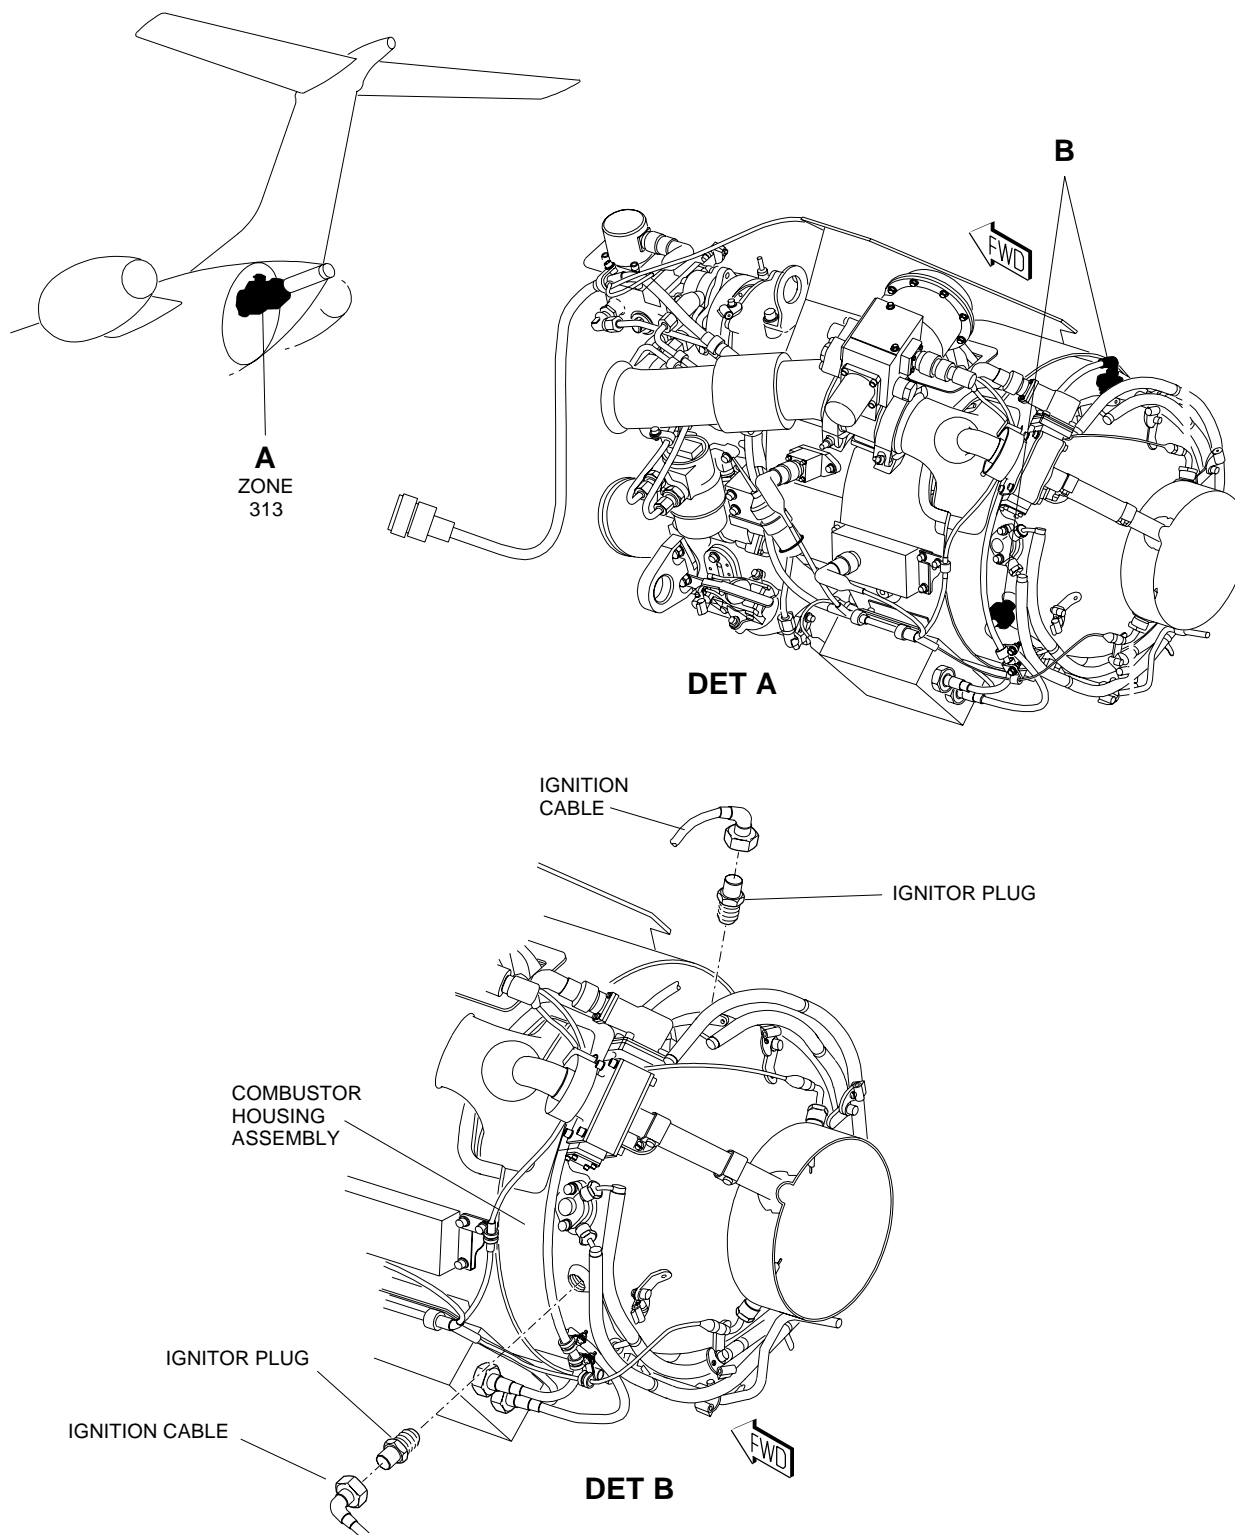

145AMM490310.MCE