

SERVICE-DOOR EMERGENCY LIGHT - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove/install the service-door emergency-light assembly and its lamp.
- B. The service-door emergency light is installed in the service-door ceiling panel and illuminates the exit area in an emergency condition.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
33-50-09-000-801-A	SERVICE-DOOR EMERGENCY-LIGHT LAMP - REMOVAL	ALL
33-50-09-400-801-A	SERVICE-DOOR EMERGENCY-LIGHT LAMP - INSTALLATION	ALL
33-50-09-000-802-A	SERVICE-DOOR EMERGENCY-LIGHT ASSEMBLY - REMOVAL	ALL
33-50-09-400-802-A	SERVICE-DOOR EMERGENCY-LIGHT ASSEMBLY - INSTALLATION	ALL

TASK 33-50-09-000-801-A

EFFECTIVITY: ALL

2. SERVICE-DOOR EMERGENCY-LIGHT LAMP - REMOVAL

A. General

(1) This task gives the procedures to remove the service-door emergency-light lamp.

B. Zones and Accesses

<i>ZONE</i>	<i>PANEL/DOOR</i>	<i>LOCATION</i>
234	234ARC	Passenger cabin (service-door ceiling panel)

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

<i>QTY</i>	<i>FUNCTION</i>	<i>PLACE</i>
1	Does the task	Passenger cabin (service-door ceiling panel)

H. Preparation

SUBTASK 841-002-A

(1) On the circuit breaker panel, open the EMERG circuit breaker and attach a DO-NOT-CLOSE tag to it (Location Tip: ESSENTIAL DC BUS 2/LIGHTS/EMERG).

I. Removal [\(Figure 401\)](#)

SUBTASK 020-002-A


(1) Carefully remove the lens (2).

(2) Remove the emergency lamp (3) from the light housing assembly (1).

EFFECTIVITY: ALL

Service-Door Emergency-Light Lamp - Removal/Installation

Figure 401

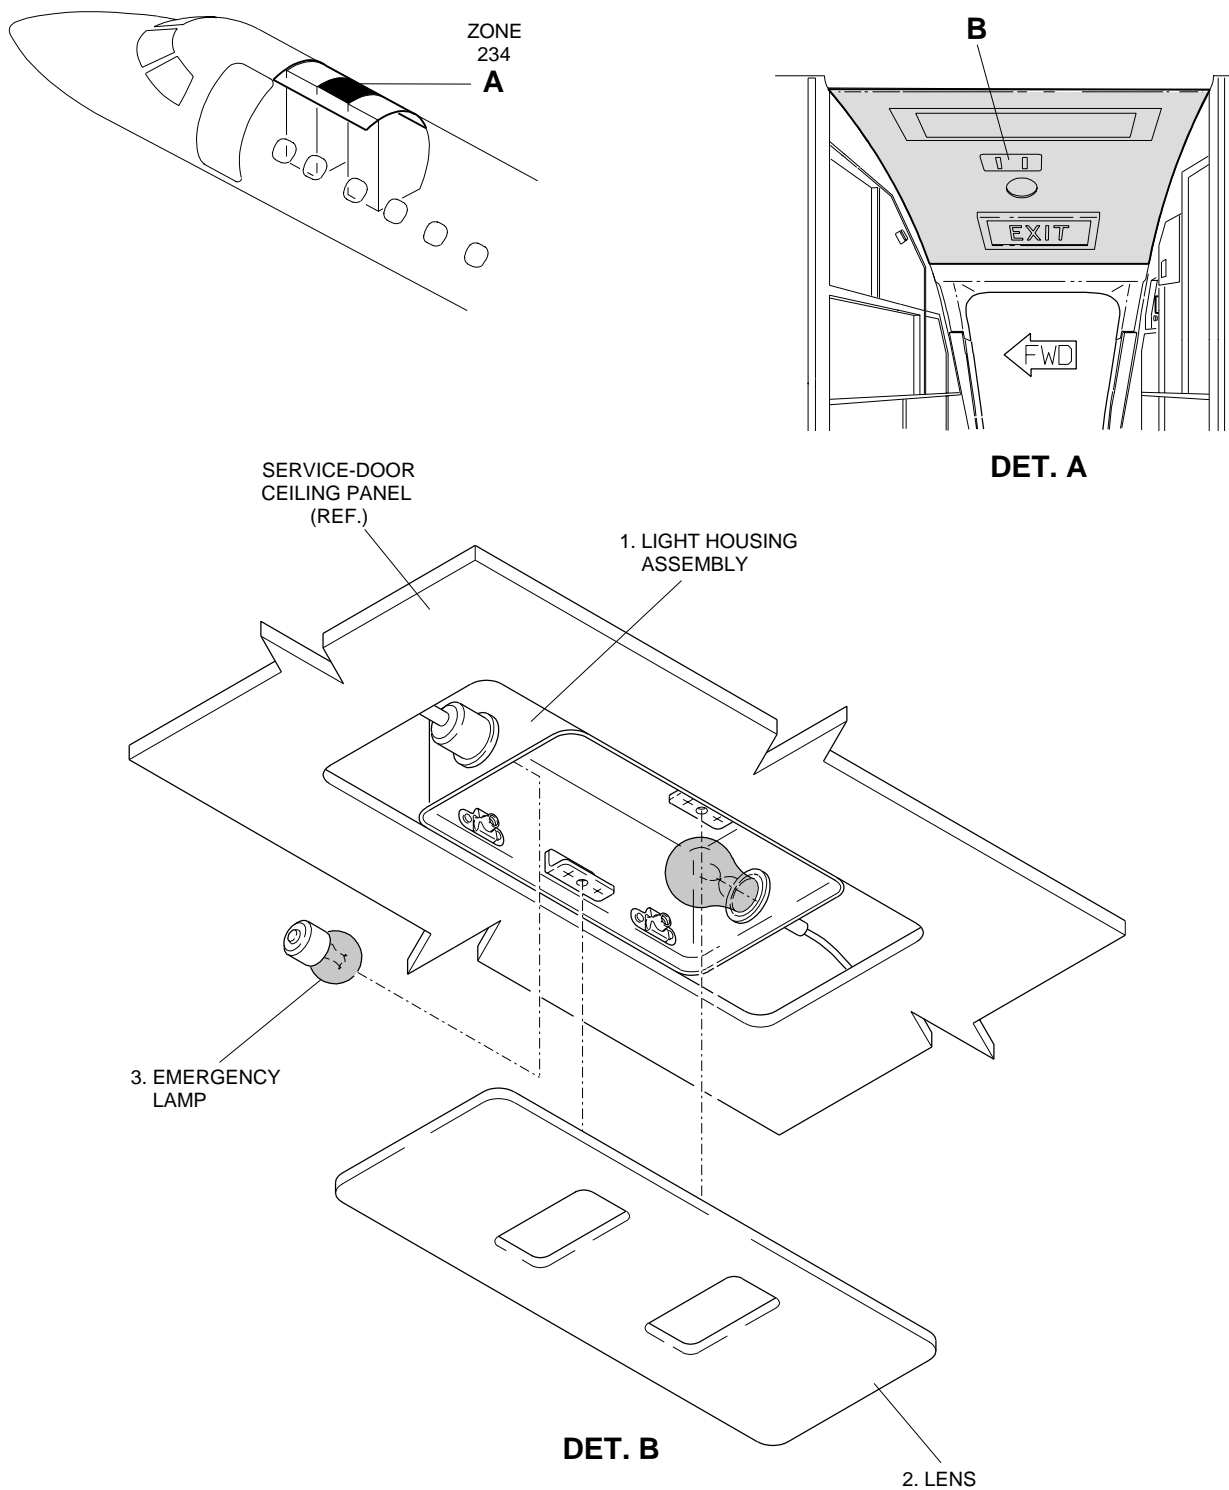

145AMM330179.MCE

TASK 33-50-09-400-801-A

EFFECTIVITY: ALL

3. SERVICE-DOOR EMERGENCY-LIGHT LAMP - INSTALLATION

A. General

(1) This task gives the procedures to install the service-door emergency-light lamp.

B. References

REFERENCE	DESIGNATION
AMM TASK 33-50-00-700-801-A/500	EMERGENCY LIGHTS - OPERATIONAL CHECK

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
234	234ARC	Passenger cabin (service-door ceiling panel)

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Performs the task	Passenger cabin (service-door ceiling panel)

I. Installation (Figure 401)

SUBTASK 420-002-A

(1) Install the emergency lamp (3) in the light housing assembly (1).

(2) Carefully install the lens (2).

J. Follow-on

SUBTASK 842-002-A

(1) On the circuit breaker panel, close the EMERG circuit breaker and remove the DO-NOT-CLOSE tag from it (Location Tip: ESSENTIAL DC BUS 2/LIGHTS/EMERG).

(2) Do the Emergency Lighting test ([AMM TASK 33-50-00-700-801-A/500](#)).

TASK 33-50-09-000-802-A

EFFECTIVITY: ALL

4. SERVICE-DOOR EMERGENCY-LIGHT ASSEMBLY - REMOVAL

A. General

- (1) The procedures for the removal of the service-door emergency-light assembly are given in the Service-Door Courtesy-Light Assembly Removal ([AMM TASK 33-26-05-000-802-A/400](#)).

B. References

REFERENCE	DESIGNATION
AMM TASK 33-26-05-000-802-A/400	SERVICE-DOOR COURTESY-LIGHT ASSEMBLY - REMOVAL

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

Not Applicable

TASK 33-50-09-400-802-A

EFFECTIVITY: ALL

5. SERVICE-DOOR EMERGENCY-LIGHT ASSEMBLY - INSTALLATION

A. General

- (1) The procedures for the installation of the service-door emergency-light assembly are given in the Service-Door Courtesy-Light Assembly Installation ([AMM TASK 33-26-05-400-802-A/400](#)).

B. References

REFERENCE	DESIGNATION
AMM TASK 33-26-05-400-802-A/400	SERVICE-DOOR COURTESY-LIGHT ASSEMBLY - INSTALLATION

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

Not Applicable