

## CMU PRINTER - REMOVAL/INSTALLATION

*EFFECTIVITY: AIRCRAFT WITH CMU*

### 1. General

- A. This section gives the procedures to remove/install the CMU printer.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
23-24-02-000-801-A	CMU PRINTER - REMOVAL	AIRCRAFT WITH CMU
23-24-02-400-801-A	CMU PRINTER - INSTALLATION	AIRCRAFT WITH CMU

TASK 23-24-02-000-801-A

*EFFECTIVITY: AIRCRAFT WITH CMU*

## 2. CMU PRINTER - REMOVAL

### A. General

(1) This task gives the procedures to remove the CMU printer.

### B. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
223/224		Cockpit

### C. Tools and Equipment

Not Applicable

### D. Auxiliary Items

Not Applicable

### E. Consumable Materials

Not Applicable

### F. Expandable Parts

Not Applicable

### G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

### H. Preparation

*SUBTASK 841-002-A*



(1) On the circuit breaker panel, open the CMU PRT circuit breaker and attach a DO-NOT-CLOSE tag to it (Location Tip: 115 V AC/CMU PTR).

### I. Removal [\(Figure 401\)](#)

*SUBTASK 020-002-A*

- (1) Disengage the Dzus (2) fasteners at the CMU printer (3).
- (2) Move the printer (2) away from its location on the control pedestal to get access to the electrical connector (1).
- (3) Disconnect the electrical connector (1).

**EFFECTIVITY: AIRCRAFT WITH CMU**  
**CMU Printer - Removal/Installation**  
**Figure 401**

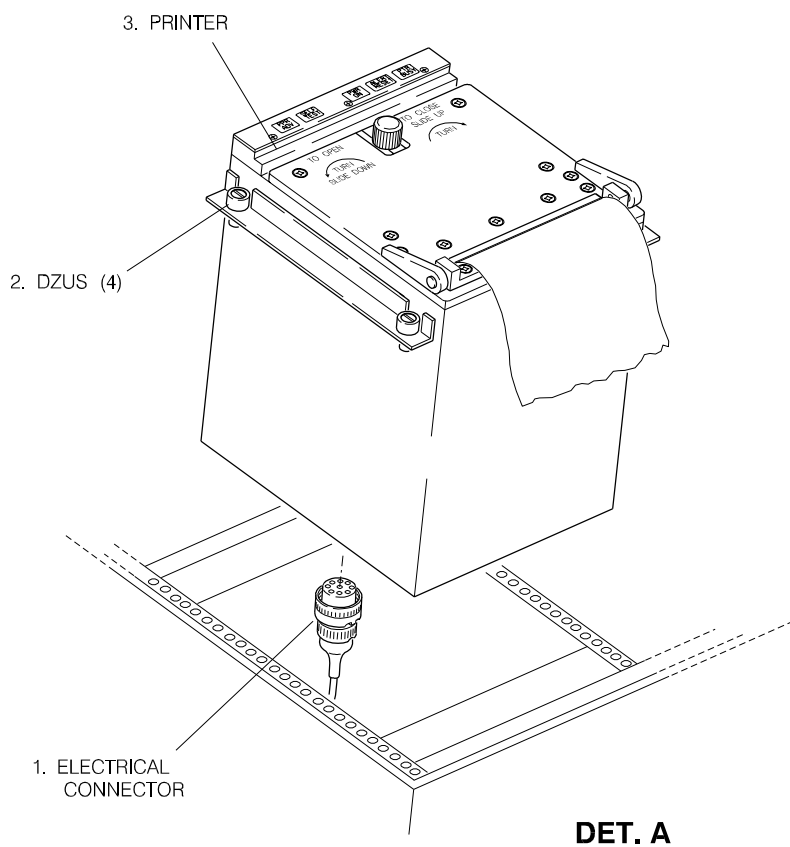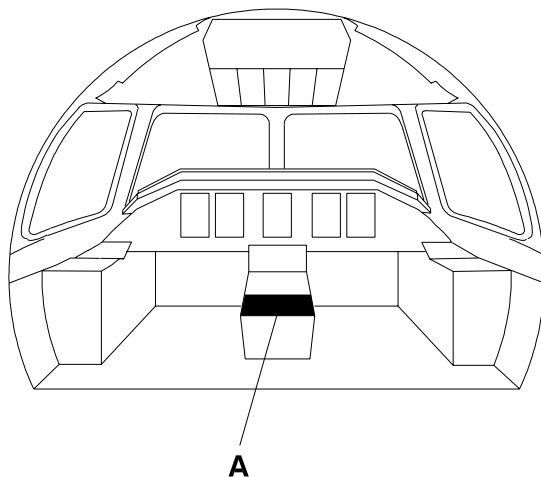

TASK 23-24-02-400-801-A

EFFECTIVITY: AIRCRAFT WITH CMU

### 3. CMU PRINTER - INSTALLATION

#### A. General

(1) This task gives the procedures to install the CMU printer.

#### B. References

REFERENCE	DESIGNATION
<a href="#">AMM TASK 23-22-02-700-801-A/500</a>	ACARS PRINTER - OPERATIONAL TEST

#### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
223/224		Cockpit

#### D. Tools and Equipment

Not Applicable

#### E. Auxiliary Items

Not Applicable

#### F. Consumable Materials

Not Applicable

#### G. Expandable Parts

Not Applicable

#### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

#### I. Installation (Figure 401)

##### SUBTASK 420-002-A

- (1) Connect the cable connector (1) to the printer connector.
- (2) Move the printer (3) to its location on the control pedestal.
- (3) Engage the Dzus (2) fasteners at the printer (3).

#### J. Follow-on

##### SUBTASK 842-002-A

- (1) On the circuit breaker panel, close the CMU PRT circuit breaker and remove the DO-NOT-CLOSE tag from it (Location Tip: 115 V AC/CMU PTR).
- (2) Do the CMU printer operational test ( [AMM TASK 23-22-02-700-801-A/500](#)).