

AUTODISCHARGE FIRE EXTINGUISHER BOTTLE - INSPECTION/CHECK

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to do the inspection of the waste auto-fire-extinguisher bottle.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
26-25-01-200-801-A	TOILET-WASTE AUTO-FIRE-EXTIN- GUISHER BOTTLE - INSPECTION	ALL
26-25-01-200-802-A ♦	TOILET-WASTE AUTO-FIRE-EXTIN- GUISHER BOTTLE - INSPECTION	ALL

TASK 26-25-01-200-801-A

EFFECTIVITY: ALL

2. TOILET-WASTE AUTO-FIRE-EXTINGUISHER BOTTLE - INSPECTION

A. General

- (1) This task permits you to do a check on the general condition of the toilet-waste auto-fire-extinguisher bottle.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Aircraft toilet

H. Preparation

SUBTASK 841-002-A

- (1) Remove the toilet waste to get access to the discharge pipings of the auto-fire-extinguisher bottle.
- (2) Open the lower compartment door to get access to the auto-fire-extinguisher bottle.

I. Visually Check Lavatory Fire Extinguisher Bottle Pressure ([Figure 601](#))

SUBTASK 211-002-A

- (1) Do a visual inspection on the toilet-waste auto-fire-extinguisher bottle for general condition and on the seals of the discharge pipings for integrity.
- (2) Examine the pressure gauge of the fire extinguishing bottle for correct indication.

J. Follow-on


SUBTASK 842-002-A

- (1) Install the toilet waste.
- (2) Close the lower compartment door.

EFFECTIVITY: ALL

Toilet-Waste Auto-Fire-Extinguisher Bottle - Component Locations

Figure 601

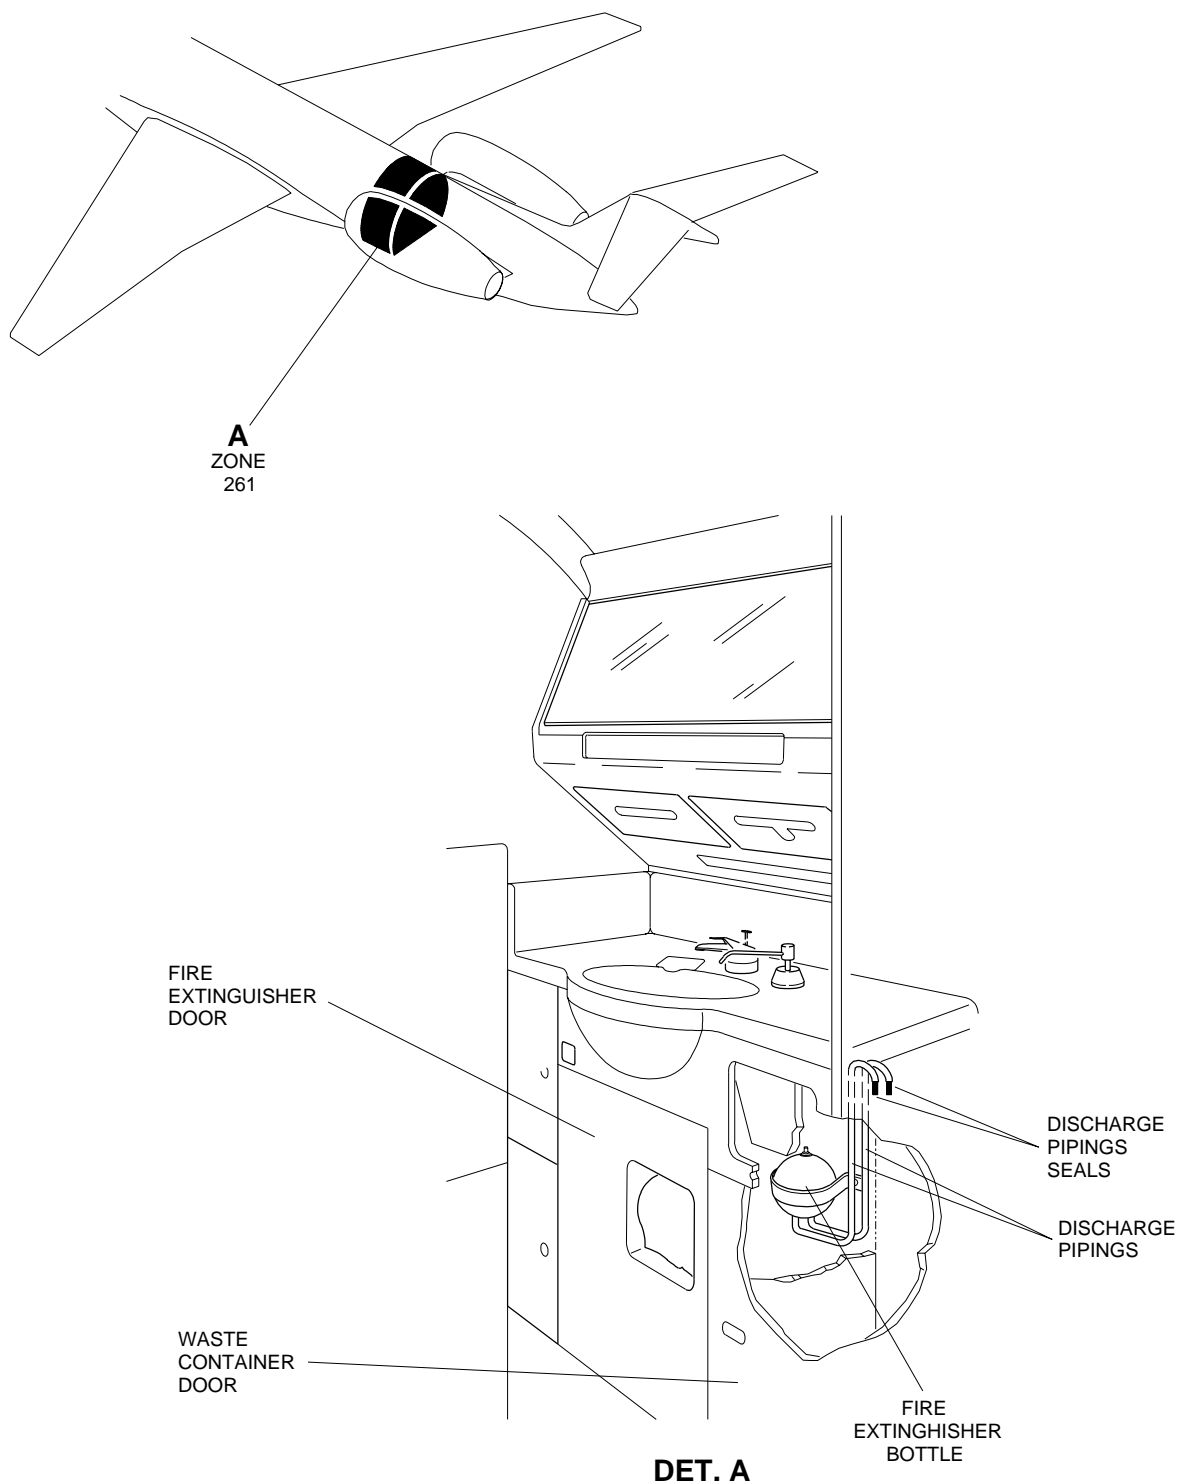

145AMM260014.MCE C

TASK 26-25-01-200-802-A

EFFECTIVITY: ALL

3. TOILET-WASTE AUTO-FIRE-EXTINGUISHER BOTTLE - INSPECTION

A. General

- (1) This task gives the procedures to do the check of the weight of the toilet-waste auto-fire-extinguisher bottle.
- (2) To do the inspection, it is necessary to remove the toilet-waste auto-fire-extinguisher bottle from the aircraft.

B. References

REFERENCE	DESIGNATION
AMM TASK 26-25-01-000-801-A/400	AUTODISCHARGE FIRE EXTINGUISHER - REMOVAL
AMM TASK 26-25-01-400-801-A/400	AUTODISCHARGE FIRE EXTINGUISHER - INSTALLATION
CMM ATA 26-25-12	-

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Toilet

I. Preparation

SUBTASK 841-003-A

- (1) Remove the toilet-waste auto-fire-extinguisher bottle ([AMM TASK 26-25-01-000-801-A/400](#)).

J. Toilet-Waste Auto-Fire-Extinguisher Bottle - Weight Inspection

SUBTASK 280-002-A

- (1) Weigh the toilet-waste auto-fire-extinguisher bottle. Refer to the last revision of CMM ATA 26-25-12.

K. Follow-on

SUBTASK 842-003-A

- (1) Install the toilet-waste auto-fire-extinguisher bottle ([AMM TASK 26-25-01-400-801-A/400](#)).

