


Do not connect ext 5V power and USB at the same time.

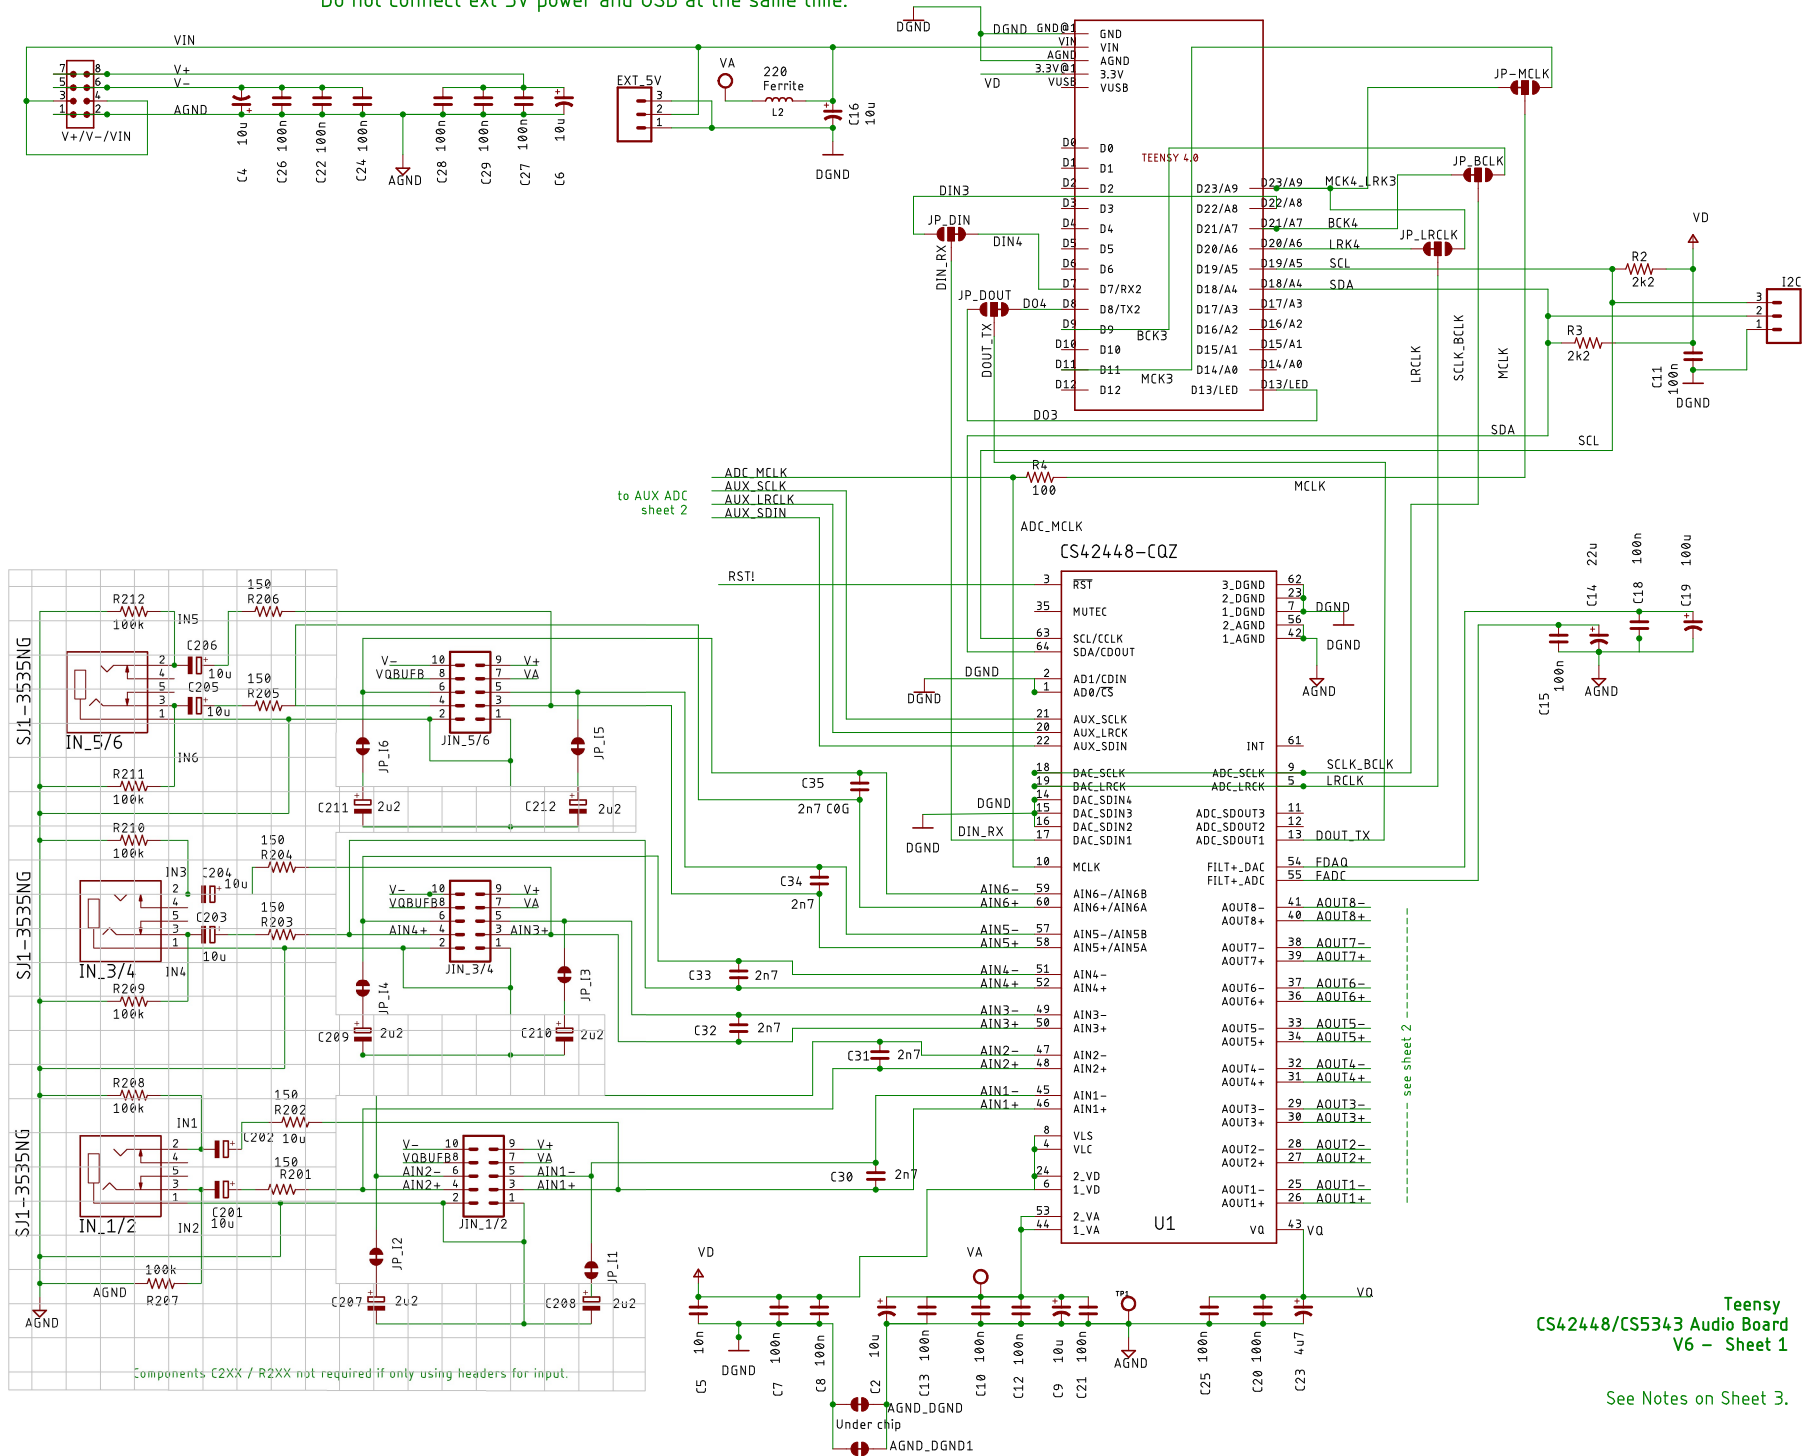

Teensy
CS42448/CS5343 Audio Board
V6 – Sheet 1

See Notes on Sheet 3.