




Power Connections

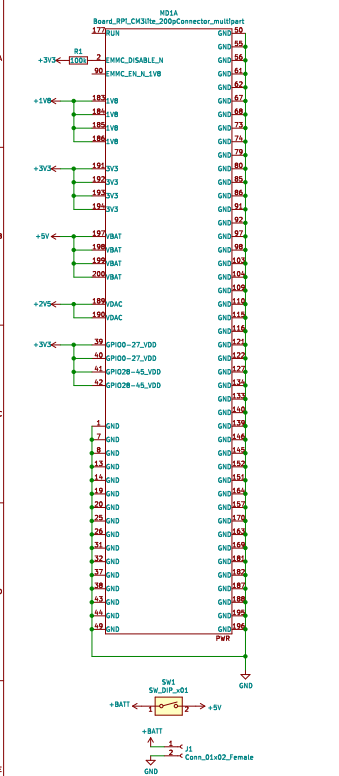


SD Card

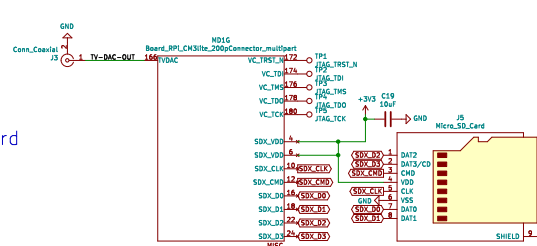


DSI Pins
(Not used)

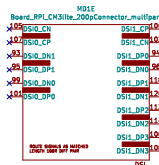


Button inputs for Joysticks or second L/R buttons?

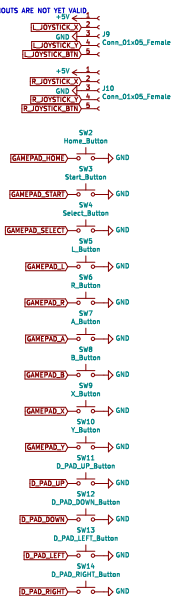


USB Xinput Device

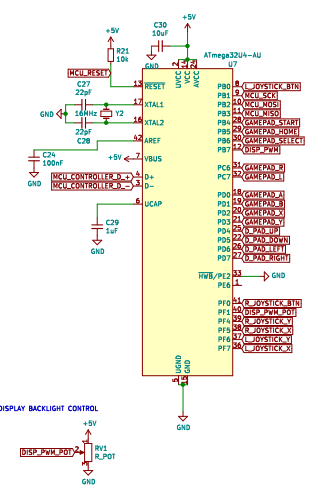


Audio

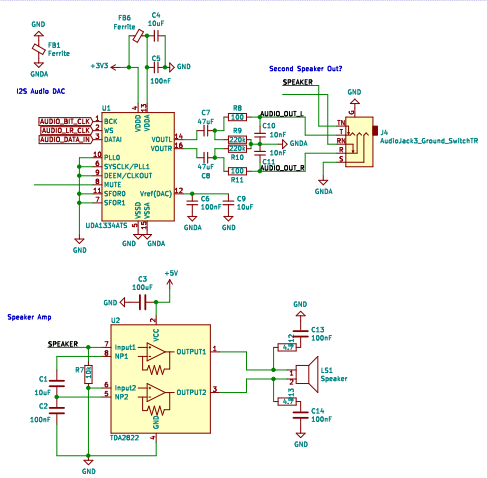


Camera

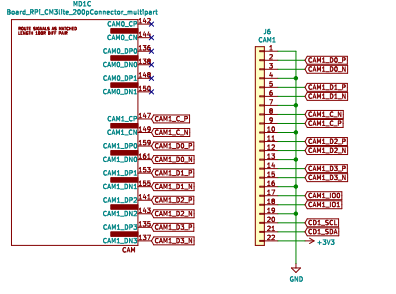


HDMI Out




Power Converters

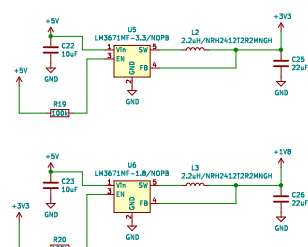


USB Hub

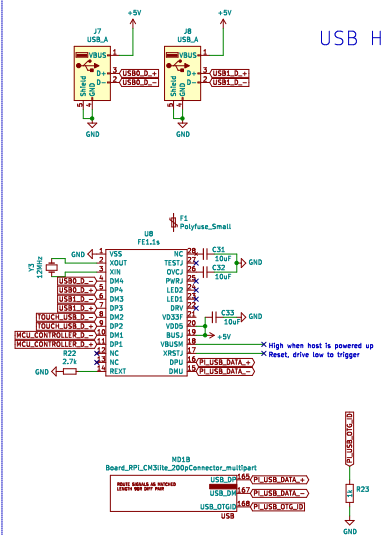


Display

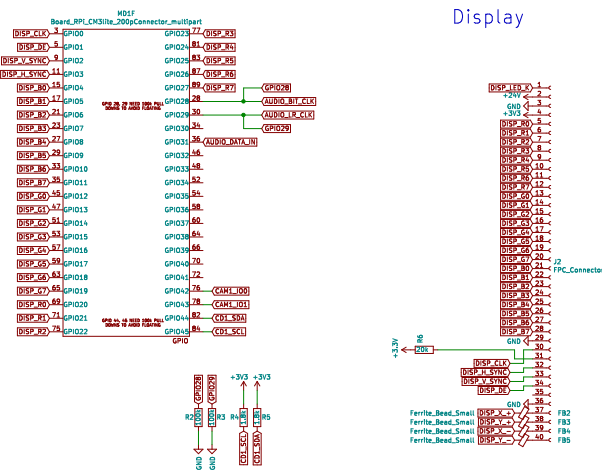


GND

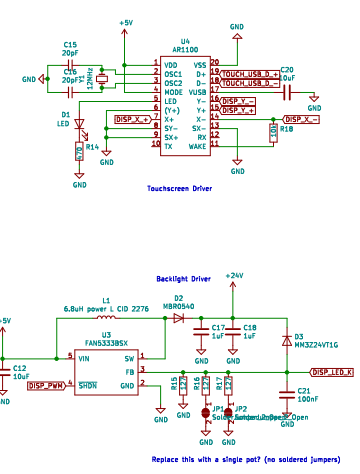

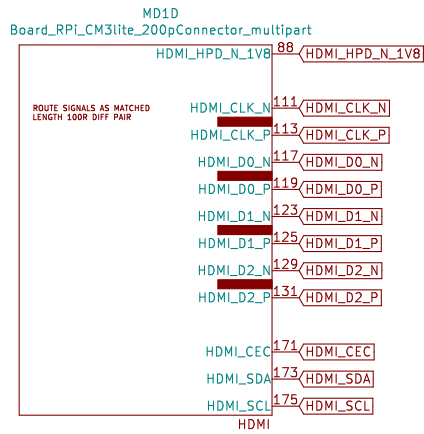

J11
2001-1-2-21-00-BK

VERIFY THIS COMPONENT

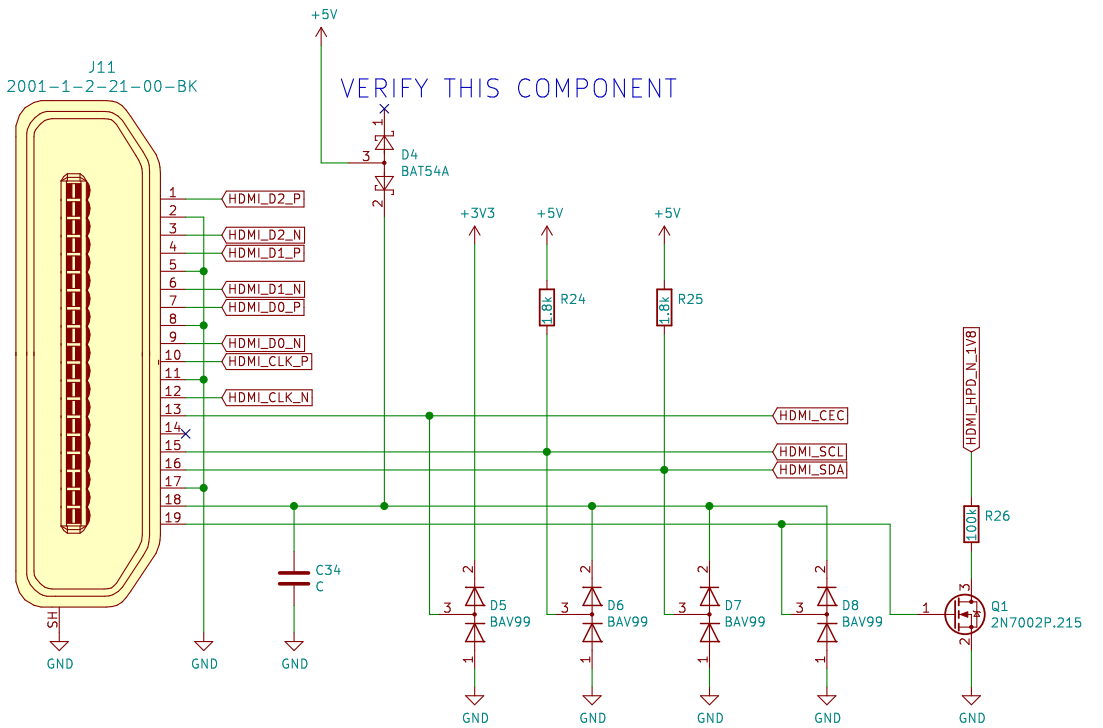

Sheet: /HDMI/
File: hdmi.sch

Title:

Size: A4

Date:

KiCad E.D.A. kicad (5.1.5)-2

Rev:

Id: 2/2