




## AIRTAME


---

Airtame is an all-in-one wireless screen sharing solution. *Note: Laptops must have the latest version of Airtame installed to match the system.*

- 01** Switch the display(s) to Airtame using the control panel. Each classroom has the option of having one laptop screen sharing per display. The display should present similar information to the photo above.
- 02** Type the IP address in the text field labeled **Enter Airtame name or IP**. The IP address will be a series of numbers located under the **Present from App** heading. The IP would be "10.90.52.35" based on the example information above. *Note: Using the Airtame name is less reliable than the IP.*
- 03** Choose **Share Window** or **Share Screen**.
- 04** Press **Stop** to stop sharing your screen. Then, press **Quit** to quit the Airtame application.

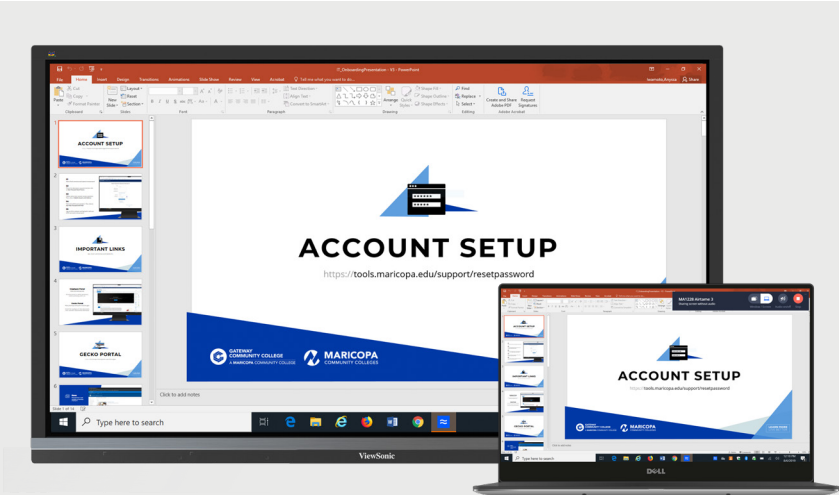

EXAMPLE WINDOW SHARE OF A PRESENTATION



# AIRTIME MENU

## SHARE WINDOW

Shares the screen of your laptop exactly. Whatever you see on your laptop screen will be shown on the display.

## SHARE SCREEN

Only shares the screen you select. Even if you use other applications on your laptop, only the screen you selected will be shown on the display.

## AUDIO ON / OFF

The audio is set to mute by default on Airtame. To play audio from a display with an Airtame source, remember to press **Audio On/Off** from the laptop screen sharing to that display.

## STOP

Press **Stop** when you are finished screen sharing. Note: Pressing **Stop** does not close out of the Airtame application. You need to press **Quit**.