




CONTROL PANEL

POWER ON

Touch the screen to turn the control panel on. Note: The projector and projector screens will not be activated until a source is chosen.

POWER OFF

Press the **Power** button (topmost symbol) located on the right menu bar. A 30 seconds countdown will allow you to cancel the shut down sequence before automatically shutting down or press **Shut Down** to start the sequence immediately. The system shut down process is completed once the home screen is shown on the control panel.

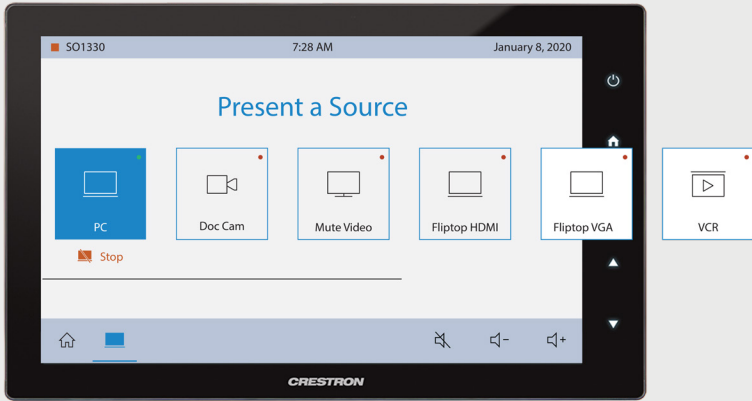

CONTROL PANEL

SOURCE

Press **Source** (laptop icon) located next **Home** (house icon) in the bottom menu bar. Scroll horizontally through the source options. This controls what appears on screen.

MUTE VIDEO

Press **Mute Video** in **Source** to show a black screen on the projector without shutting off the system.

STOP

When a source option is selected, the box will turn a solid blue color and a **Stop** button will appear below it. Press **Stop** prior to selecting a new source.

VOLUME CONTROL

Adjust the volume or mute the audio by pressing the icons in the bottom right corner of the menu bar. Press the audio icons with plus and minus signs to raise or lower the volume. Mute the audio by pressing the audio icon with a slash through it.