



INTERACTIVE CLASSROOMS

The interactive classrooms have new technologies for increased methods of teaching. Primary operations are controlled by the control panel. *Note: The use of extend screen is discouraged to avoid confusion.*

POWER ON


Touch the screen on the control panel to activate all audio and visual equipment in the room.

POWER OFF

Press the **System Off** button on the control panel to start the shut off sequence. Press **Yes** to proceed in turning off all the audio and visual equipment. Please make sure to log out of your account on the computer.




SYSTEM ON

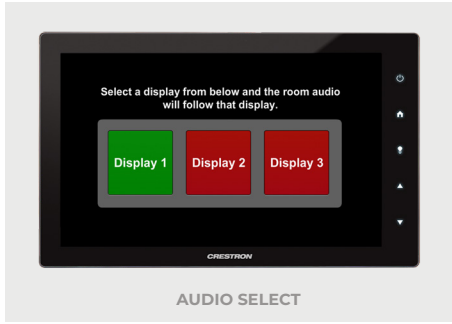

AUDIO SELECT



MAIN SCREEN

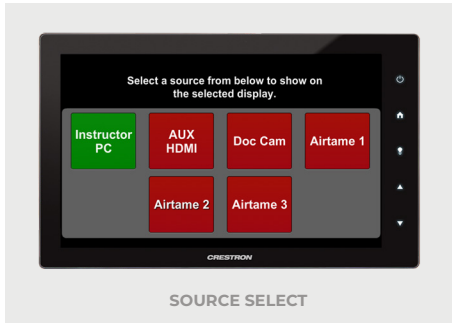

SOURCE SELECT

CONTROL PANEL

DISPLAY SELECTS

Each numbered display corresponds to the labeled televisions in the classroom. Select a source (PC, HDMI, Doc Cam, or Airtame) by pressing on the display you want to change. Press **All Displays** to select a source that will affect all displays.

AUDIO SELECTS

Select which display to project audio to the classroom speakers from. If All Displays had been used from the display select, the audio will work from any display.

VOLUME CONTROLS

Adjust the volume by pressing the up and down arrows. Mute the audio by pressing the **Mute Audio** button.

SYSTEM OFF

Turn off all audio and visual equipment by pressing **System Off**. Remember to log out of your account on the computer.