


# CONTROL PANEL

## POWER ON

Touch the screen to turn the control panel on and activate all audio and visual equipment in the room. This includes lowering the projector screens.

## POWER OFF

Press the **System Off** button to start the shut off sequence. Press **Yes** to proceed in raising the projectors and turning off all the audio and visual equipment. Please make sure to log out of your account on the computer.

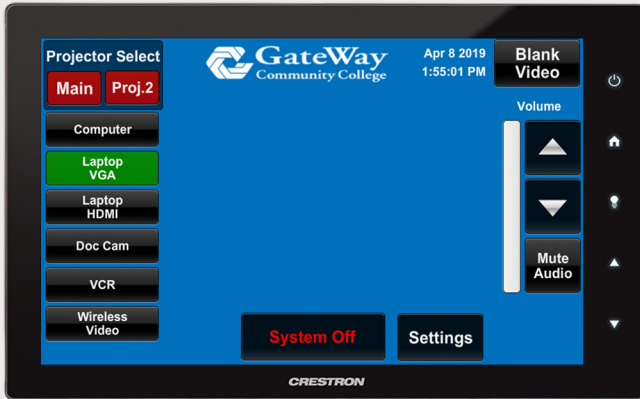

## CONTROL PANEL

---

### PROJECTOR SELECT

The **Main** button controls the main (center) projector. The **Proj. 2** button controls the secondary (side) projector. The buttons may differ depending on how many projectors are located in the room, but the concept is the same.

### BLANK SCREEN

A black (blank) screen will appear on the projector without shutting off the system.

### INPUT SOURCE

The default input source for both projectors is set to **Computer**. Change what appears on screen by first selecting a projector and then selecting what you want to be shown on screen (the input type).

### VOLUME CONTROL

Adjust the volume by pressing the up and down arrows. Mute the audio by pressing the **Mute Audio** button.

### SYSTEM OFF

Turn off all audio and visual equipment by pressing **System Off**. Remember to log out of your account on the computer.