


WIK-xxx104 Button Replacement

SAVANT

These instructions describe the process of removing the existing buttons and replacing them with engraved ones.

Button Removal

1. Remove the front faceplate by pulling the faceplate away from the faceplate retainer. Set aside.
2. Remove power from the keypad by toggling the Service Switch to the **Off** position.
3. Slide a small flat bladed screwdriver under the outside edge of one of the buttons.
4. Place your forefinger on top of the button being replaced and with the screwdriver, pull outward until the button pops free from the keypad.
5. Repeat above steps to remove the remaining buttons.

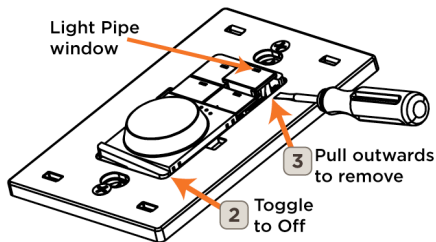

Button Installation

1. Position the button into its required position with the small light pipe window oriented towards the top of the switch.
2. Press firmly in the center of the button until all four corners snap into position.
3. Reinstall faceplate.
4. Reapply power by toggling the Service Switch back to the **On** position.