




press the on/off button

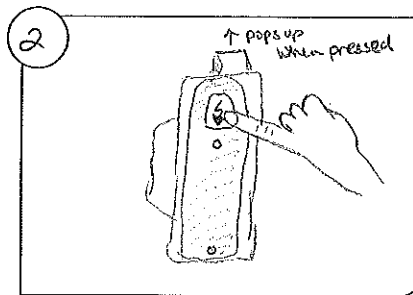


press the flash button to
activate flash and flash pops up

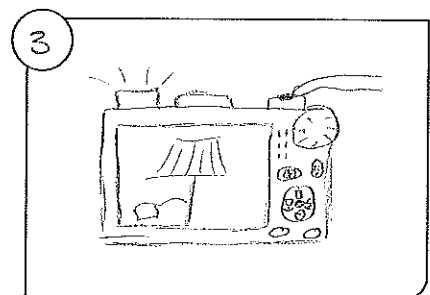


press down shutter button to take
picture with the flash and flash
goes off when button is pressed

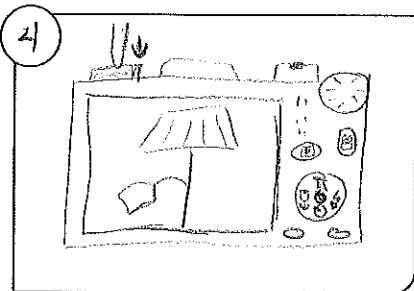


press down flash to turn off
flash on camera

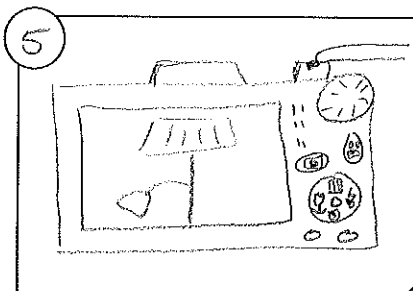


press down on shutter button to take
picture without the flash

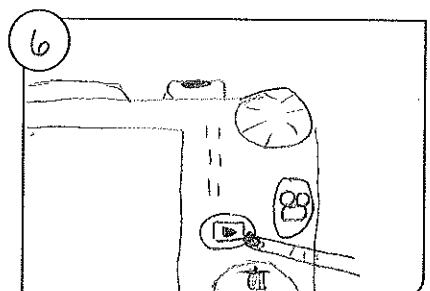


press the green play button
to view the photos

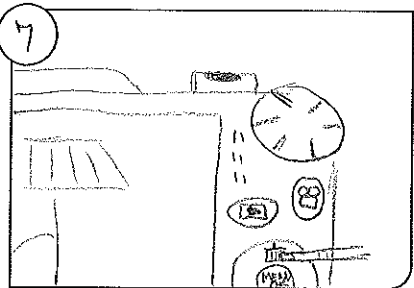


press trash can button to delete
photo, then press again to select
OK

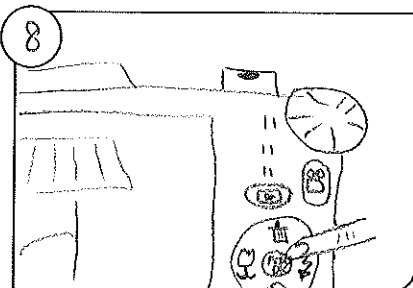

press menu/OK button to
confirm it is okay to erase photo

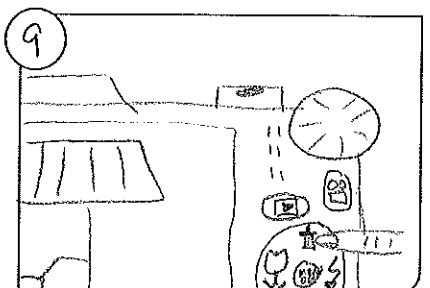

press trash can again to delete
second photo, then press again to
select OK

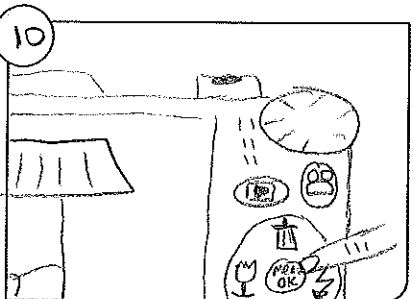

press menu/OK button to
confirm it is okay to erase photo

