
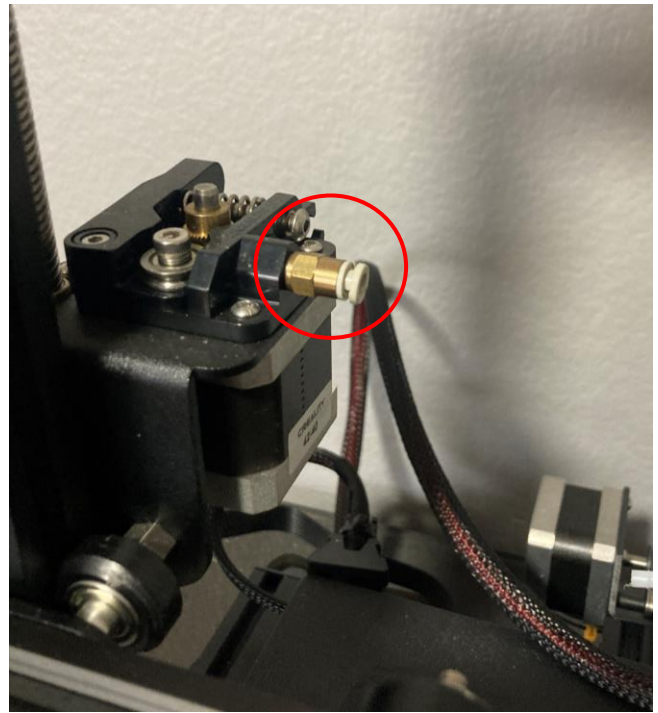



CREALITY ENDER 3

Extruder Disassembly Guide



By: Geoffrey Gao
02/2024

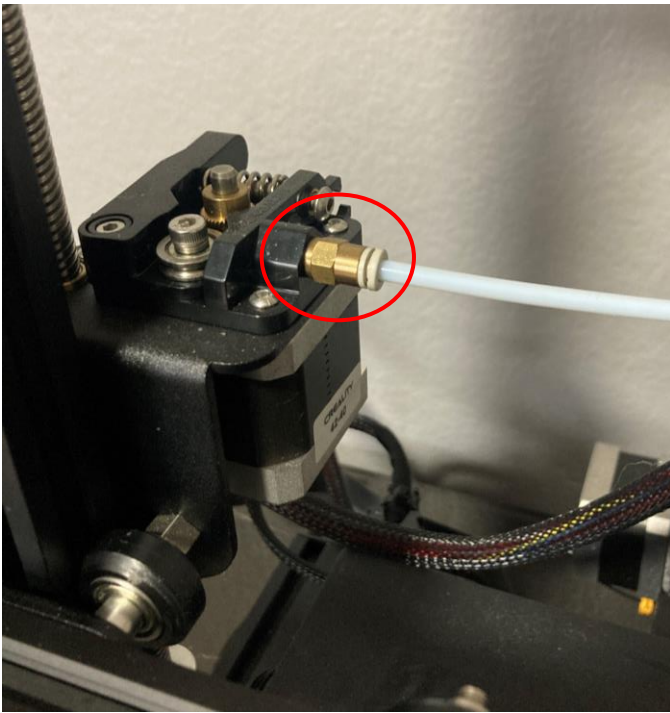

1. Remove Filament and tubing connected to extruder motor
Fitting is push to connect, so press down on the top of the fitting to release the tube

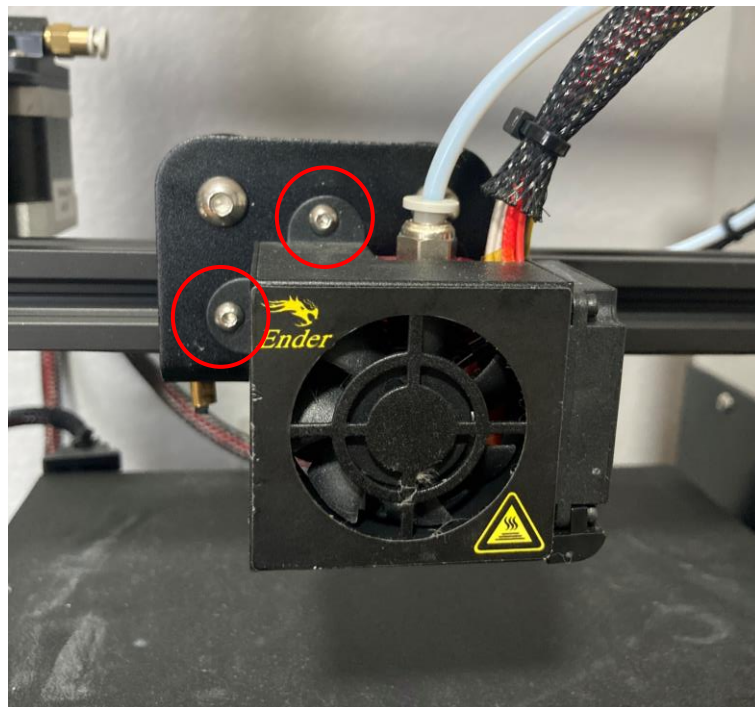

2. Remove 2 screws holding the fan mount
Save these screws! They will be used to mount the plotter later

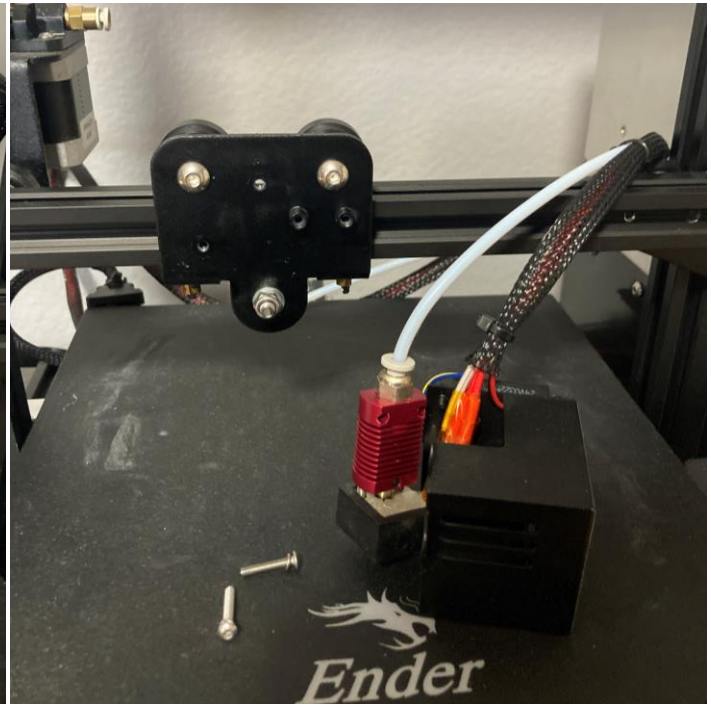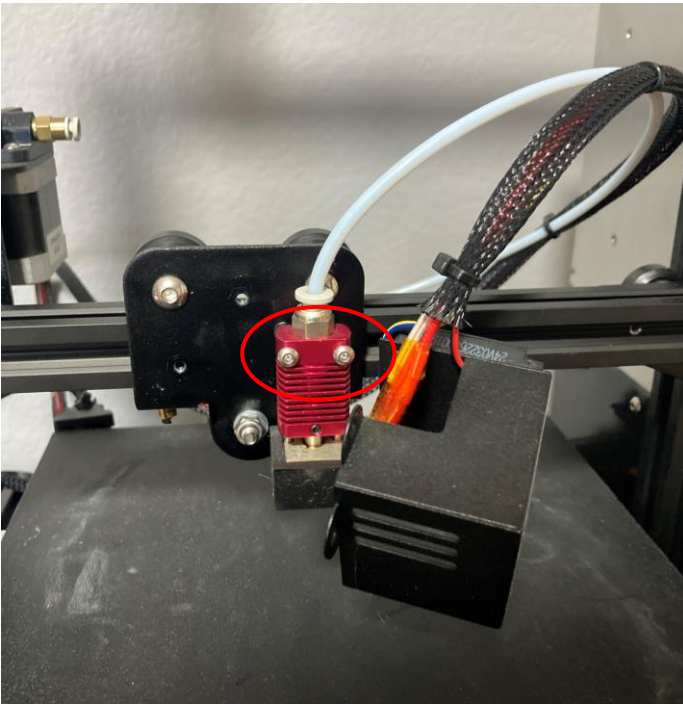

3. Remove 2 screws holding the hotend
Be careful not to break any of the cables



4. Set the hotend and fan assembly aside away from the
printer bed
Leave all the cables connected