


Overview of 68xx Area Scanner

This lab demonstrates the use of TI mmWave sensors for Area Scanner applications. The range, velocity, and angle data from mmWave sensors can enable the detection of objects or people as they enter or exit zones of interest.

Key features in this lab are the static detection and group tracking algorithms:

- Typically it can be difficult to distinguish static objects of interest that have been left in an area from the static floor or fixtures that are also in the area. Using the static detection algorithm enables the detection of static objects such as boxes, carts, or other equipment that have been left behind while ignoring the permanent static objects that comprise the scene.
- With group tracking, the sensor is able to gauge a moving object's trajectory and speed, enabling the area scanner system to predict before a safety zone is breached and to dynamically adjust the system's behavior depending on the object's speed of approach.

The lab runs on the TI mmWave sensor IWR6843ISK, IWR6843ISK-ODS, or IWR6843AOP (Rev F+) EVM and includes a MATLAB visualizer.

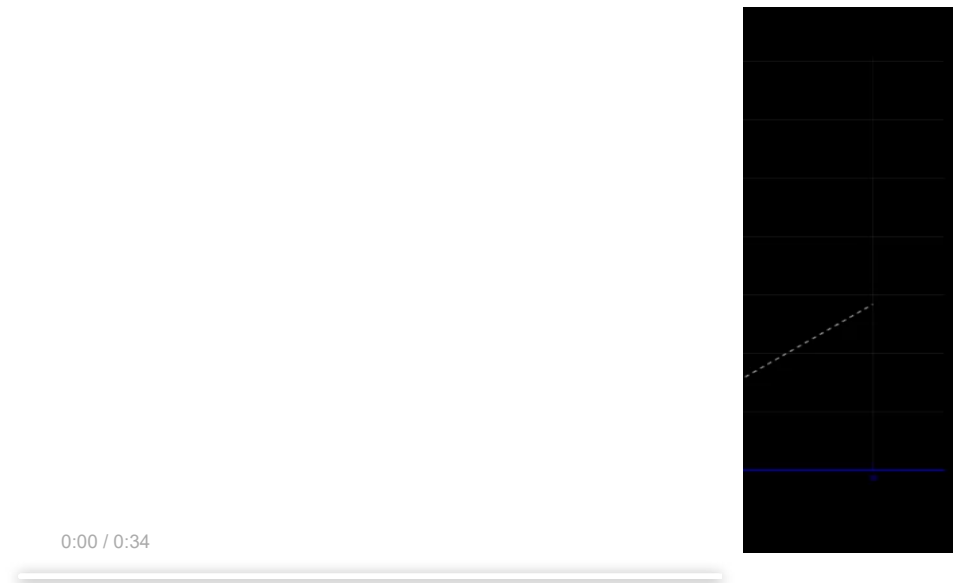

Requirements

Prerequisite



Run Out of Box Demo

Before continuing with this lab, users should first run the out of box demo for the EVM. This will enable users to gain familiarity with the sensor's capabilities as well as the various tools used across all labs in the mmWave Industrial Toolbox.

Required and Supported mmWave Evaluation Modules (EVM)

ISK or ODS antenna module with MMWAVEICBOOST

Quantity	Item
1	Antenna Module Board: IWR6843ISK (http://www.ti.com/tool/IWR6843ISK) OR IWR6843ISK-ODS (http://www.ti.com/tool/IWR6843ISK-ODS)
1	OPTIONAL: Industrial mmWave Carrier Board (http://www.ti.com/tool/MMWAVEICBOOST) for CCS based debugging

OR

AOP EVM


Quantity	Item
1	IWR6843AOPEVM (http://www.ti.com/tool/IWR6843AOPEVM)
1	OPTIONAL: Industrial mmWave Carrier Board (http://www.ti.com/tool/MMWAVEICBOOST) for CCS based debugging

! IWR6843 ES2.0 Only

This lab is only compatible with ES2.0 version of IWR6843.

On ISK or ODS, check the device version on your IWR6843 using the on-chip device markings as shown below

1. If line 4 reads 678A , you have an ES2 device. In this case, this lab is compatible with your EVM.
2. If line 4 reads 60 GHZi , you have an older ES1 device. In this case, the lab is NOT compatible with your EVM. ES2 IWR6843ISK/IWR6843ISK-ODS boards are orderable from the EVM link above.

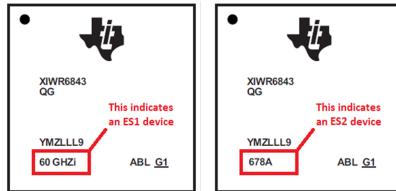

On AOP, the EVM must be Rev F or later. This can be distinguished by the shape of the EVM if it is as shown above.

! AoP ES2.0 EVM only

The IWR6843 AoP version of this lab is only compatible with ES2.0 silicon and the corresponding EVM. Please ensure your EVM is the same as in the below image.



Additional Hardware Requirements

Quantity	Item	Details
1	Computer	Windows 7 or 10 PC
1	Micro USB Cable	
1	Power Supply	If using MMWAVEICBOOST, a 5V, 3A with 2.1-mm barrel jack (center positive). The power supply can be wall adapter style or a battery pack with a USB to barrel jack cable.

Software

Tool	Version	Download Link
TI mmWave SDK	3.5.0.4	Link to Latest mmWave SDK (http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html). To access a previous version of the mmWave SDK scroll to the bottom of the table and click the link under "MMWAVE-SDK previous release". Repeat to continue stepping back to previous versions.
mmWave Industrial Toolbox	Latest	Download and install the toolbox. Go to Using TI Resource Explorer & the mmWave Industrial Toolbox (../..../docs/readme.html) for instructions.
MATLAB Runtime	2019a (9.6)	Exact version required. https://www.mathworks.com/products/compiler/matlab-runtime.html (https://www.mathworks.com/products/compiler/matlab-runtime.html)
Uniflash	Latest	Uniflash tool is used for flashing TI mmWave Radar devices. Download offline tool (http://www.ti.com/tool/UNIFLASH) or use the Cloud version (https://dev.ti.com/uniflash/#!/)
Silicon Labs CP210x USB to UART Bridge VCP Drivers	Latest	Only needed for AOP EVM. https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers (https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers)

Quickstart

The quickstart guide will cover setting up the EVM, flashing firmware, and running the demo.

1. Setup the EVM for Flashing Mode

- For MMWAVEICBOOST + Antenna Module setup: Follow the instructions for Hardware Setup for Flashing in MMWAVEICBOOST Mode ([../..../common/docs/hardware_setup/hw_setup_mmwaveicboost_mode_flashing.html](http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html))
- For IWR6843ISK or IWR6843ISK-ODS in Standalone/Modular Mode: Follow the instructions for Hardware Setup of IWR6843ISK/ODS for Flashing Mode ([../..../common/docs/hardware_setup/hw_setup_isk_ods_modular_mode_flashing.html](http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html))
- For AOP in Standalone/Modular Mode: Follow the instructions for Hardware Setup of IWR6843AOPEVM for Flashing Mode ([../..../common/docs/hardware_setup/hw_setup_aop_modular_mode_flashing.html](http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html))

2. Flash the EVM using Uniflash

Flash the binary listed below using UniFlash. Follow the instructions for using UniFlash

([../..../common/docs/software_setup/using_uniflash_with_mmwave.html](http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html))

BIN Name	Board	Location
area_scanner_68xx_demo_isk.bin	IWR6843ISK	<INDUSTRIAL_TOOLBOX_INSTALL_DIR>\mmwave_industrial_toolbox_<VER>\labs\area_scanner\68xx_area_scanner\prebuilt_binaries\isk
area_scanner_68xx_demo_ods.bin	IWR6843ISK-ODS	<INDUSTRIAL_TOOLBOX_INSTALL_DIR>\mmwave_industrial_toolbox_<VER>\labs\area_scanner\68xx_area_scanner\prebuilt_binaries\ods
area_scanner_68xx_demo_aop.bin	IWR6843AOPEVM	<INDUSTRIAL_TOOLBOX_INSTALL_DIR>\mmwave_industrial_toolbox_<VER>\labs\area_scanner\68xx_area_scanner\prebuilt_binaries\aop

3. Setup the EVM for Functional Mode

- For MMWAVEICBOOST + Antenna Module setup: Follow the instructions for Hardware Setup of MMWAVEICBOOST + Antenna Module for Functional Mode ([../..../common/docs/hardware_setup/hw_setup_mmwaveicboost_mode_functional.html](http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html))
- For IWR6843ISK or IWR6843ISK-ODS in Standalone/Modular Mode: Follow the instructions for Hardware Setup of IWR6843ISK/ODS for Functional Mode ([../..../common/docs/hardware_setup/hw_setup_isk_ods_modular_mode_functional.html](http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html))
- For AOP: follow the instructions for Hardware Setup of IWR6843AOPEVM for Functional Mode ([../..../common/docs/hardware_setup/hw_setup_aop_modular_mode_functional.html](http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html))

At this point, the EVM should be powered, connected to the PC, flashed with the demo, and put in functional mode. The hardware setup is now complete.

4. Run the Lab

1. EVM Mounting and Scene Conditions

The EVM should be mounted:

- Elevated 1m from the ground (mounting height)
- Oriented with the Z-axis towards the ceiling and the Y-axis pointed straight towards the scene of interest. (See EVM images at the top for orientation of axes)
- Tilted in elevation downwards 10 deg ($\theta = -10$)

The static detection algorithm used in this lab records a scene calibration measurement for the first 15 frames after the CFG file is loaded to the device. This means the scene should be clear of "temporary" objects and people. The recorded calibration scene will be used to determine whether new static objects have entered the scene. If the "permanent" background scene changes or the sensor is moved, the calibration will need to be completed again.

2. Launch the Visualizer



MATLAB Runtime Version R2019a (9.6)

Exact version R2019a (9.6) required. Download from: <https://www.mathworks.com/products/compiler/matlab-runtime.html> (https://www.mathworks.com/products/compiler/matlab-runtime.html) Other labs in the mmWave Industrial Toolbox may use version R2017a (9.2). For this lab, version R2019a (9.6) **MUST** also be installed.

- Navigate to <INDUSTRIAL_TOOLBOX_INSTALL_DIR>\mmwave_industrial_toolbox_<VER>\labs\area_scanner\68xx_area_scanner\gui
- Double click to launch **area_scanner_visualizer.exe**
- A black console window will appear. After 30-60sec, a setup window will appear as shown below.

3. Configure Visualizer

The Setup window is divided into several sections:

- Visualizer Mode:** Contains two buttons: 'Real Time' (selected) and 'Play Back'.
- Set COM port for real time:** Includes input fields for 'CFG_PORT' (value: 1) and 'DATA_PORT' (value: 1), along with a 'Test Connection' button.
- Select CFG File:** Features a text field for 'CFG File' and a 'Browse' button.
- Record Data:** Includes a checked checkbox for 'Enable recording. UART stream will be saved to file.', a 'Save Directory' text field with a 'Browse' button, and a 'File Name' text field containing 'as_demo_uart_stream.txt'.
- Sensor Information:** Includes input fields for 'Sensor Mounting Height [m]' (value: 1) and 'Sensor Elevation Tilt [deg]' (value: -10).
- Visualizer Options:** Includes a checked checkbox for 'Show zone occupancy' and several range settings: 'Range Critical Zone Start [m]' (0), 'Range Critical Zone End [m]' (2), 'Range Warning Zone Start [m]' (2), 'Range Warning Zone End [m]' (4), and '[Projection Time sec:]' (2).
- Setup Complete:** A button located at the bottom left of the window.

Visualizer Mode

- Click the **Real Time** button
 - In Real Time mode the visualizer will connect to given COM ports and parse the incoming stream for visualization
 - In Play Back mode the visualizer will read in a txt file and enable a user to review the recorded byte stream from a real time session.
- Enter the COM ports associated with the mmWave EVM.
 - Optional: Use **Test Connection** to ensure that COM ports are available and test command can be sent and received.

Select CFG File

- Use the **Browse** button to select the CFG file to load to the device or enter the full path and file name into the text field box.

- To load the demo CFG file navigate to `..\mmwave_industrial_toolbox_<VER>\labs\area_scanner\68xx_area_scanner\chirp_configs` and select the `area_scanner_68xx_ISK_demo.cfg` or `area_scanner_68xx_ODS_demo.cfg` file for ISK or ODS boards respectively.

Record Data

- Check the **Enable recording**. option to record the UART stream to a text file for play back later on. Enabling this option will log the byte stream in HEX format to a text file.
- Specify the **Save Directory** and **File Name** of the log file.

NOTE: The record data feature will automatically create a text file with the name specified at the save directory. If there is already an existing file with the same name the file will be written over. Ensure path and/or file name are unique if this is not desired.

Sensor Information

- Sensor Mounting Height is the height of the EVM from the floor in meters
- Sensor Elevation tilt is the angle in degrees the sensor is tilted either upwards (+ θ) towards the ceiling or downwards towards the floor (- θ)

Visualizer Options

The options in this panel will determine the areas and behavior of the zone occupancy warning. The demo defines two different regions:

- **Critical zone:** In this zone, the presence of any detected objects will trigger the zone to turn red. Use **Range Critical Zone Start** and **Range Critical Zone End** to specify in meters the radial distance from the sensor the region should start and end. By default this is set to 0 to 2m. This means if there's any detected pt cloud or tracked object within 0-2m radially around the sensor - the zone will be triggered.
- **Warning zone:** In this zone, a moving, tracked object will trigger the zone to turn yellow if its current or or projected location is within the zone. Use **Range Warning Zone Start** and **Range Warning Zone End** to specify in meters the radial distance from the sensor the region should start and end. Typically, the critical zone end and warning zone start should be the same value.
- **Projection Time** is used to calculate the projected location of a tracked object. By default this is set at 2 seconds, meaning the object's location 2 seconds from the current time will be projected from it's velocity vectors and used in determining whether or not to trigger the warning zone indicator. A longer projection time will result in earlier warnings while a shorter projection time will give less warning time.


Setup Complete

- Confirm that the scene is clear of any "temporary" objects.
- When the scene is clear, click the **Setup Complete** button to confirm all the settings and send the config to the mmWave EVM.
- The setup window will close and the main visualizer plot will open next.

NOTE: If the mmWave EVM was is currently running the new config file cannot be resent. The visualizer will instead open and attempt to continue parsing the incoming UART stream. To ensure that the intended CFG file can be loaded, toggle NRST on the EVM before clicking 'Setup Complete'. (This should have already been done when the EVM was returned to Functional Mode).

4. Understanding the Visualizer Output

The window will open in a top-down, X-Y view of the scene. NOTE: The data incoming from the sensor is relative to the sensor itself without consideration for its mounting position. The visualizer transforms and translates the points based on the input sensor information during setup. This is so $Z = 0$ on the plot correlates with the floor of the scene and the zones are defined on the same plane as the floor.

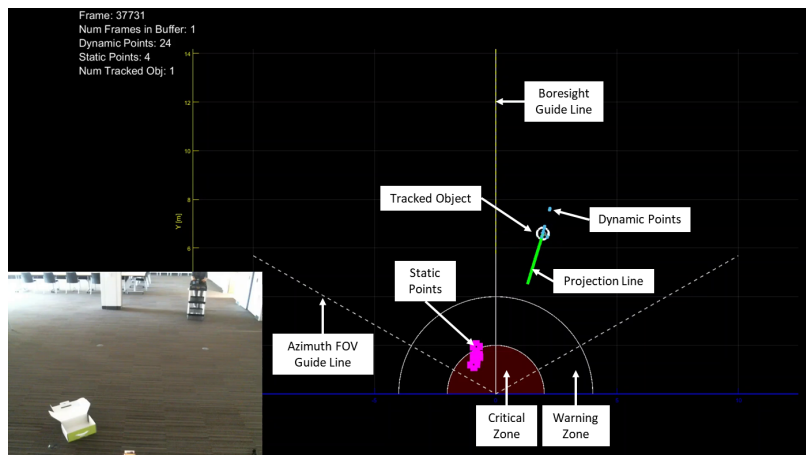


The visualizer will plot three types of detected object data:

- **Static Point Cloud** is represented by magenta squares and is the output of the static detection processing.
 - The point cloud represents newly added static objects to the scene. The primary aim of this detection chain is to detect whether objects such as boxes or carts have been left within the critical zone.
 - The presence of static points in the critical zone will trigger the zone.
 - Static points outside the critical zone are plotted for visualization purposes but do NOT trigger the warning zone. This is because the warning zone is primarily concerned with objects that can move into the critical zone.
- **Dynamic Point Cloud** is represented by cyan points and is the output of the traditional range-doppler processing chain (same processing chain as the Out of Box demo from the prerequisite section).

- Since the CFG file has static clutter removal enabled, the point cloud only shows detections for moving objects.
- **Tracked Objects** are the output of the GTRACK algorithm and are represented by white circles with a number inside for the tracked object's ID number. The dynamic point cloud is fed as input to the tracking algorithm which groups and tracks points across the scene.
 - Each tracked object will also have a projection line starting from its current position and ending at its projected position. The color of the line represents whether the projected position is in the critical zone (red), warning zone (yellow), or neither (green).
 - A longer projection line indicates the tracked object is moving faster while a shorter projection line indicates the tracked object is slower moving.


To end the visualizer session, exit out using the "X" in the upper right corner. If Record Data was enabled this will also close the text file and end recording. The visualizer saves the settings from the setup window and relaunching the visualizer will prepopulate any fields with the same values from the previous session.

5. Replay Data:

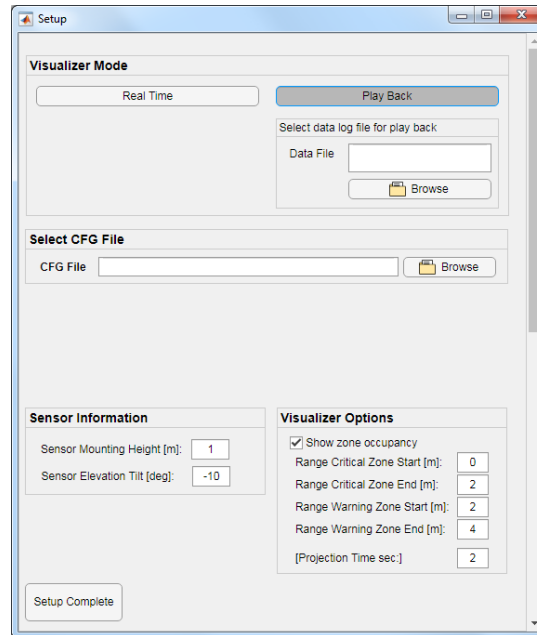

- Relaunch the visualizer
- Select **Play Back** mode
- Browse to and select the .txt data file to load
- Browse to and select the CFG file used when the data was collected.
- Input the Sensor Information parameters. They should match what was used when the data was collected.
- The Visualizer Options can change for play back if desired.

In addition to plotting the data coming from the mmWave EVM, the visualizer also draws reference lines to indicate the approximate azimuth and elevation field of view (FOV) of the sensor. Using the drop down menu in the left corner, users can switch to other views of the scene. A useful view is the 2D, Y-Z view of the scene which gives an indicator of how the mounting height and down tilt affects the min and max detectable range of the sensor given the narrower elevation FOV. The image below is from using the visualizer in play back mode to examine the Y-Z view. The view shows how the lower elevation FOV guideline intersects with the ground, marking the boundary for minimum detectable range. Outside the guide lines, the antenna gain is below a threshold at which detection of objects can be difficult. When debugging missed detections it's important to consider the effect of sensor placement and mounting.

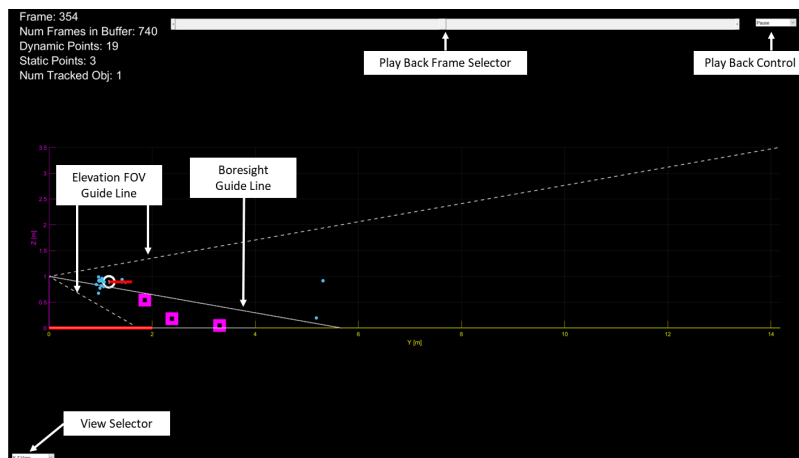

Developer's Guide

- Build the firmware from source code
- Work with GUI source code

Build the Firmware from Source Code

1. Software Requirements

Tool	Version	Download Link
TI mmWave SDK	3.5.0.4	Link to Latest mmWave SDK (http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html). To access a previous version of the mmWave SDK scroll to the bottom of the table and click the link under "MMWAVE-SDK previous release". Repeat to continue stepping back to previous versions.
Code Composer Studio	8.3.1	Code Composer Studio v8.3.1 (http://processors.wiki.ti.com/index.php/Download_CCS#Code_Composer_Studio_Version_8_Downloads)
mmWave Industrial Toolbox	4.x.x	Download and install the toolbox. Go to Using TI Resource Explorer & the mmWave Industrial Toolbox (../..../docs/readme.html) for instructions.

2. Import Lab Project

To import the source code into your CCS workspace, CCS projects are provided for the mmWave SDK Out-of-box demo in the mmWave Industrial Toolbox.



Project Workspace

When importing projects to a workspace, the files are LINKED into the workspace. It is important to note that modifying the files in the CCS workspace will also affect the source files. Practice version control in the case that revisions need to be reverted.

- Start CCS and setup workspace as desired.
- Import the project(s) specified below to CCS. See instructions for importing here ([../..../docs/readme.html#import-ccs-projects-from-the-mmwave-industrial-toolbox-into-code-composer-studio](http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html#import-ccs-projects-from-the-mmwave-industrial-toolbox-into-code-composer-studio))

Project Name	Location in Industrial Toolbox
area_scanner_68xx_dss	Do not import. Automatically imported with mss project.
area_scanner_68xx_mss	<INDUSTRIAL_TOOLBOX_INSTALL_DIR>\mmwave_industrial_toolbox_<VER>\labs\area_scanner\68xx_area_scanner\src

- Verify that the import occurred without error: in CCS Project Explorer both **area_scanner_68xx_dss** and **area_scanner_68xx_mss** projects should appear.



Error during Import to IDE

If an error occurs, check that the software dependencies listed above have been installed. Errors will occur if necessary files are not installed in the correct location for importing.

3. Build the Lab

Note

The same lab projectspec is provided to support either the ISK, ODS, or AOP evm. Users can control which EVM to build for by setting the Active Build Configuration as shown below.

1. Select the **area_scanner_68xx_mss** so it is highlighted. Right click on the project and select **Build Configurations --> Set Active --> isk** or **ods** or **aop** based on the EVM
2. Select the **area_scanner_68xx_dss** so it is highlighted. Right click on the project and select **Build Configurations --> Set Active --> isk** or **ods** or **aop** based on the EVM
3. Select the **area_scanner_68xx_mss** so it is highlighted. Right click on the project and select **Rebuild Project**. The DSS project will automatically build first and then the MSS project.
4. On successful build, the following should appear:
 - **ISK:**
 - In area_scanner_68xx_dss\isk, **area_scanner_68xx_dss_isk.xe674** (this is the C67x binary used for CCS debug mode)
 - In area_scanner_68xx_mss\isk, **area_scanner_68xx_mss_isk.xer4f** (this is the Cortex R4F binary used for CCS debug mode) and **area_scanner_68xx_demo_isk.bin** (this is the flashable binary used for deployment mode)
 - **ODS:**
 - In area_scanner_68xx_dss\ods, **area_scanner_68xx_dss_ods.xe674** (this is the C67x binary used for CCS debug mode)
 - In area_scanner_68xx_mss\ods, **area_scanner_68xx_mss_ods.xer4f** (this is the Cortex R4F binary used for CCS debug mode) and **area_scanner_68xx_demo_ods.bin** (this is the flashable binary used for deployment mode)
 - **AOP:**
 - In area_scanner_68xx_dss\aop, **area_scanner_68xx_dss_aop.xe674** (this is the C67x binary used for CCS debug mode)
 - In area_scanner_68xx_mss\aop, **area_scanner_68xx_mss_aop.xer4f** (this is the Cortex R4F binary used for CCS debug mode) and **area_scanner_68xx_demo_aop.bin** (this is the flashable binary used for deployment mode)

Note

Please set same Active Build Configuration for both MSS and DSS project.

Selecting Rebuild instead of Build ensures that the project is always re-compiled. This is especially important in case the previous build failed with errors.

Build Fails with Errors

If the build fails with errors, please ensure that all the software requirements are installed as listed above and in the mmWave SDK release notes.

Note

As mentioned in the Quickstart section, pre-built binary files, both debug and deployment binaries are provided in the pre-compiled directory of the lab.

4. Execute the Compiled Lab

There are two ways to execute the compiled code on the EVM:

- **Deployment mode:** In this mode, the EVM boots autonomously from flash and starts running the bin image
 - Use the **area_scanner_68xx_demo.bin** found at <CCS_PROJECT_WORKSPACE_DIR>\area_scanner_68xx_mss\[Build-Folder]\ and follow the same process in the Quickstart section except flash this binary instead.
- **Debug mode:** This mode is used for downloading and running the executable from CCS. This mode enables JTAG connection with CCS while the lab is running and is useful during development and debugging.
 - Follow the CCS Debug Mode Guide (./../common/docs/software_setup/using_ccs_debug.html), using the binaries listed below where EVM type correlates to the selected build configuration .
 - After CCS Debug mode is setup, launch the visualizer and proceed as described in the Run the Lab section of the Quickstart

Debug binary	Location	Connect and load to
area_scanner_68xx_dss_evm type.xe674	<CCS_PROJECT_WORKSPACE_DIR>\area_scanner_68xx_dss\<EVM-TYPE>\	C674X_0
area_scanner_68xx_mss_evm type.xer4f	<CCS_PROJECT_WORKSPACE_DIR>\area_scanner_68xx_mss\<EVM-TYPE>\	Cortex_R4_0

Work with GUI source code

Working with and running the visualizer source files requires a full MATLAB license not just the MATLAB Runtime Engine

- The visualizer source files are located at
`<INDUSTRIAL_TOOLBOX_INSTALL_DIR>\mmwave_industrial_toolbox_<VER>\labs\area_scanner\68xx_area_scanner\gui`
- Running `area_scanner_visualizer.m` results in the same functionality as the executable used in the Quick Start section; please refer to the section for details.
- Files of interest:
 - `area_scanner_visualizer.m`: Main visualizer script that calls the setup, parsing, and plotting functions.
 - `readUARTToBuffer.m`: Copies any bytes available on the serial port object to a buffer in the Matlab workspace
 - `parseBytes`: Receives the buffer and parses bytes into an output struct representing the data in the frame.

Data Output Format

Output packets with the detection information are sent out every frame through the UART. Each packet consists of a Frame Header as shown below and a possibly variable number of TLV items containing various demo information. Each TLV item consists of type, length, and payload information. Since the length of the packet depends on the number of dynamic points, static points, and tracked objects it can vary from frame to frame. The end of the packet is padded so that the total packet length is always multiple of 32 Bytes.

Headers

Frame Header

Length: 44 Bytes

A Frame Header is sent at the start of each packet. Use the Magic Word to find the start of each packet.

Value	Type	Bytes
Magic Word	uint16_t	8
Version	uint32_t	4
Total Packet Length	uint32_t	4
Platform	uint32_t	4
Frame Number	uint32_t	4
Time [in CPU Cycles]	uint32_t	4
Num Detected Obj	uint32_t	4
Num TLVs	uint32_t	4
Subframe Number	uint32_t	4
Num Static Detected Obj	uint32_t	4

TLV Header

Length: 8 Bytes

Value	Type	Bytes
Type	uint32_t	4
Length [num bytes]	uint32_t	4

Type Length Values (TLVs)

The number of TLVs in a given packet is extracted from the Frame Header. For each TLV, there is a TLV Header containing Type and Length information. The Length value gives the length of the payload. The payload should be parsed according to the appropriate Type identifier as listed in the tables below:

Detected Object (Dynamic Points)

Type: 1

Length: 16 Bytes x Num Detected Obj

The payload consists of 16 bytes representing position and doppler of EACH point in the dynamic point cloud. Note: each point's position is given in spherical coordinates.

Value	Type	Bytes
range [m]	float	4
angle [rad]	float	4
elev [rad]	float	4
doppler [m/s]	float	4

Detected Object (Dynamic Points) Side Info

Type: 7

Length: 4 Bytes x Num Detected Obj The payload consists of 4 bytes for EACH point in the dynamic point cloud. The values for snr and noise are determined as described in the doxygen documentation for the mmWave SDK Demo.

Value	Type	Bytes
snr	uint16_t	2
noise	uint16_t	2

Static Detected Object (Static Points)

Type: 8

Length: 16 Bytes x Num Static Detected Obj

The payload consists of 16 bytes representing position and doppler of EACH point in the static point cloud. Note: each point's position is given in cartesian coordinates.

Value	Type	Bytes
x [m]	float	4
y [m]	float	4
z [m]	float	4
doppler [m/s]	float	4

Tracked Object List

Type: 10

Length: 40 Bytes x Num Tracked Objects

The payload consists of 40 bytes for EACH tracked object, giving the ID, position, velocity, and acceleration components of each target.

Value	Type	Bytes
Target ID	uint32_t	4
pos X [m]	float	4
pos Y [m]	float	4
vel X [m/s]	float	4
vel Y [m/s]	float	4
acc X [m/s^2]	float	4
acc Y [m/s^2]	float	4
pos Z [m]	float	4
vel Z [m/s]	float	4
acc Z [m/s^2]	float	4

Point to Track Association

Type: 11

Length: 1 Byte x Num Detected Obj

The payload consists of 1 byte for EACH point in the dynamic point cloud. If point n was associated to a target, the value of Target ID will be the ID of the associated Target. Otherwise, the value will indicate the reason the point was not associated.

Value	Type	Bytes
Target ID	uint8_t	1

where Target ID can have the following values:

Value	Meaning
<250	The ID of the tracked object the point has been associated to
253	Point not associated, doesn't meet SNR requirements
254	Point not associated, located outside Boundary Box area
255	Point not associated, considered noise

Need More Help?

- Additional resources in the documentation of the mmWave SDK:
 - mmWave SDK Module Doc located at `<mmwave_sdk_install_dir>/docs/mmwave_sdk_module_documentation.html`
 - mmWave SDK User's Guide located at `<mmwave_sdk_install_dir>/docs/mmwave_sdk_user_guide.pdf`
- Search for your issue or post a new question on the mmWave E2E forum (https://e2e.ti.com/support/sensor/mmwave_sensors/f/1023)