




Register your device

Register your device to your **MyCAEN+** account and get access to our customer services, such as notification for new firmware or software upgrade, tracking service procedures or open a ticket for assistance. **MyCAEN+** accounts have a dedicated support service for their registered products. A set of basic information can be shared with the operator, speeding up the troubleshooting process and improving the efficiency of the support interactions.

MyCAEN+ dashboard is designed to offer you a direct access to all our after sales services. Registration is totally free, to create an account go to <https://www.caen.it/become-mycaenplus-user> and fill the registration form with your data.

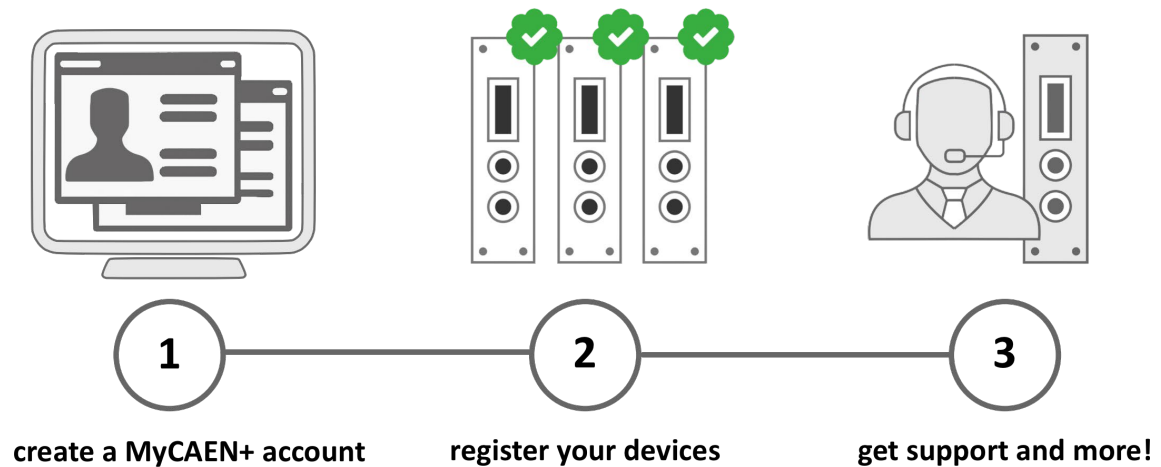

<https://www.caen.it/become-mycaenplus-user/>

Purpose of this Manual

This document is the **DT1415ET 8 Ch Floating Reversible 1kV/1mA (600 mW) Desktop Power Supply for MPGD** User's Manual; it contains information about the installation, the configuration and the use of the Power Supply System.

Change Document Record

Date	Revision	Changes
20 December 2017	0	Preliminary
3 January 2018	1	Updated Communication Protocol
6 March 2018	2	Updated: External connections, Operating modes
21 June 2018	3	Updated Communication Protocol
27 July 2018	4	New Examples of stacking channels
18 April 2019	5	HV Channel Output
9 July 2019	6	Updated: Technical specifications table
24 July 2019	7	Updated: Technical specifications table
8 November 2019	8	Updated: Communication Protocol
8 July 2020	9	Updated Channels settings, Communication Protocol, Technical specifications table
14 October 2020	10	Updated: Channel control and output section
16 February 2021	11	Updated: Technical specifications table
23 March 2021	12	Updated: Technical specifications table
13 May 2021	13	Updated Software Tools

Disclaimer


No part of this manual may be reproduced in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of CAEN SpA.

CAEN will repair or replace any product within the guarantee period if the Guarantor declares that the product is defective due to workmanship or materials and has not been caused by mishandling, negligence on behalf of the User, accident or any abnormal conditions or operations.

CAEN declines all responsibility for damages or injuries caused by an improper use of the Modules due to negligence on behalf of the User. It is strongly recommended to read thoroughly the CAEN User's Manual before any kind of operation. *CAEN reserves the right to change partially or entirely the contents of this Manual at any time and without giving any notice.*

Disposal of the Product *The product must never be dumped in the Municipal Waste. Please check your local regulations for disposal of electronics products.*

Made In Italy: We stress the fact that all the boards are made in Italy because in this globalized world, where getting the lowest possible price for products sometimes translates into poor pay and working conditions for the people who make them, at least you know that who made your board was reasonably paid and worked in a safe environment. (this obviously applies only to the boards marked "Made in Italy", we cannot attest to the manufacturing process of "third party" boards).

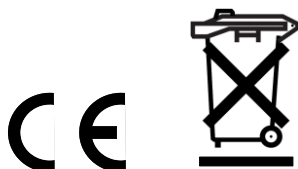

Index

1. General description	4
Overview	4
2. Technical specifications	5
Packaging	5
Power requirements	5
Front panel	5
External connections	5
Local control section	5
Channel control and output section.....	6
Channel control	6
Kill signal	6
HV Channel Output	6
Examples of stacking channels	7
HV Status control section	8
Alarm signal	8
Interlock signal.....	8
HV ON signal	9
Remote communication control section	9
AC Input (back panel)	9
Channel Kill (back panel)	9
Technical specifications table	10
3. Operating modes.....	11
Safety requirements and Initial inspection	11
Product cleaning	11
Initial inspection	11
Local Control	12
BOARD Settings	12
Group Configuration Menu	13
Configuration Menu	13
Ethernet configuration	14
Channel settings.....	14
Group Settings	16
Remote Control	17
Software tools (coming soon)	17
GECO2020.....	17
CAEN HV Wrapper	17
Power Supply Modules LabVIEW Instrument Driver	17
Unit installation.....	17
Module access via VT emulator	18
Channels settings.....	18
Format EEPROM.....	20
General Board Menu	20
Ethernet configuration	20
Upgrade Menu	21
Board Configuration page	22
Communication Protocol	23
Command Format	23
Format of response string	23
MONITOR commands related to the Channels	23
Meaning of STATUS bits (value read in decimal Format).....	24
MONITOR commands related to the module	25
Meaning of Board Alarm value	25
SET commands related to the Channels.....	25
SET commands related to the module	26
EPICS Service (coming soon)	26

1. General description

Overview



The DT1415ET provides 8 independent High Voltage 1 kV / 1mA (0.6W) channels in a desktop package; the unit is 110/220V AC Powered.

Channels can be used with either positive or negative polarity, independently from each other. The channels have independent floating return, insulated up to 5 kV one from another (Full Floating channel).

Each channel is provided with one connector for the positive output and two “bridged” for the negative one, thus allowing to “stack” two or more adjacent channels.

Module control can take place either locally, assisted by a 2.8" Touchscreen Graphic color LCD display or remotely, via USB, or Ethernet.

HV outputs are delivered through SHV connectors.

Safety features include:


- **OVERVOLTAGE** and **UNDERVOLTAGE** warning when the output voltage differs from the programmed value by more than $\pm 1\% \pm 2V$ of set value.
- **OVERCURRENT** detection: if a channel tries to draw a current larger than its programmed limit, it enters TRIP status, keeping the maximum allowed value for a programmable time (TRIP), before being switched off
- Common Interlock logic for channels enable/disable and individual inputs signal for channel Kill function.

2. Technical specifications


Packaging

Desktop package (255x140x330mm); Weight: ~5.2kg.

Power requirements

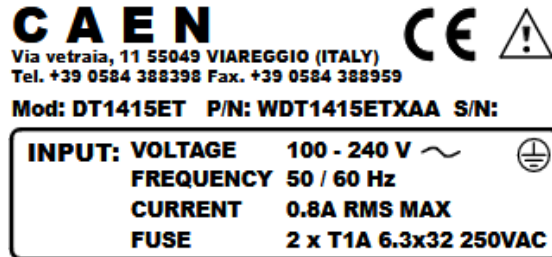

Front panel

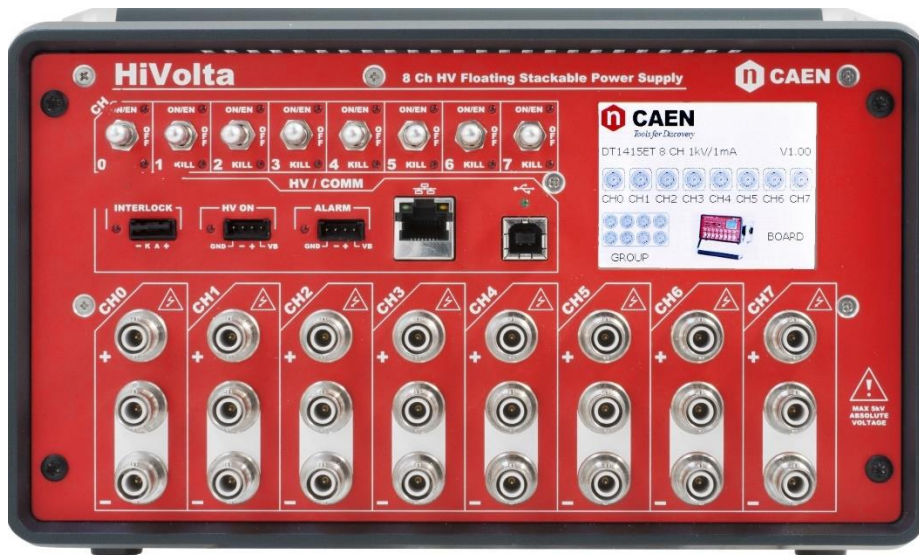

External connections

Local control section



2.8" LED Touch Screen
Parameter and Mode setting; Local
settings monitoring

Parameter and Mode setting; Local
settings monitoring

Channel control and output section

Channel control




3 POS. SWITCH with lock HV_EN/OFF/KILL *Channel Enable and turning OFF/KILL*

RED LED ON *HV On enabled*

RED LED KILL *Ch. Disable, according to "Power Down" setting (KILL or RAMP)*

When the channels are assigned to a group (see p.12), they can be turned ON only if the corresponding front panel switches are all ON; to turn all channels in a group OFF, it is sufficient that only one switch of the group is OFF. When OFF, the channel is turned down according to Ramp Down setting; when KILL, it is turned down according to Power Down mode.

Kill signal

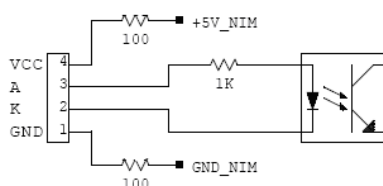

A schematic diagram of the Kill input is shown in the figure on the left, where the diode is part of opto-coupler stage. Kill means that channels are hardware turned off. The following table explains the Kill operation

CONFIGURATION ↓	KILL MODE →	OPEN	CLOSE
leave contact open		Killed	ENABLED
voltage level (0÷1V, ~5mA current) between pin 2 (high) and pin 3 (low)		Killed	ENABLED
short circuit pin 1 with pin 2, and pin 3 with pin 4		ENABLED	Killed
voltage level (4÷6V, ~5mA current) between pin 2 (high) and pin 3 (low)		ENABLED	Killed

HV Channel Output



This section is provided with one connector for the positive output and two "bridged" for the negative one, thus allowing to stack two or more adjacent channels. Output ratings: max voltage: 1 kV (Floating up to 5 kV); max current: 1 mA; max power: 0.6W



WARNING! These connectors produce extremely hazardous high voltages at a potentially lethal current level; never connect or disconnect the HV OUT connector with the power ON/OFF switch ON; always switch power OFF and wait at least 30s before connecting or disconnecting HV cables.


OUT

HV Channel Out: 3 x SHV RADIALL R317580; Impedance: 50 Ohm; Frequency range: 0 – 2 GHz; VSWR: <1.20 + 0.3 F (GHz) – (plug and jack); Test voltage: 10kV DC – 1mn (unmated connectors); Ratings: 12kV DC – 1mn (mated pairs); Current rating: 10 A







Maximum 5kV Absolute Voltage: the maximum allowed output voltage with stacked channels is 5kV; see also p.7. The unit only guarantees that this limit is not exceeded for the voltage set value when the channels are operated in Group Mode. It is up to the User to verify that the 5kV limit is not exceeded in other cases, for example with stacked channels operated individually or in Group Mode during transitions (i.e. when the channels are ramping).

When the channels are used independently from each other, in order to configure the output polarity, the SHV connectors must be connected in these ways:

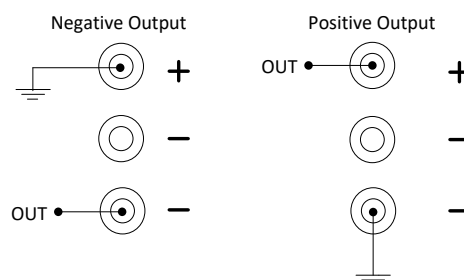


Examples of stacking channels

The following diagrams show electrical schemes and hardware connections of possible configurations of stacked channels.

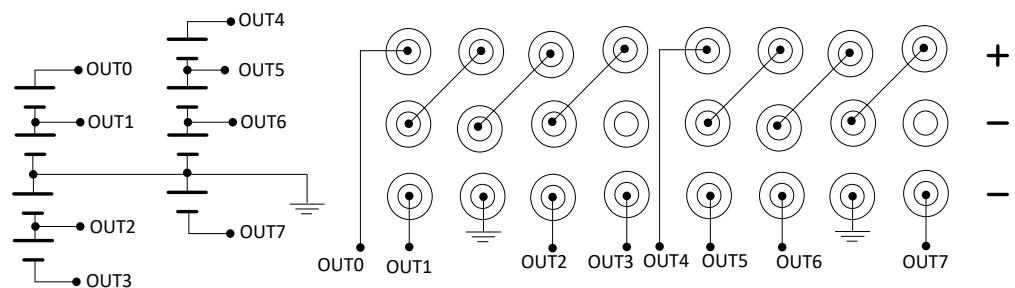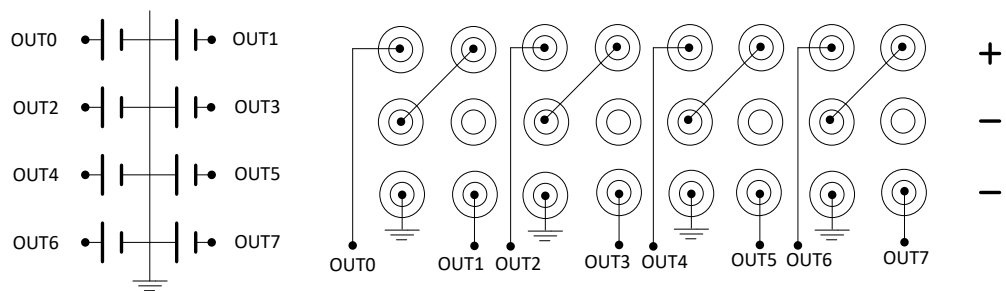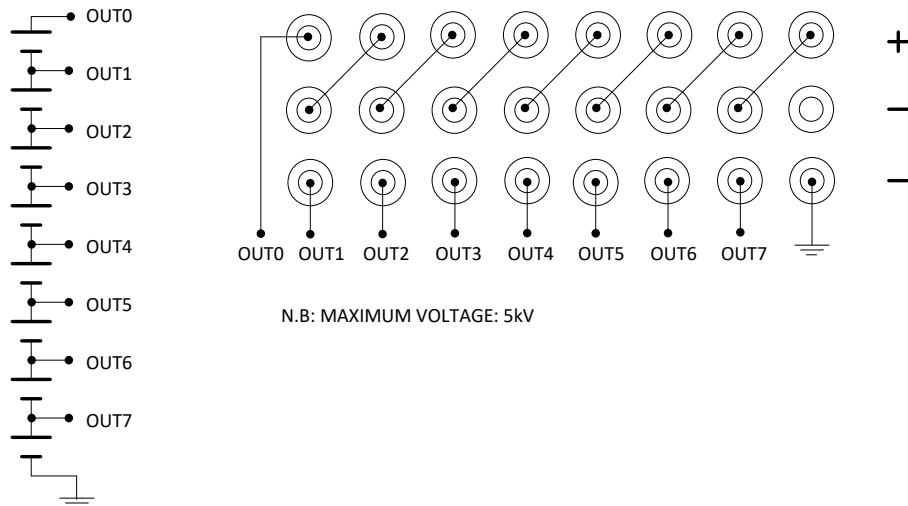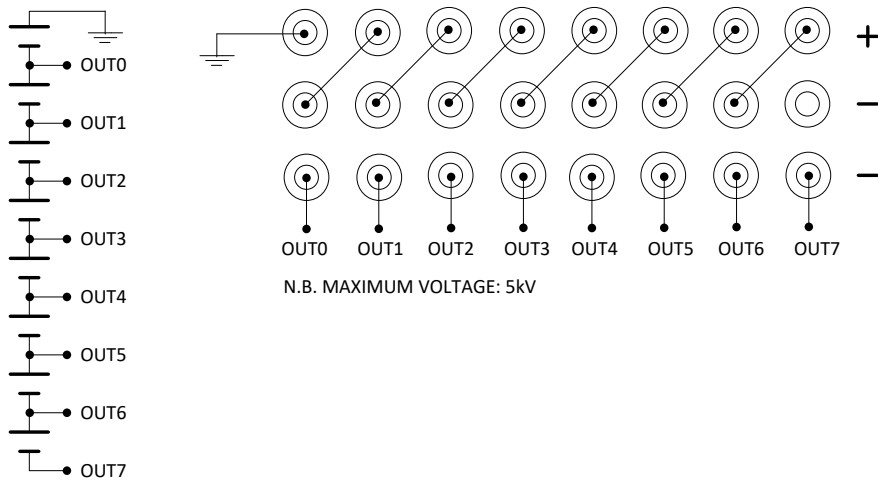


HV Status control section

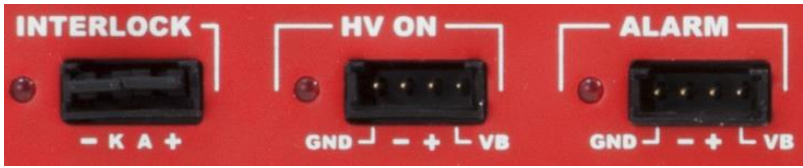

ALARM	RED LED/ AMP 280371-2	Out	Alarm status signalled (active LOW)
HV ON	RED LED/ AMP 280371-2	Out	HV On enabled (at least one channel ON)
INTERLOCK	RED LED/ AMP 280371-2	In	Interlock signal

Alarm signal

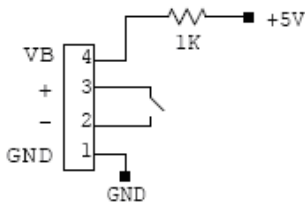


As an Alarm condition is detected (see p. 24 and 25) pins 2 and 3 (- and +) are closed; the contact can be used to switch an external device supplied by an external source, otherwise the VB and GND references can be used to provide a TTL compatible level on pin 2 and 3


In the first case (externally supplied device) the maximum allowed ratings are:

- Maximum voltage between + and -: 12V
- Maximum sink current across + and -: 100mA

In the latter case, to produce a TTL compatible Alarm Out, pin 3 (+) must be connected with pin 4 (VB) and pin 1 (GND) with pin 2 (-); see the diagram on the right:

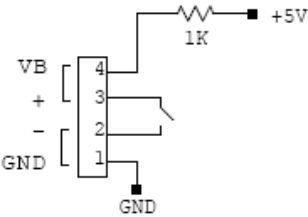

Interlock signal

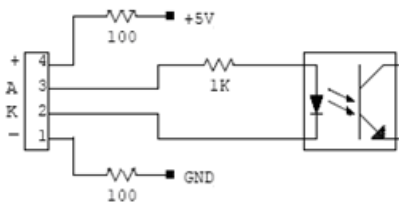


A schematic diagram of the Interlock input is shown in the figure on the left, where the diode is part of opto-coupler stage. Interlock means that channels are hardware disabled. The following table explains the interlock operation:

CONFIGURATION ↓	INTERLOCK MODE →	UNDRIVEN	DRIVEN
leave contact open		INTERLOCK	ENABLED
voltage level (0÷1V, ~5mA current) between pin 2 (high) and pin 3 (low)		INTERLOCK	ENABLED
short circuit pin 1 with pin 2, and pin 3 with pin 4		ENABLED	INTERLOCK
voltage level (4÷6V, ~5mA current) between pin 2 (high) and pin 3 (low)		ENABLED	INTERLOCK

The front panel Interlock LED is ON when the INTERLOCK is active; as INTERLOCK is active, channels are turned off at the fastest available rate, regardless the RAMP DOWN setting. To reset the Interlock flag, all switches must be placed on KILL and then on OFF.

HV ON signal

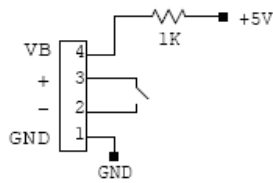


As at least one HV Channel is ON, pins 2 and 3 (- and +) are closed; the contact can be used to switch an external device supplied by an external source, otherwise the VB and GND references can be used to provide a TTL compatible level on pin 2 and 3.

In the first case (externally supplied device) the maximum allowed ratings are:

- Maximum voltage between + and -: 12V
- Maximum sink current across + and -: 100mA

In the latter case, to produce a TTL compatible HV ON Out, pin 3 (+) must be connected with pin 4 (VB) and pin 1 (GND) with pin 2 (-); see the diagram on the right

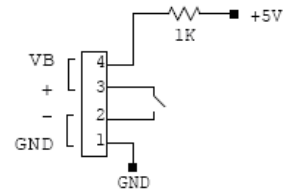

Remote communication control section



USB B TYPE USB

USB2.0 compliant

ETH 10/100 Base-T female connector TCP/IP

AC Input (back panel)



IEC 60 320 Socket with switch; to be connected to Mains 100 - 240 Vac (50 - 60 Hz) via provided power cord.

Two Fuses: 6.3x32 (1A); Retarded 250VAC

Channel Kill (back panel)



REMOTE KILL

AMP 280371-2

contact open: KILL

voltage level (0÷1V, ~5mA current) between pin 2 and 3: KILL

short circuit pin 1 with pin 2, and pin 3 with pin 4: ENABLED

voltage level (4÷6V, ~5mA current) between pin 2 and pin 3: ENABLED

Technical specifications table

Packaging				Desktop package (255x140x330mm); Weight: ~5.2kg			
No. of Channels				8			
Output Voltage				1 kV			
Polarity				Floating 5 kV			
Max. Output Current				1 mA			
Max. Channel Power				0.6W			
Voltage Set/Monitor Resolution				20 mV			
Current Set Resolution				20 nA			
Current Monitor Resolution		High Power		20 nA			
		High Resolution ¹		1 nA			
Ramp Up/Down				1÷100 Volt/sec, 1 Volt/sec step, settable for each channel			
Trip				Max. time an "overcurrent" is allowed to last (seconds). A channel in "overcurrent" works as a current generator; output voltage varies to keep the output current lower than the programmed value. "Overcurrent" lasting more than set value, causes the channel to "trip". Output voltage will drop to zero at the Ramp-down rate; in this case the channel is put in the off state. If trip= INFINITE, "overcurrent" lasts indefinitely. TRIP range: 0 ÷ 999.9 s; 1000 s = Infinite. Step = 0.1 s			
“Zero” current				Zero Current Detect channel parameter allows to sample the present IMon value; this value (IMonZero) can be then subtracted via the Zero Current Adjust parameter ENABLE, from the monitored current (IMon), to compensate the current offset; if ZCAjust = Enabled, then the IMon value is compensated. After the IMonZero value is sampled, Zero Current Detect, returns to Off. Allowed IMonZero values are from 0 to full scale. If Zero Current Adjust is DISABLED, the IMonZero compensation is neglected.			
Voltage Ripple	differential mode	20 ÷ 1000 Hz	Typ	<5mVpp			
			Max	<10 mVpp			
		1 ÷ 20000 kHz	Typ	<3 mVpp			
			Max	<5 mVpp			
	common mode		Typ	<10mVpp			
			Max	<15mVpp			
Voltage Monitor vs. Output Voltage Accuracy				±0.2% of VSet ± 0.2V from 10% to 100% f.s. ±0.2% of VSet ± 0.5V from 3% to 10% f.s.			
Voltage Set vs. Output Voltage Accuracy				±0.2% of VSet ± 0.2V from 10% to 100% f.s. ±0.2% of VSet ± 0.5V from 3% to 10% f.s			
Iset vs Output current accuracy				±0.5% of ISet ± 0.5µA from 3% to 100% f.s.			
IMon vs Output current accuracy				0.5% ±5nA with output current from 10% to 100% f.s. and constant voltage 2% ±5nA with output current from 1% to 10% f.s. and constant voltage			
Power requirements				100-240Vac; 50/60Hz; 0.8A rms max; fuse: 2xT1A 6.3x32 250Vac			
EMC qualification				CE Standards			
Safety Standard				ROHS			
Humidity range				0 ÷ 80% non condensing			
Operating temperature				0 ÷ 45°C			
Storage temperature				-10 ÷ 70°C			
MTBF				28000 hours			
Temperature coefficient				±50ppm/°C			
Stability				< 150mV (Vset = 750V; No Load; one day after 1 hour warm up)			
Long term stability				< 200mV (Vset = 750V; No Load; one week after 1 hour warm up)			
Load regulation				< 0.2% (Vset = 600V, Iout from 60µA to 850µA)			

¹ When High Resolution is selected (ImRange = LOW), Maximum Current (ISET) can be set in the 0 ÷ 100 µA range

3. Operating modes

Safety requirements and Initial inspection

N.B. read carefully the “Precautions for Handling, Storage and Installation” document provided with the product before starting any operation!

The following HAZARD SYMBOLS are reported on the unit:



CAUTION: indicates the need to consult the “Precautions for Handling, Storage and Installation” document provided with the product. **A potential risk exists if the operating instructions are not followed**



HIGH VOLTAGE: indicates the presence of electric shock hazards. Enclosures marked with these symbols should only be opened by CAEN authorized personnel.

To avoid risk of injury from electric shock, do not open this enclosure

To avoid potential hazards, use the product only as specified. Only qualified personnel should perform service procedures.

Avoid Electric Overload. To avoid electric shock or fire hazard, do not power a load outside of its specified range.

Avoid Electric Shock. To avoid injury or loss of life, do not connect or disconnect cables while they are connected to a voltage source.

Do Not Operate without Covers. To avoid electric shock or fire hazard, do not operate this product with covers or panels removed.

Do Not Operate in Wet/Damp Conditions. To avoid electric shock, do not operate this product in wet or damp conditions.

Do Not Operate in an Explosive Atmosphere. To avoid injury or fire hazard, do not operate this product in an explosive atmosphere.

Do Not Operate with Suspected Failures. If you suspect this product to be damaged, have it inspected by qualified service personnel.

Product cleaning

If required, the unit may be cleaned with isopropyl alcohol or deionised water and air dried. Clean the exterior of the product only. Do not apply cleaner directly to the items or allow liquids to enter or spill on the product.

Initial inspection

Prior to shipment, these units are inspected and found free of mechanical or electrical defects. Upon unpacking of the unit, inspect for any damage, which may have occurred in transport. The inspection should confirm that there is no exterior damage to the unit, such as broken knobs or connectors, and that the panels are not scratched or cracked. Keep all packing material until the inspection has been completed. If damage is detected, file a claim with carrier immediately and notify CAEN. Before installing the unit, make sure you have read thoroughly the safety rules and installation requirements, then place the package content onto your bench; you shall find the following parts:

- DT1415ET HV Power Supply;
- USB cable
- 10/100 BASE-T Ethernet cable
- Power cord

DT1415ET is housed in a Desktop package. The DT1415ET is an equipment for BUILDING-IN: it must be used on flat solid surfaces, such as a table.

Unit control can take place either locally, assisted by a 2.8" Touchscreen LCD or remotely, via USB, or Ethernet (see p. 17).

Local Control

To use the DT1415ET with Local control, connect the HV Channel Output to the load, connect the DT1415ET to the Mains through the power cord, provided with the kit, and switch it ON, via the backpanel switch. At power ON the Display shows the Main Menu:



At this point the module is ready to be operated locally. Tap on:

- BOARD icon to access BOARD parameters
- CHx icon to access CHANNELS parameters
- GROUP icon to access CHANNEL GROUP parameters

BOARD Settings



General board parameters (CONTROL can be operated both in LOCAL and REMOTE mode; other settings are allowed in LOCAL mode only; monitor is possible also with remote control) include:

Parameter:	Type:	Function:
Ethernet Configuration	Monitor/Set	Allows to access Ethernet Settings
INTERLOCK	Monitor/Set	Undriven / Driven (see p.8)
CONTROL	Monitor/Set	REMOTE: the module is controlled remotely; local monitor is allowed; LOCAL: the module is controlled locally; remote monitor is allowed
Ch to Group	Set	Allows to associate one or more channels to up to 4 groups
Configure	Set	Allows to save and load up to 5 group configurations

Tap on the Red "back" arrow to return to main Menu.

Group Configuration Menu

“Ch To Group” in the Board settings allows to access the following menu:



Tapping on the Boxes, the virtual keypad will allow to add channels to the relevant Group; confirm with “Enter”,

Tapping on the Group index, it will be possible to select the Turning ON/OFF sequence of the group channels: tap on ON (OFF) index to increase the channel Turning ON (OFF) priority; the Channel with lowest priority number will be turned ON/OFF first, the next one will be turned ON/OFF as the ON/OFF ramp of the previous is completed; see figure below:



When the desired sequence is set, tap “Save”, then the green button (right upper corner) to go back to Group Configuration Menu. When the channels are assigned to a group, they can be turned ON only if the corresponding front panel switches are all ON; to turn all channels in a group OFF, it is sufficient that only one switch of the group is OFF.

Tap on the Red “back” arrow to return to Board Parameters.

Configuration Menu

“Configure in the Board settings allows to access the following menu:



This Menu allows to save the channel configuration (see previous section) with all set parameters, into a Board Configuration with a custom name. Tapping on the configuration Index, it will be possible to increase it (0 to 4) and to save the corresponding configuration with such index and custom name.

Tap on the large Box: the virtual keyboard will allow to type the configuration name; confirm with “enter”.

Tapping on “Configuration”, the corresponding configuration can be monitored.


Once the configuration is done, it can be recorded with “Save” option.

To move to another configuration, shift by tapping the configuration index, and when the desired one is displayed, tap “Load” to make it effective.

Tap on the Red “back” arrow to return to Board Parameters.

Ethernet configuration

“Network” Icon in the Board settings allows to access Ethernet configuration menu

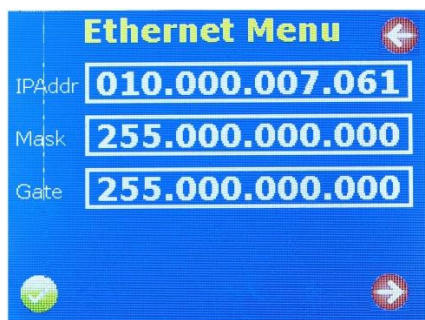


This option allows to configure the Ethernet settings; once they are done, tap the green button, but changes will only become effective at the next power ON. Tap the upper red arrow to go back. The lower red arrow allows to access to DHCP settings:



If a DHCP Server is available, then the module can be enabled or disabled as DHCP client; tap green button to save the new setting and go back to Main Menu: the DHCP server will automatically assign a new IP to the module at next Power On. Tap the upper red arrow to go back without changes.

Channel settings

From the Main Menu, tap the relevant channel icon (Ch#), to access its settings:

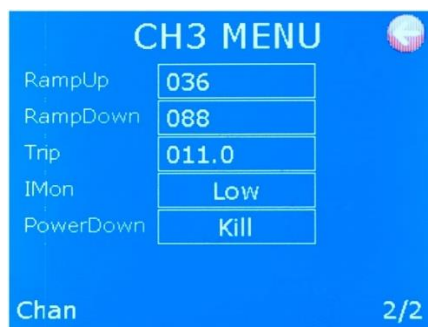

For each channel the following parameters can be programmed and monitored either locally or remotely (see p.17):




Parameter:	Function:	Unit:
Vmon	High Voltage Monitored value	Volt
Imon	Current Monitored value	μA
Status	ON/OFF; Ramp UP/DOWN; OVV; UNV; OVC; OVP; TRIP; OVT; KILL; INTLK; EN; DIS; LOCK	
Vset	High Voltage programmed value	Volt
Iset	Current Limit programmed value	μA
Ramp-Up	High Voltage increase rate	V/s
Ramp-Down	High Voltage decrease rate	V/s
Power Down	Power Down mode after channel TRIP or KILL	KILL or RAMP
Trip	Max time "overcurrent" allowed to last (1000 = infinite)	s
Imon Range	Current Monitor Zoom	H or L
ZC Detect	Stores IMON value (IMonZero) into memory for "zero current compensation"	ON/OFF
ZC Adjust	Subtracts IMonZero from "non compensated" current value	EN/DIS

To set one parameter, tap on the relevant name, and change and/or enter the desired value through the "virtual keypad"; confirm with "Enter". Tap the red arrow to go back to Main Menu.

The meaning of STATUS flag is as follows:

ON	Channel ON
OFF	Visible with channel turned OFF in local mode
UP	Channel ramping up
DOWN	Channel ramping down
OVV	Overvoltage: $V_{MON} > V_{SET} + (2\% \text{ of } V_{SET}) + 2V$
UNV	Undervoltage: $V_{MON} < V_{SET} - (2\% \text{ of } V_{SET}) - 2V$
OVC	Overcurrent, channel works as current generator and keeps current = ISET
OVP	Channel turned off because exceeded available power. In local mode, the flag is reset with channel control switch to KILL and then OFF. In remote mode, the flag is reset with Alarm reset.
TRIP	Channel turned off because OVC duration exceeded TRIP time. In local mode, the flag is reset with channel control switch to KILL and then OFF. In remote mode, the flag is reset with Alarm reset.
OVT	Over Temperature: channel temperature > 65°C.
KILL	Channel is off because was sent a KILL (front panel switch or back panel connector). In local mode, the flag is reset with channel control switch to KILL and then OFF. In remote mode, the flag is reset with Alarm reset.
INTLK	Channels are off because were sent an INTERLOCK. After the condition is removed, the flag must be reset. In local mode, the flag is reset with channel control switch to KILL and then OFF. In remote mode, the flag is reset with Alarm reset.
EN	Displayed in remote control mode and control switch set to ON/EN. Channel can be turned on.
DIS	Displayed in remote control mode and control switch set to OFF. Channel cannot be turned on.
LOCK	Ch control switch on ON/EN and one of these conditions is TRUE: - Power On in local mode - Switch from remote to local - New groups configuration in local mode In local mode, the flag is reset with channel control switch to KILL and then OFF. In remote mode, the flag is reset with Alarm reset.

Three types of Icon in the display status area indicate:

	OK status
	WARNING status
	ALARM status

Group Settings

From the Main Menu, tap the Group icon, to access its settings:



For the Group of all channels, same parameters of single channels can be programmed and monitored either locally or remotely (see p.17):

To set one parameter, tap on the relevant name, and change and/or enter the desired value through the “virtual keypad”; confirm with “Enter”. Tap the red arrow to go back to Main Menu. “Zoom” option allows to display large sized Vmon and Imon values.

Remote Control

Module control can take place remotely, via USB or Ethernet; an external PC is required (supported OS: Windows 7 or later; Linux kernel Rel. 2.4 or later). The connection can be performed via VT emulators (such as Tera Term), or via one of the available tools (see below).

The DT1415ET is identified as **SMART HV** by the available software tools.

Software tools (coming soon)

GECO2020

CAEN GECO2020 is a graphical application that allows to control the DT1415ET HV Desktop Power Supplies (and all other CAEN Power Supplies). Once the DT1415ET is correctly installed, download and install the GECO2020 software package related to your OS; follow the instructions in the GECO2020 User manual and the DT1415ET will be ready to be operated. For more info please visit www.caen.it (products>firmware/software section).

CAEN HV Wrapper

CAEN HV Wrapper is a library, available either as a set of ANSI C functions or LabVIEW™ VI's. Such set provides the software developer an unified software interface for the control of CAEN Power Supplies. This is a low-level application in which the writing of the Control SW is assigned to the user. It contains a generic software interface independent by the Power Supply models and by the communication path used to exchange data with them.

CAEN HV Wrapper is logically located between an higher level application, such as GECO2020, and the lower layer software libraries. For more info please visit www.caen.it (products>firmware/software section).

Power Supply Modules LabVIEW Instrument Driver

Power Supply Modules LabVIEW Instrument Driver is a set of VI'S, developed for LabVIEW 2017 and later releases (LabVIEW™ is a Trademark of National Instruments Corp.), that allow to configure and monitor all parameters of remotely controlled CAEN Programmable HV Power Supply modules. Host PC shall run LabVIEW 2017 or later releases and NI-VISA Run-Time Engine 17.

To install the Power Supply Modules LabVIEW Instrument Driver, go to CAEN web site in the "Software" area, download the Power Supply Modules LabVIEW Instrument Driver installation package and follow the Set Up instructions.

Unit installation

USB installation

Connect the HV Channel Output to the load
Connect the DT1415ET to the Mains (AC) via the separate power cord
Connect the DT1415ET to the PC via the USB cable
Power up the unit through the ON/OFF rear switch
Download and install the USB driver for your OS, available at the DT1415ET page on the www.caen.it site²
Now the DT1415ET is ready for operation, upon installation of one of the available software tools

Ethernet installation

Connect the HV Channel Output to the load
Connect the DT1415ET to the Mains (AC) via the separate power cord
Connect the Ethernet port of the unit to the relevant port of the PC, using the 10BASE-T Ethernet cable
Power up the unit through the ON/OFF rear switch
Now the unit is ready for operation, upon installation of one of the available software tools

² Linux OS Users: the Unit is automatically recognised by Kernel Linux 2.6.9 and higher; unit name is assigned to serial port with name /dev/ttyACM[x], where [x] is device number; for example 1st module connected is /dev/ttyACM0, 2nd module is /dev/ttyACM1 etc.

Module access via VT emulator

The connection can be performed via VT emulators; we suggest using Tera Term (see <https://tssh2.osdn.jp/index.html.en>)

USB

Launch the terminal emulator, select the serial communication link and set the virtual communication port associated to the module. Select USB connection and the used port number; set port as follows

baud rate 9600

Data bits: 8

Parity: none

stop bit: 1

Flow control: none

Launch communication

Type caen then <enter>;

Ethernet

Launch the terminal emulator, select port number **1470**

Please note that line editing must be disabled prior to Ethernet access (EnableLineMode=off in the Teraterm.ini configuration file).

Default settings are:

IP address 192.168.0.250

Subnet mask 255.255.255.0

Gateway 0.0.0.0

Launch communication

Type caen then <enter>;

as the communication is established, the Terminal Board Menu will be displayed:

```
#####  #####  ##  #####  ##  #####  #####  #####
##  ##  ##  ##  ##  ##  ##  ##  ##  ##  ##  ##
##  ##  ##  ##  ##  ##  ##  ##  ##  ##  ##  ##
##  ##  ##  ##  ##  ##  ##  ##  ##  ##  ##  ##
#####  ##  #####  #####  ##  #####  #####  #####

C.A.E.N. DT1415ET 8 Channels 1kV/1mA PS V1.00

B O A R D   M E N U

Display/Modify Channels
Format EEPROM
General Board Status
Ethernet Configuration
Update Firmware & Images
Configuration Set Up
Quit

Select Item █
```

Channels settings

By typing D on Terminal Board Menu, it is possible to access channels settings

To change one parameter: point the parameter with the “arrow keys”, and type the desired value, confirm by pressing <Enter>; Imon range, ZCDtc, ZCAAdj, Power and Power Down can be changed using the <Space> bar.

By typing G, the channels are accessed in “group” mode (one setting applies to all channels).

By typing P, it is possible to move from parameters page 1 to 2 and back

By typing R, it is possible to reset channels alarm status

By typing Q, it is possible to go back to Terminal Board Menu

C.A.E.N. DT1415ET 8 CH 1000V/1mA Power Supply V1.00

Channel	Vmon	Imon	Vset	Iset	Pw	Status
Ch0	0000.00	-000.0042 uA	0000.00	0100.00 uA	Off	Dis
Ch1	0000.02	-0000.131 uA	0000.00	0100.00 uA	Off	Dis
Ch2	0000.08	-0000.116 uA	0000.00	0100.00 uA	Off	Dis
Ch3	0000.00	-0000.183 uA	0000.00	0100.00 uA	Off	Dis
Ch4	0000.02	-0000.147 uA	0000.00	0100.00 uA	Off	Dis
Ch5	0000.00	-0000.194 uA	0000.00	0100.00 uA	Off	Dis
Ch6	0000.00	-0000.096 uA	0000.00	0100.00 uA	Off	Dis
Ch7	0000.06	+0000.007 uA	0000.00	0100.00 uA	Off	Dis

Group Mode Reset Alarm Quit Page

C.A.E.N. DT1415ET 8 CH 1000V/1mA Power Supply V1.00

Channel	Rup	Rdwn	Trip	PwDwn	ImRange	Group	OrdON	OrdOFF
Ch0	010	010	010.0	Ramp	Low	1	1	1
Ch1	010	010	010.0	Ramp	High	1	2	2
Ch2	010	010	010.0	Ramp	High	None	1	1
Ch3	010	010	010.0	Ramp	High	None	1	1
Ch4	010	010	010.0	Ramp	High	None	1	1
Ch5	010	010	010.0	Ramp	High	None	1	1
Ch6	010	010	010.0	Ramp	High	None	1	1
Ch7	010	010	010.0	Ramp	High	None	1	1

Group Mode Reset Alarm Quit Page

C.A.E.N. DT1415ET 8 CH 1kV/1mA Power Supply V1.12

Channel	ZCDtc	ZCAAdj	Imon
Ch0	Off	Dis	+0000.189 uA
Ch1	Off	Dis	+0000.222 uA
Ch2	Off	Dis	+0000.064 uA
Ch3	Off	Dis	+0000.172 uA
Ch4	Off	Dis	+0000.129 uA
Ch5	Off	Dis	+0000.289 uA
Ch6	Off	Dis	+0000.151 uA
Ch7	Off	Dis	+0000.005 uA

Group Mode Reset Alarm Quit Page

Parameter:	Function:	Unit:
Power	Channel HV enable	ON/OFF
Vmon	High Voltage Monitored value	Volt
Imon	Current Monitored value	μA
Status (see p.14)	ON/OFF; Ramp UP/DOWN; OV; UNV; OVC; OVP; TRIP; OVT; KILL; INTLK; EN; DIS; LOCK	
Vset	High Voltage programmed value	Volt
Iset	Current Limit programmed value	μA

Ramp-Up	Maximum High Voltage increase rate	V/s
Ramp-Down	Maximum High Voltage decrease rate	V/s
Power Down	Power Down mode after channel TRIP	KILL or RAMP
Trip	Max time "overcurrent" allowed to last (1000 = ∞)	s
Imon Range	Current Monitor Zoom	H or L
Group	Assign channel to one group	1 to 4
OrdON	Channel turning ON priority in a group (1 = highest)	1 to group multiplicity
OrdOFF	Channel turning OFF priority in a group (1 = highest)	1 to group multiplicity

Format EEPROM

By typing F on Terminal Board Menu it is possible to access the format EEPROM menu (restores factory settings).

Type y to format or n to go back to Terminal Board Menu.

```
C.A.E.N. DT1415ET 8 CH 1000V/1mA V1.00 Addr 00
Format EEPROM. Are you sure ? [y/n]
```

General Board Menu

By Typing G, it is possible to access General Board settings:

```
C.A.E.N. DT1415ET 8 CH 1000V/1mA V1.00 Addr 00
Serial Number      : 94
Interlock Active   : UNDRIVEN
Press 'I' To Change Interlock Mode Or Any Key To Quit
```

To change Interlock Mode (Undriven/Driven, see p. 8), type I; any key to return to Main menu

Ethernet configuration

To configure the Ethernet Port, Type E; the following screen will open:

```
C.A.E.N. DT1415ET 8 CH 1kV/1mA Power Supply V1.12
MACAddress : d8 80 39 97 4b da
IPAddress  : 192.168.000.002
Mask       : 255.255.255.000
Gate       : 255.255.255.255
DHCP       Disabled
Save Quit
```

At first Power On the module is configured with default static IP (factory setting); such IP can be updated using the I(PAddress), M(ask) or G(ate) to select the fields, typing the new values and confirming with <Enter>.

Type S to save the new setting in the EEPROM and go back to Main Menu, Q to go back without changes.

The new setting will become active at next Power On; if a DHCP Server is available, then the module can be enabled or disabled as DHCP client; type S to save the new setting in the EEPROM and go back to Main Menu: the DHCP server will automatically assign a new IP to the module at next Power On.

Upgrade Menu

It is possible to either upgrade the unit firmware or the display images and font (only via USB).

To upgrade them:

- download from www.caen.it unit page the required file for your module
- connect to the module via USB using [Tera Term VT Emulator](#)
- in the Tera Term options, select “set up” > “serial port” and enter the following settings

Baud rate:	9600
Data:	8 bit
Parity:	none
Stop:	1 bit
Flow control:	none
Transmit delay	
0 msec/char	1 msec/line

- click OK to confirm
- type U to access the upgrade menu in the Terminal Board Menu:

```
C.A.E.N. DT1415ET 8 CH 1000V/1mA V1.00 Addr 00

Firmware and Image Update Menu

1: Update firmware
2: Update image and font

Q: Quit
```

For example, select 1 = update firmware; (for option 2, the update procedure is the same)

```
C.A.E.N. DT1415ET 8 CH 1000V/1mA V1.00 Addr 00

Firmware Update. Are you sure ? [y/n]
```

- Type y
- The following message will be shown:

```
Disconnect link and cable then reconnect to enter boot mode.
```

- Select “File” > disconnect
- unplug the USB cable
- do not turn off the module!
- connect once again to the module, via USB
- the following message will be shown:

```
!!! Checksum Error
Firmware Update...press any key to start
```

- Press any key

- Wait until the following message is shown:

```
Flash Erased!!!
Send file to upload
```

- Select "File" > send file
- Browse the image file (for example DT1415.102)
- Select "open"
- Wait the upload to complete until this message is shown:

```
File Loaded.
Disconnect link and cable then reconnect to launch application...
```

- Select "File" > disconnect
- unplug the USB cable
- connect once again to the module, via USB

now the unit is ready to operate running the upgraded firmware

Board Configuration page

By typing C on Terminal Board Menu, it is possible to access the module Configuration

This Menu allows to "freeze" the present Group configuration (see p. 18), into a Board Configuration with a custom name.

Typing P, it will be possible to increase it (0 to 4) and to save the corresponding configuration with such index and custom name, by typing S.

Typing N will allow to write the configuration name; confirm with "enter".

To move to another configuration, shift by typing P, and when the desired one is displayed, type L, to make it effective.

Type Q to go back to Terminal Board Menu.

```
C.A.E.N. DT1415ET 8 CH 1000V/1mA Power Supply V1.00
Configuration 0 : ASD

      Vset      Iset      Rup  Rdwn  Trip  PwDwn  ImRange  Group  OrdON  OrdOFF
CH0  0000.00  0100.00  010  010   010.0 Ramp   Low      1      1      1
CH1  0000.00  0100.00  010  010   010.0 Ramp   Low      1      2      2
CH2  0000.00  0100.00  010  010   010.0 Ramp   Low     None      1      1
CH3  0000.00  0100.00  010  010   010.0 Ramp   Low     None      1      1
CH4  0000.00  0100.00  010  010   010.0 Ramp   Low     None      1      1
CH5  0000.00  0100.00  010  010   010.0 Ramp   Low     None      1      1
CH6  0000.00  0100.00  010  010   010.0 Ramp   Low     None      1      1
CH7  0000.00  0100.00  010  010   010.0 Ramp   Low     None      1      1

Save      Load      Name      Quit      Page
```

Communication Protocol

The Protocol is based on commands made of ASCII characters strings.

Command Format

The Format of a command string is the following :

\$CMD:***,CH:*,PAR:***,VAL:xxx.xx<CR,LF> con

CMD : SET,MON

CH : Channel (0..NUMCH)

PAR : VSET,ISET,ON ...

VAL : value

NUMCH = 8

CH = NUMCH command related to all channels (group).

Response format :

#CMD:***,VAL:xxx.xx<CR,LF> con

CMD : OK,ERR

VAL : numerical value must have a Format compatible with resolution and range

Format of response string

Format response in case of error

String	Function
#CMD:ERR	Wrong command Format or command not recognized
#CH:ERR	Channel Field not present or wrong Channel value
#PAR:ERR	Field parameter not present or parameter not recognized
#VAL:ERR	Wrong set value (<Min or >Max)
#LOC:ERR	Command SET with module in LOCAL mode

Each string is terminated by < CR, LF >

Format response in case of correct command

String	Function
#CMD:OK	command Ok
#CMD:OK,VAL:*	command Ok * = value for command to individual Channel
#CMD:OK,VAL:*,*,*,*	command Ok *,*,*,* = values Ch0..NUMCH for command to all Channels

Numerical value Field '**VAL**' has Format compatible (comma and decimal part) with the resolution and the range related to the parameter. Each string is terminated by < CR, LF >

MONITOR commands related to the Channels

The following table contains the strings to be used to handle monitor commands related to the Channels.

The '**X**' in the Field 'Channel' can be set in the '**0..NUMCH**' range.

When '**X=NUMCH**' the module returns the values of the parameter of all Channels.

String	Function	Units
\$CMD:MON,CH:X,PAR:VSET	Read out VSET value	V
\$CMD:MON,CH:X,PAR:VMIN	Read out VSET minimum value	V
\$CMD:MON,CH:X,PAR:VMAX	Read out VSET maximum value	V
\$CMD:MON,CH:X,PAR:VDEC	Read out VSET number of decimal digits	
\$CMD:MON,CH:X,PAR:VRES	Read out VSET VMON resolution	V
\$CMD:MON,CH:X,PAR:VMON	Read out VMON value	V
\$CMD:MON,CH:X,PAR:ISET	Read out ISET value	μA
\$CMD:MON,CH:X,PAR:IMIN	Read out ISET minimum value	μA
\$CMD:MON,CH:X,PAR:IMAX	Read out ISET max value	μA
\$CMD:MON,CH:X,PAR:IMON	Read out IMON value	μA
\$CMD:MON,CH:X,PAR:IMRES	Read out IMON resolution	μA

String	Function	Units
\$CMD:MON,CH:X,PAR:ISRES	Read out ISET resolution	μA
\$CMD:MON,CH:X,PAR:IMRANGE	Read out IMON RANGE value	HIGH / LOW
\$CMD:MON,CH:X,PAR:IMDEC	Read out IMON number of decimal digits	
\$CMD:MON,CH:X,PAR:ISDEC	Read out ISET number of decimal digits	
\$CMD:MON,CH:X,PAR:SWVMAX	Read out software VMAX value	V
\$CMD:MON,CH:X,PAR:RUP	Read out RAMP UP value	V/S
\$CMD:MON,CH:X,PAR:RUPMIN	Read out RAMP UP minimum value	V/S
\$CMD:MON,CH:X,PAR:RUPMAX	Read out RAMP UP maximum value	V/S
\$CMD:MON,CH:X,PAR:RUPDEC	Read out RAMP UP number of decimal digits	
\$CMD:MON,CH:X,PAR:RUPRES	Read out RAMP UP resolution	V/S
\$CMD:MON,CH:X,PAR:RDWN	Read out RAMP DOWN value	V/S
\$CMD:MON,CH:X,PAR:RDWMIN	Read out RAMP DOWN minimum value	V/S
\$CMD:MON,CH:X,PAR:RDWMAX	Read out RAMP DOWN maximum value	V/S
\$CMD:MON,CH:X,PAR:RDWRES	Read out RAMP DOWN resolution	V/S
\$CMD:MON,CH:X,PAR:RDWDEC	Read out RAMP DOWN number of decimal digits	
\$CMD:MON,CH:X,PAR:TRIP	Read out TRIP time value	S
\$CMD:MON,CH:X,PAR:TRIPMIN	Read out TRIP time minimum value	S
\$CMD:MON,CH:X,PAR:TRIPMAX	Read out TRIP time maximum value	S
\$CMD:MON,CH:X,PAR:TRIPRES	Read out TRIP time resolution	S
\$CMD:MON,CH:X,PAR:TRIPDEC	Read out TRIP time number of decimal digits	
\$CMD:MON,CH:X,PAR:PDWN	Read out POWER DOWN value	RAMP / KILL
\$CMD:MON,CH:X,PAR:STATUS	Read out Channel status value (XXXXX)	
\$CMD:MON,CH:X,PAR:CHTOGR	Returns the group # to which channel x is assigned	
\$CMD:MON,CH:X,PAR:ONORD	Returns Turning On priority of ch.x; (1 = channel turned on 1 st)	
\$CMD:MON,CH:X,PAR:OFFORD	Returns Turning Off priority of ch.x; (1 = channel turned on 1 st)	
\$CMD:MON,CH:<ch>,PAR:ZCDTC	Status of ZC Detect; ON = offset current is getting stored; OFF = ready to store offset current	
\$CMD:MON,CH:<ch>,PAR:ZCADJ	Status of ZC Adjust (EN/DIS)	

Meaning of STATUS bits (value read in decimal Format)

Bit	Function
Bit 0 → ON	1 : ON 0 : OFF
Bit 1 → RUP	1 : Channel Ramp UP
Bit 2 → RDW	1 : Channel Ramp DOWN
Bit 3 → OVC	1 : IMON >= ISET
Bit 4 → OVV	1 : VMON > VSET + (2% of VSET) + 2V
Bit 5 → UNV	1 : VMON < VSET – VSET - (2% of VSET) - 2V
Bit 6 → TRIP	1 : Ch OFF via TRIP (Imon >= Iset during TRIP)
Bit 7 → OVP	1 : Output Power > Max
Bit 8 → TWN	1: Temperature Warning
Bit 9 → OVT	1: TEMP > 65°C
Bit 10 → KILL	1 : Ch in KILL via front panel and back panel
Bit 11 → INTLK	1 : Ch in INTERLOCK via front
Bit 12 → ISDIS	1: Ch is disabled
Bit 13 → FAIL	1: Generic fail
Bit 14 → LOCK	1: Ch control switch on ON/EN and one of these condition is TRUE: - Power On in local mode - Switch from remote to local - New groups configuration in local mode

MONITOR commands related to the module

The following table shows the strings to be used to handle monitor commands related to the module.

String	Function
\$CMD:MON,PAR:BDNAME	Read out module name
\$CMD:MON,PAR:BDNCH	Read out module Channels number
\$CMD:MON,PAR:BDFREL	Read out Firmware Release
\$CMD:MON,PAR:BDSNUM	Read out module serial number
\$CMD:MON,PAR:BDILK	Read out INTERLOCK status (YES/NO)
\$CMD:MON,PAR:BDILKM	Read out INTERLOCK mode (DRIVEN/UNDRIVEN)
\$CMD:MON,PAR:BDCTR	Read out Control Mode (LOCAL/REMOTE)
\$CMD:MON,PAR:BDALARM	Read out Board Alarm status value (XXXXX)
\$CMD:MON,PAR:BDCFRD0..4	Readout of configuration 0..4; returns Configuration name; VSET0..LastCH (5 decimal digits; multiply for VSRES to obtain VSET); SVMAX0..LastCH (5 decimal digits); ISET0..LastCH (5 decimal digits; multiply for ISETRES to obtain ISET); RUP0..LastCH (3 decimal digits); RDW0..LastCH (3 decimal digits); TRIP0..LastCH (5 decimal digits; multiply for TRIPRES to obtain TRIP); GROUPO..LastCH (1 decimal digit); OrdONO..LastCH (1 decimal digit); OrdOFF0..LastCH (1 decimal digit); FLAGO..LastCH (1 decimal digit; bit 0: Power Down Mode, 0 = Kill, 1 0 Ramp; bit 1 = IMRANGE, 0 = Low, 1 = High); N.B.: each value is separated by “;”

Meaning of Board Alarm value

Value	Function
0x22C0	= alarm bits mask The board is in Internal Comm Fail or Some channels are in TRIP or in OverPower or in OverTemperature bit 13 -> INT COMM FAIL bit 9 -> OVT bit 7 -> OVP bit 6 -> TRIP

SET commands related to the Channels

The following table contains the strings to be used to handle set commands related to the Channels.

The 'X' in the Field 'Channel' can be set to the '0..NUMCH' range.

When 'X=NUMCH' the command is issued to all Channels.

String	Function	Units
\$CMD:SET,CH:X,PAR:VSET,VAL:value	Set VSET value	V
\$CMD:SET,CH:X,PAR:ISET,VAL:value	Set ISET value	μA
\$CMD:SET,CH:X,PAR:SWVMAX,VAL:value	Set MAXVSET value	V
\$CMD:SET,CH:X,PAR:RUP,VAL:value	Set RAMP UP value	V/s
\$CMD:SET,CH:X,PAR:RDWN,VAL:value	Set RAMP DOWN value	V/s
\$CMD:SET,CH:X,PAR:TRIP,VAL:value	Set TRIP time value	s
\$CMD:SET,CH:X,PAR:PDWN,VAL:RAMP/KILL	Set POWER DOWN mode	RAMP / KILL
\$CMD:SET,CH:X,PAR:IMRANGE,VAL:HIG/LOW	Set IMON RANGE	HIGH / LOW
\$CMD:SET,CH:X,PAR:ON	Set Ch ON	
\$CMD:SET,CH:X,PAR:OFF	Set Ch OFF	
\$CMD:SET,CH:X,PAR:CHTOGR,VAL:value	Assign ch. “x” to group “value”=1..NUMGR; NUMGR=4; 0: ch removed from group	
\$CMD:SET,CH:X,PAR:ONORD,VAL:value	Ch. Turning On priority; val = 1.. NUMGR (1 = channel turned on 1 st); if the parameter is changed for an active channel (ch. ON or in an active group), then error is reported #CH:ERR. If a channel is assigned priority larger than group multiplicity or 0, then #VAL:ERR error is reported.	
\$CMD:SET,CH:X,PAR:OFFORD,VAL:value	Ch. Turning Off priority; val = 1.. NUMGR (1 = channel turned off 1 st); if the parameter is changed for an active channel (ch. ON or in an active group), then error is reported #CH:ERR. If a channel is assigned priority larger than group multiplicity or 0, then #VAL:ERR error is reported.	

\$CMD:SET,CH:<ch>,PAR:ZCDTC,VAL:ON	If ON, it stores the present IMon value (IMonZero) into memory for “zero current compensation” purposes (see description below); if OFF, the unit is ready to store IMon as IMonZero. After IMonZero is stored, the parameter returns to OFF
\$CMD:SET,CH:<ch>,PAR:ZCDTC,VAL:OFF	
\$CMD:SET,CH:<ch>,PAR:ZCADJ,VAL:EN	The stored IMonZero value via ZCDetect option is subtracted from the measured, “non compensated” IMON value. The returned “compensated” IMON value will be then the difference between measured and stored values;
\$CMD:SET,CH:<ch>,PAR:ZCADJ,VAL:DIS	The returned IMON value is not compensated

SET commands related to the module

String	Function
\$CMD:SET,PAR:BDILKM,VAL: DRIVEN/UNDRIVEN	Set Interlock Mode
\$CMD:SET,PAR:BDCLR	Clear alarm signal
\$CMD:SET,PAR:BDCFWRO..4	Write configuration 0..4
\$CMD:SET,PAR:BDCFLDO..4	Load configuration 0..4
\$CMD:SET,PAR:BDCNAME0..4,VAL:XXXX	Name of configuration

EPICS Service (coming soon)

EPICS (Experimental Physics and Industrial Control System) is a set of software tools and applications which provide a software infrastructure for use in building distributed control systems, widely used to control experimental Physics and industrial electronics.

CAEN provides EPICS Input/Output Controller (IOC) for DT1415ET DeskTop HV Power Supplies, that allows access to a Process Variable using the Channel Access Protocol. Process Variable is a named piece of data associated with the module (e.g. status, readback, setpoint, parameter).

Client software (EPICS Channel Access Client), which requests access to a Process Variable, runs on the Host PC and is connected to the modules via either TCP/IP or USB.


The EPICS IOC is available for free download on www.caen.it website (Power Supply Software section)

More information about EPICS and a list of available client applications can be found at:

<http://www.aps.anl.gov/epics/>.

**CAEN S.p.A.**

Via Vetràia 11
55049 - Viareggio
Italy
Phone +39 0584 388 398
Fax +39 0584 388 959
info@caen.it
www.caen.it

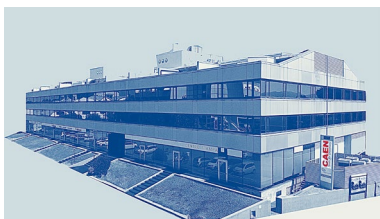**CAEN GmbH**

Brunnenweg 9
64331 Weiterstadt
Germany
Tel. +49 (0)212 254 4077
Mobile +49 (0)151 16 548 484
info@caen-de.com
www.caen-de.com

CAEN Technologies, Inc.

1 Edgewater Street - Suite 101
Staten Island, NY 10305
USA
Phone: +1 (718) 981-0401
Fax: +1 (718) 556-9185
info@caentechnologies.com
www.caentechnologies.com

CAENspa INDIA Private Limited

B205, BLDG42, B Wing,
Azad Nagar Sangam CHS,
Mhada Layout, Azad Nagar, Andheri (W)
Mumbai, Mumbai City,
Maharashtra, India, 400053
info@caen-india.in
www.caen-india.in



Copyright © CAEN SpA. All rights reserved. Information in this publication supersedes all earlier versions. Specifications subject to change without notice.