



Enable Windows to automatically restart after BSOD:


1. Log into instrument with the daily password
2. Go to "System tools" and select "Exit to operating system"

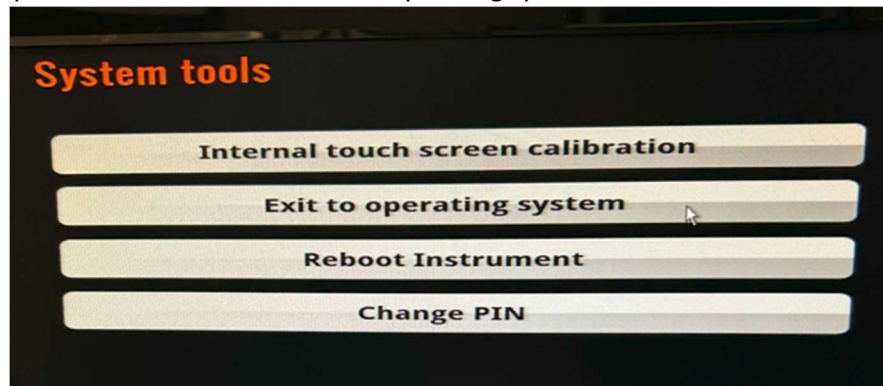

- a.
3. Type ***sysdm.cpl*** and hit enter

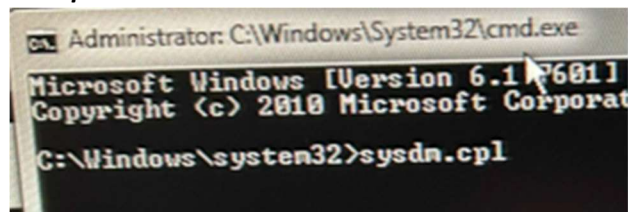


- a.
4. Select the ***Advanced tab*** and under the ***Startup and Recovery*** section click on the ***settings*** button

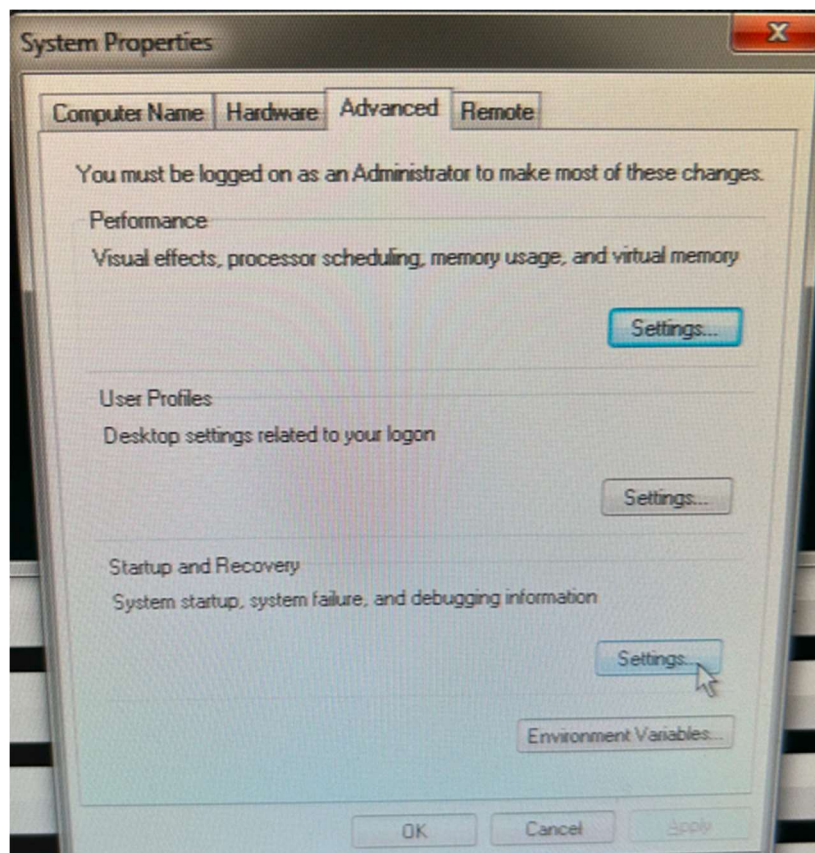

a.

5. Under the **system failure** section, check **Automatically restart**.

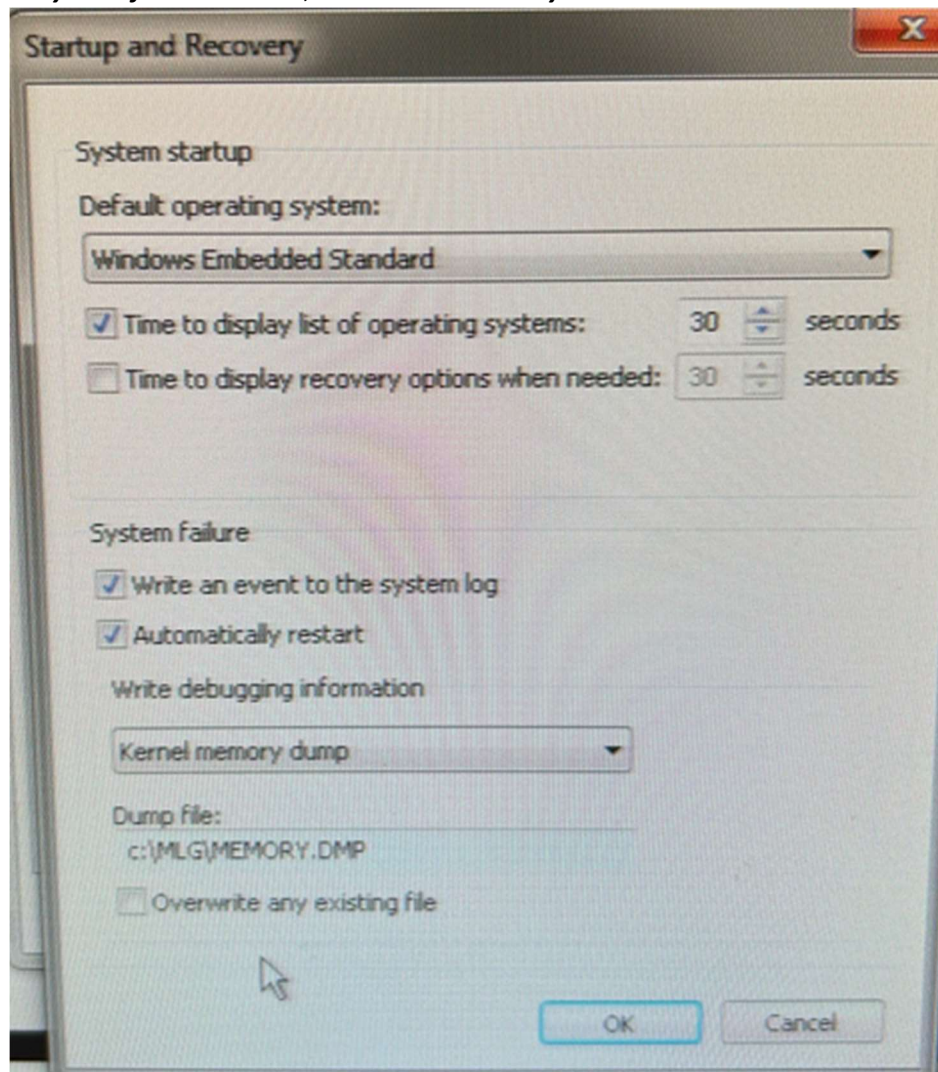

- a.
6. It is not required, but please also uncheck **Overwrite any existing file** to allow windows to create a new crash report for each blue screen.