

PROGRAM **Model 10 Exerciser**SIDE **ONE****CALCULATOR PROGRAM CARD**
HEWLETT-PACKARD**PART NO.**
9162 - 0012

Part No. 09810-90021

SIDE **TWO**PROGRAM **Model 10 Exerciser**

CONDENSED USER INSTRUCTIONS

Detailed user instructions are presented in the Operating Manual under "EXERCISER PROGRAM". You must adapt the Model 10 Exerciser to test your particular memory configuration.

1. Press: **RUN** **STOP** **END** **FIX ()** **0**

2. Insert card side(s) corresponding to the program steps in the table below.

Press: **LOAD** before inserting each card side.

Program Steps	Insert Card Side(s)
500 (Basic)	ONE
1000 (Opt. 002)	ONE and TWO
2000 (Opt. 003)	ONE, TWO, THREE and FOUR

3. Press: **END**

CONTINUE

temporary x	0.
accumulator y	500.
keyboard x	51.

Perform step 4 only if your Model 10 has a memory greater than 500 Program Steps.

4. Enter the number of program steps (1000 or 2000) into Y-register by pressing **2** **x** or **4** **x** respectively.

5. Enter the number of data registers, 51 (Basic) or 111 (Opt. 001), into the X-register by pressing **5** **1** or **1** **1** **1** respectively.

*Correct Display: Flashing

6. Press:

STOP

temporary x	N.
accumulator y	51. or 111.
keyboard x	N.

N = 1, 2, 3, ... N max, Cyclic

7. To stop Exerciser, press


STOP

The Y-register flashes the number of data registers entered in step 5.

*The screen will remain blank for varying time periods between displays.

PROGRAM **Model 10 Exerciser**


SIDE **THREE**

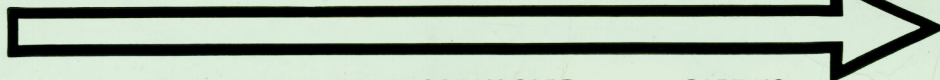

CALCULATOR PROGRAM CARD
HEWLETT-PACKARD

PART NO.
9162 - 0012

Part No. 09810-90021



SIDE **FOUR** PROGRAM **Model 10 Exerciser**

EXERCISER CARDS

HEWLETT-PACKARD CALCULATOR

