


Technics

RS1500, RS1506, RS1700

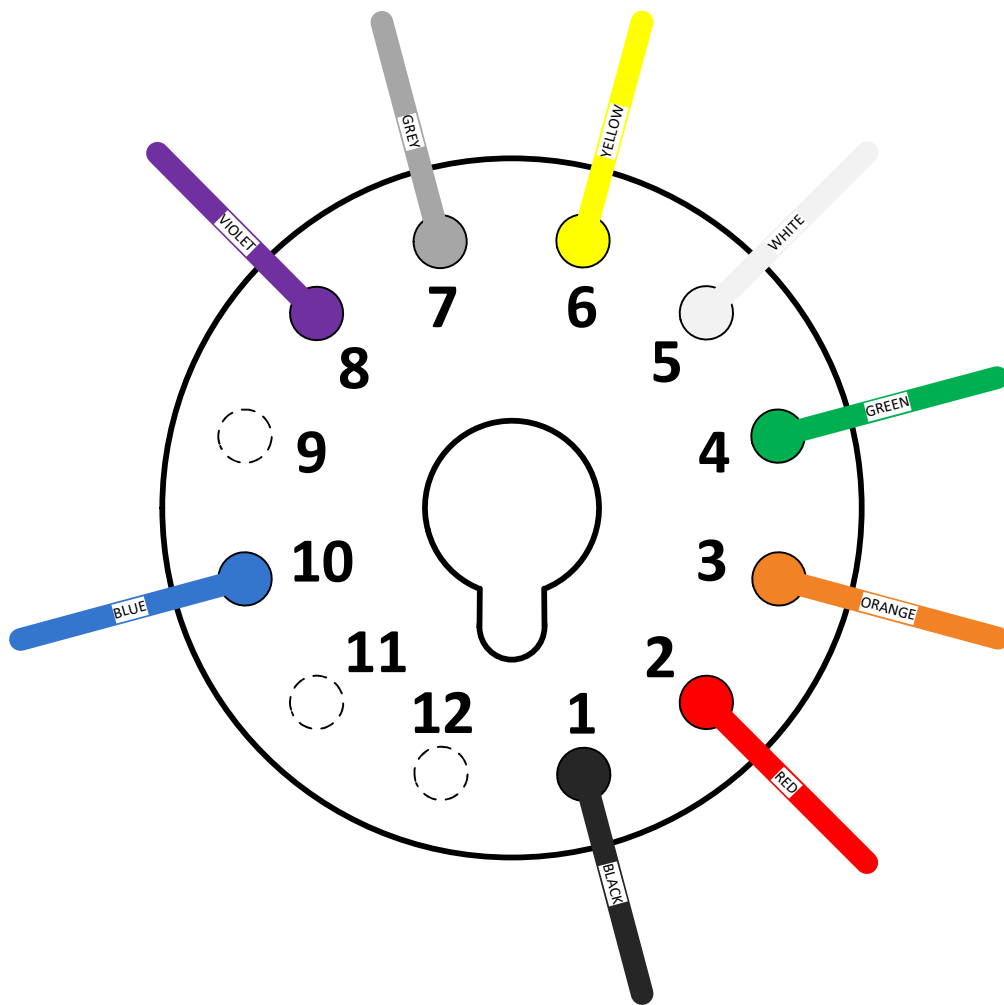


(View from the front of the socket)

| | | | | | |
|---|--------------|--------|----|----------------|--------|
| 1 | GROUND (GND) | BLACK | 7 | PAUSE | GREY |
| 2 | PLAY-REVERSE | RED | 8 | PLAY-FORWARD | VIOLET |
| 3 | STOP | ORANGE | 9 | DO NOT CONNECT | |
| 4 | REWIND | GREEN | 10 | RECORD | BLUE |
| 5 | GROUND (GND) | WHITE | 11 | DO NOT CONNECT | |
| 6 | FAST-FORWARD | YELLOW | 12 | DO NOT CONNECT | |

* PLAY-REVERSE only for RS1700 model. Leave unconnected for RS1500, RS1506.
Brown (AUTO-MUTE) wire is unused. Leave unconnected.

Akai

GX-635, GX-636

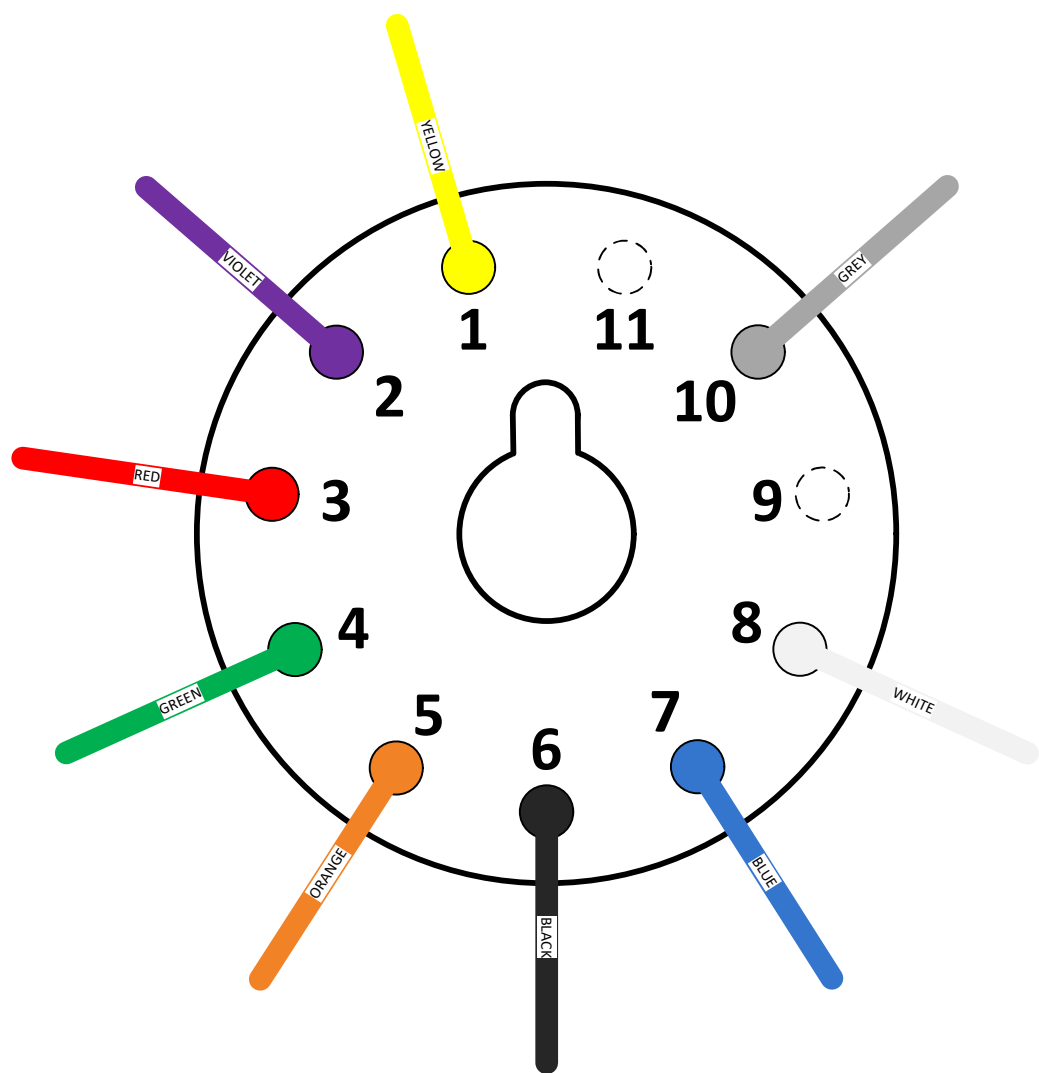


(View into the socket)

| | | | | | |
|---|---------------|---|----|----------------|---|
| 1 | FAST-FORWARD |  | 7 | RECORD |  |
| 2 | PLAY-FORWARD |  | 8 | GROUND (GND) |  |
| 3 | PLAY-REVERSE* |  | 9 | DO NOT CONNECT | |
| 4 | REWIND |  | 10 | PAUSE |  |
| 5 | STOP |  | 11 | DO NOT CONNECT | |
| 6 | GROUND (GND) |  | | | |

* PLAY-REVERSE only for models which support it.
Brown wire (AUTO-MUTE) is unused. Leave unconnected.

Akai

GX-747, GX-77

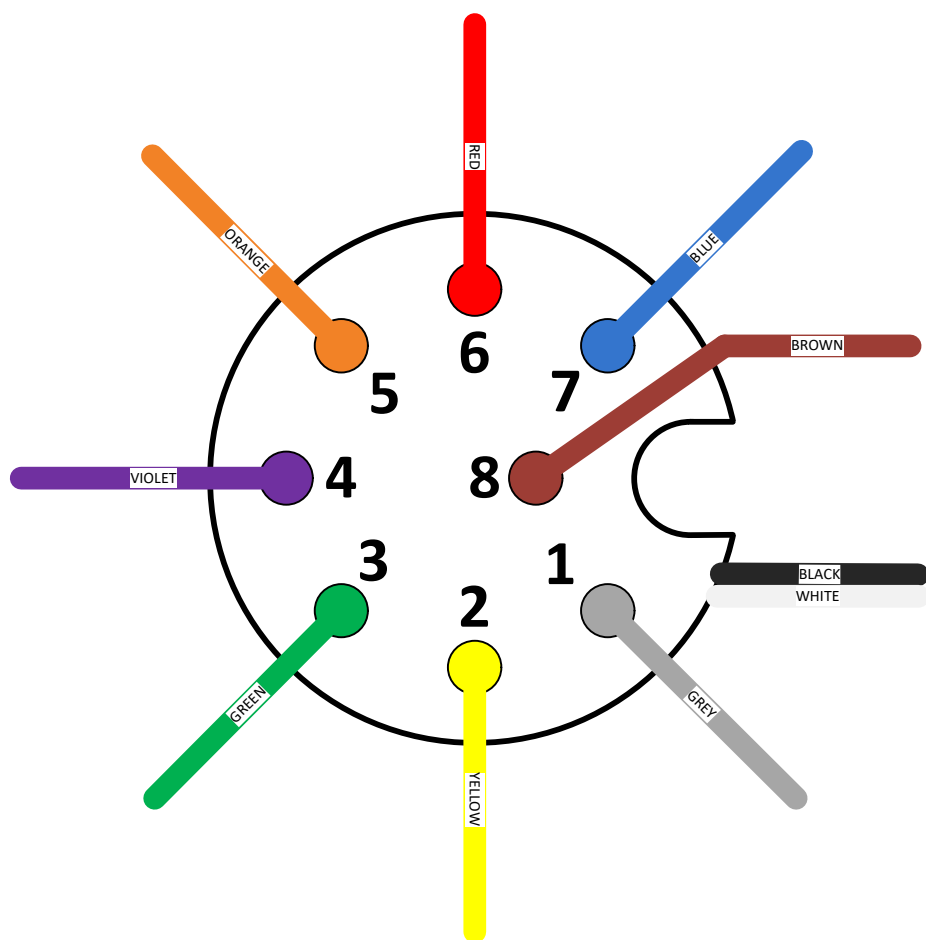

(View into the socket)

| | | | | | |
|---|--------------|--------|----|--------------|-------|
| 1 | PAUSE | GREY | 6 | PLAY-REVERSE | RED |
| 2 | FAST-FORWARD | YELLOW | 7 | RECORD | BLUE |
| 3 | REWIND | GREEN | 8 | AUTO-MUTE | BROWN |
| 4 | PLAY-FORWARD | VIOLET | SH | GROUND (GND) | WHITE |
| 5 | STOP | ORANGE | SH | GROUND (GND) | BLACK |

SH = connector shell