

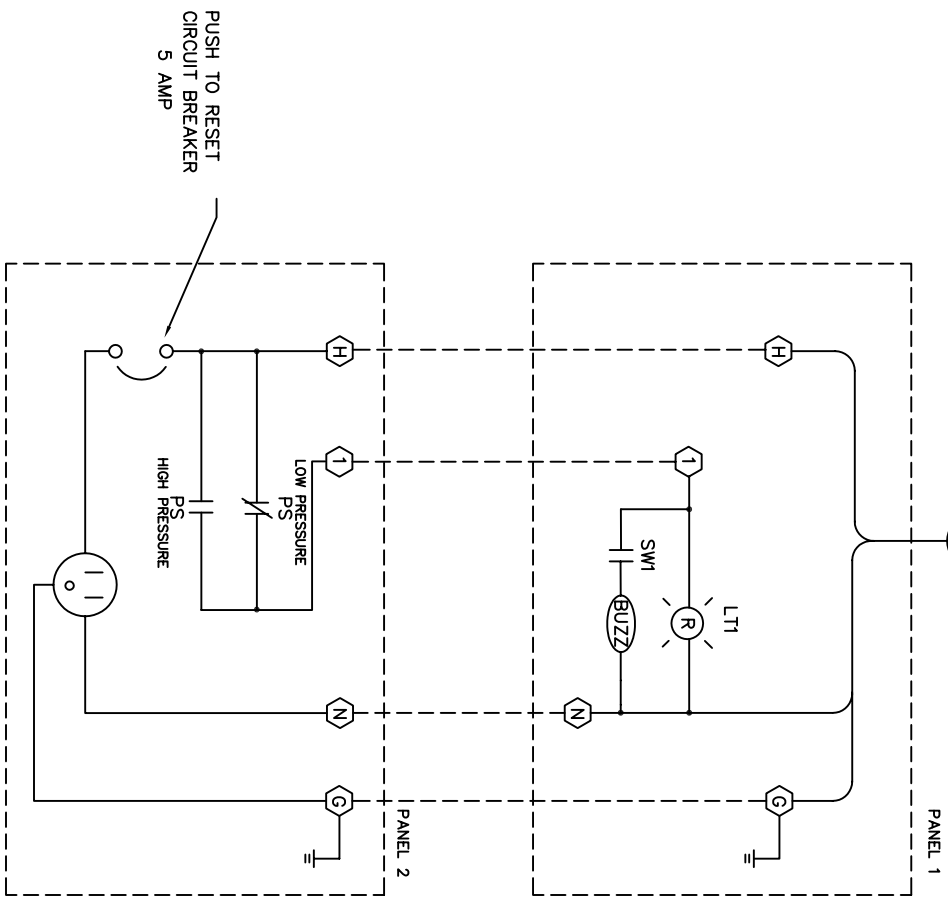


SETTING HIGH LEVEL PRESSURE SWITCH

BRING PLANT TO OPERATING WATER LEVEL WITH COMPRESSOR TURNED ON. USING PROPERLY SIZED SCREW DRIVER, TURN HIGH LEVEL ALARM ADJUSTMENT SCREW CLOCKWISE UNTIL ALARM OCCURS, THEN TURN THE SCREW COUNTER-CLOCKWISE UNTIL ALARM STOPS.

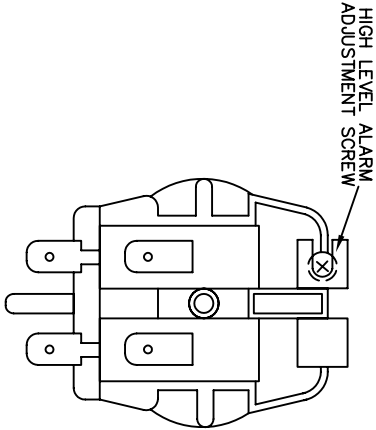

SCHEMATIC DIAGRAM

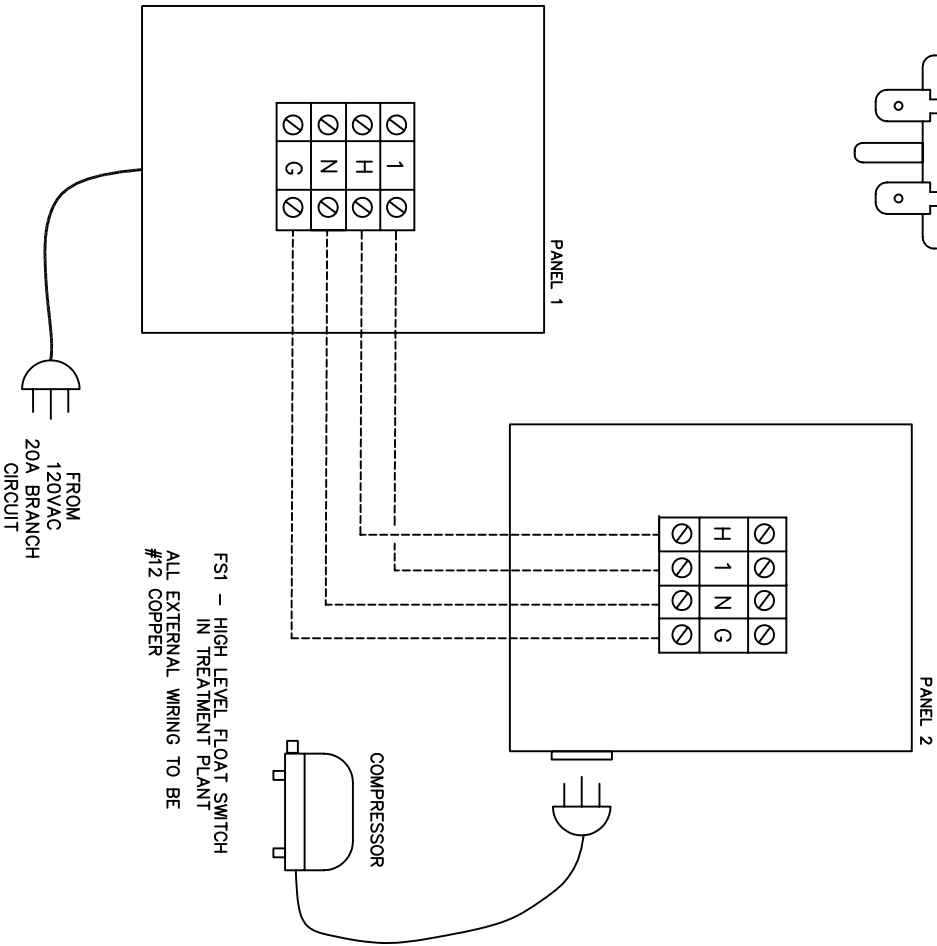

EXTERNAL WIRING