


## SETTING HIGH LEVEL PRESSURE SWITCH

BRING PLANT TO OPERATING WATER LEVEL WITH COMPRESSOR TURNED ON.  
USING PROPERLY SIZED SCREW DRIVER, TURN HIGH LEVEL ALARM ADJUSTMENT  
SCREW CLOCKWISE UNTIL ALARM OCCURS. THEN TURN THE SCREW COUNTER-CLOCKWISE  
UNTIL ALARM STOPS.

HIGH LEVEL ALARM  
ADJUSTMENT SCREW

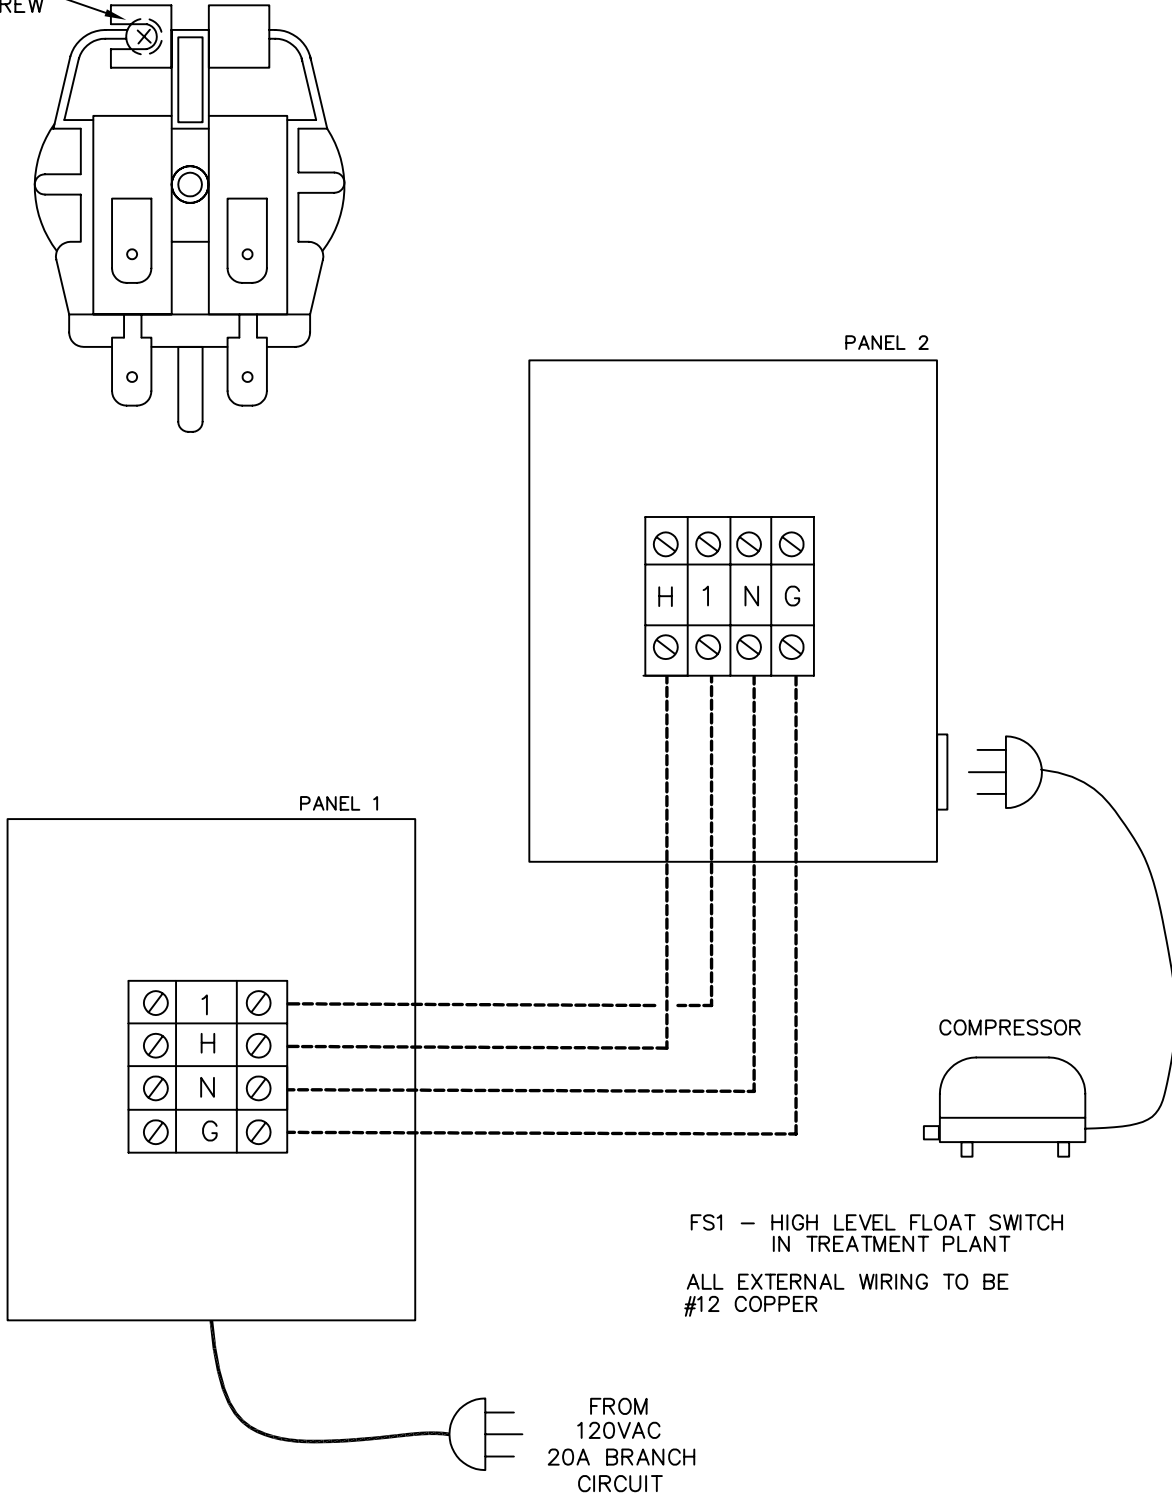

EXTERNAL WIRING  
CP-2205/SP