

INFILTRATOR®


water technologies

CP2305R1/UV
CONTROL PANEL


Infiltrator Water Technologies
15785 Industry Way
Walker, LA 70785
(225) 665-6162 Fax (800) 219-9183

CP-2305R1/UV

TO 120VAC
GFI RECEPTACLE




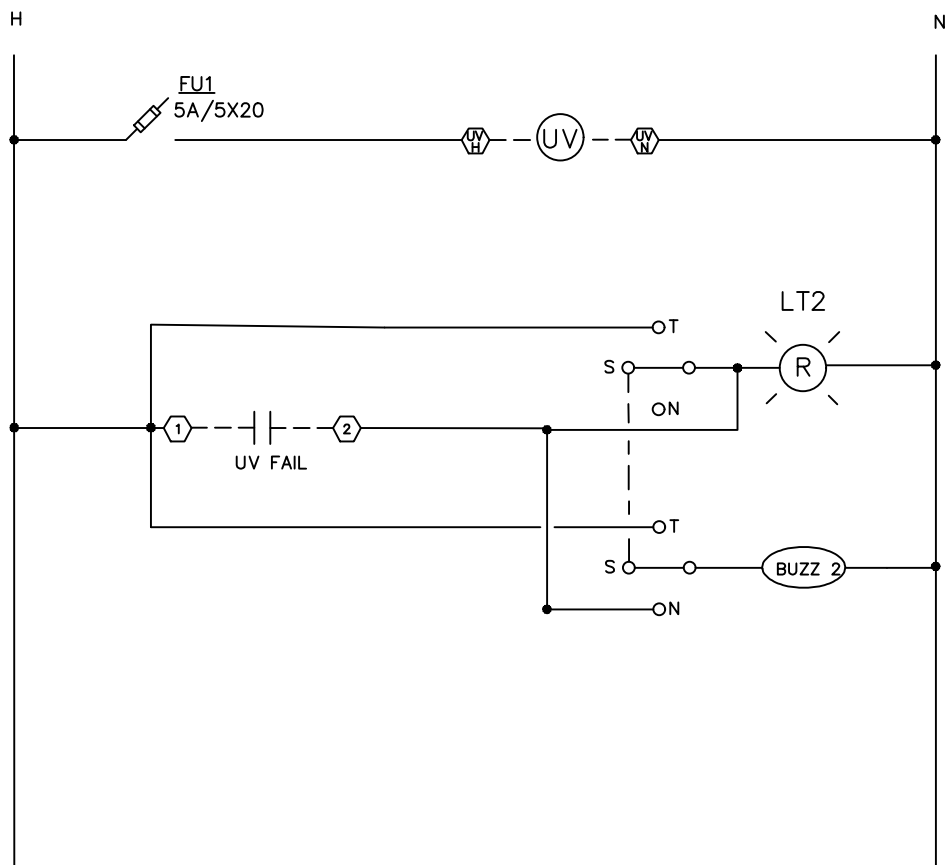
EXTERNAL DISCONNECT AND BRANCH
CIRCUIT PROTECTION REQUIRED. BY OTHERS.
15AMP MAX

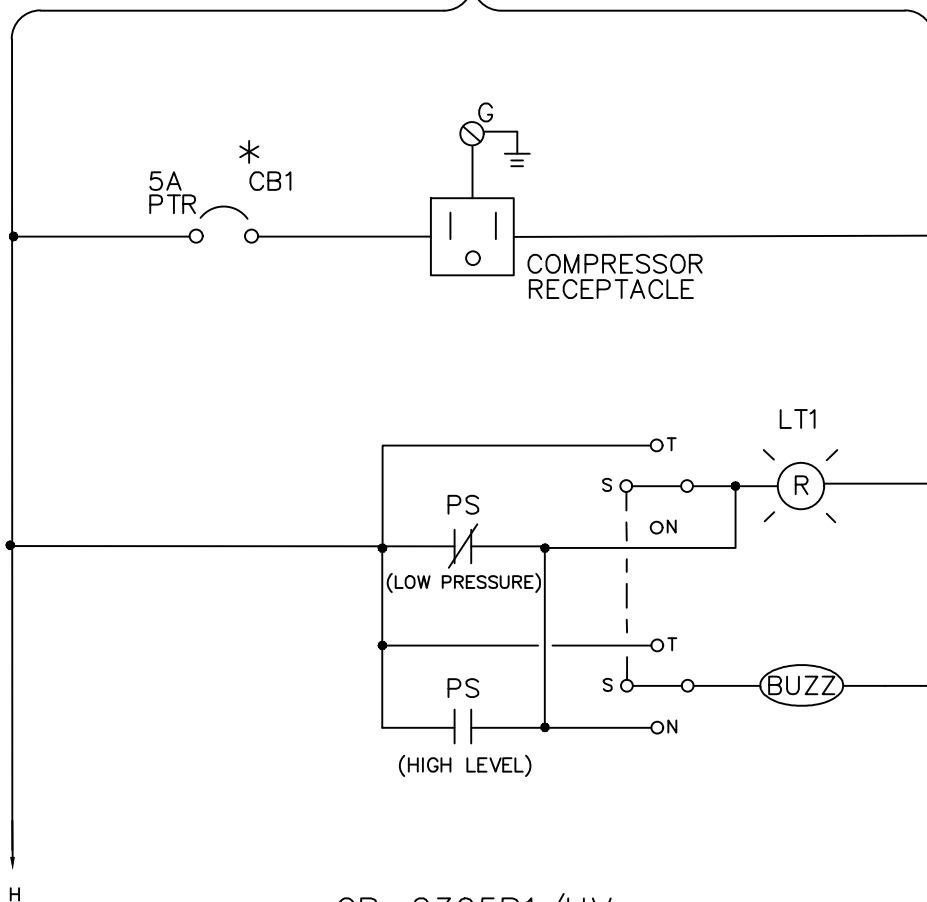


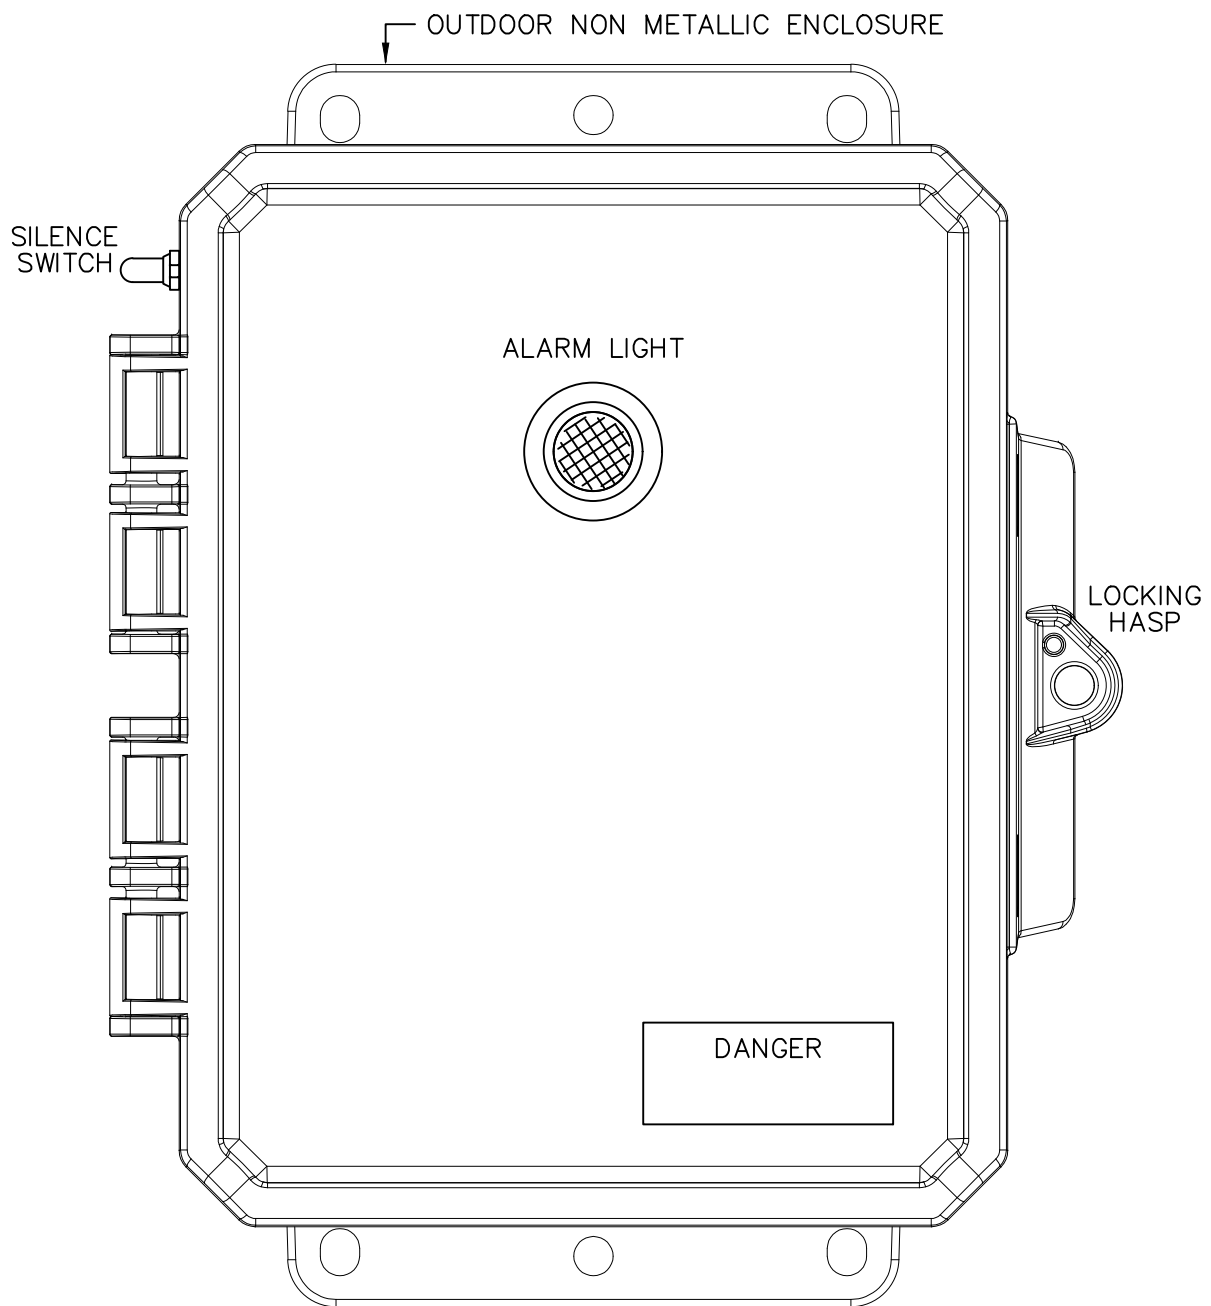
CP-2305R1/UV


* SIZE VARIES WITH
COMPRESSOR SIZE PER
NATIONAL ELECTRICAL CODE

					 INFILTRATOR water technologies	15785 Industry Way Walker, LA 70785 Ph. (225) 665-6162 Fax (800)219-9183	SCHEMATIC DIAGRAM			
-	-	-	-	-						
-	-	-	-	-						
REV.	DATE	REVISION	DESCRIPTION	BY						
CONFIDENTIAL					PLOT SCALE	DRAWING NUMBER	DRAWN BY	DATE	SHEET OF	REV.
					NTS	CP-2305R1/UV	ECH	04/23/25	1 5	A



				 INFILTRATOR <i>water technologies</i>	15785 Industry Way Walker, LA 70785 Ph. (225) 665-6162 Fax (800) 219-9183	SCHEMATIC DIAGRAM			
-	-	-	-						
-	-	-	-						
REV.	DATE	REVISION	DESCRIPTION	BY					
CONFIDENTIAL				PLOT SCALE	DRAWING NUMBER	DRAWN BY	DATE	SHEET OF	REV.
				NTS	CP-2305R1/UV	ECH	04/23/25	2 5	A




					 INFILTRATOR water technologies	15785 Industry Way Walker, LA 70785 Ph. (225) 665-6162 Fax (800)219-9183	ENCLOSURE			
-	-	-	-							
-	-	-	-							
REV.	DATE	REVISION	DESCRIPTION	BY						
CONFIDENTIAL					PLOT SCALE	DRAWING NUMBER	DRAWN BY	DATE	SHEET OF	REV.
					NTS	CP-2305R1/UV	ECH	04/23/25	3 5	A

Setting High Level Pressure Switch


Bring plant to operating water level with compressor on. Using properly sized screw driver, turn high level alarm adjustment screw clockwise until alarm occurs, then turn the screw counter-clockwise until alarm stops.

HIGH LEVEL ALARM
ADJUSTMENT SCREW

PRESSURE
SWITCH


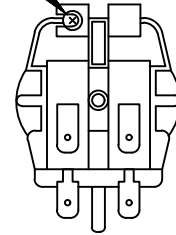


AIR LINE
TO COMP.

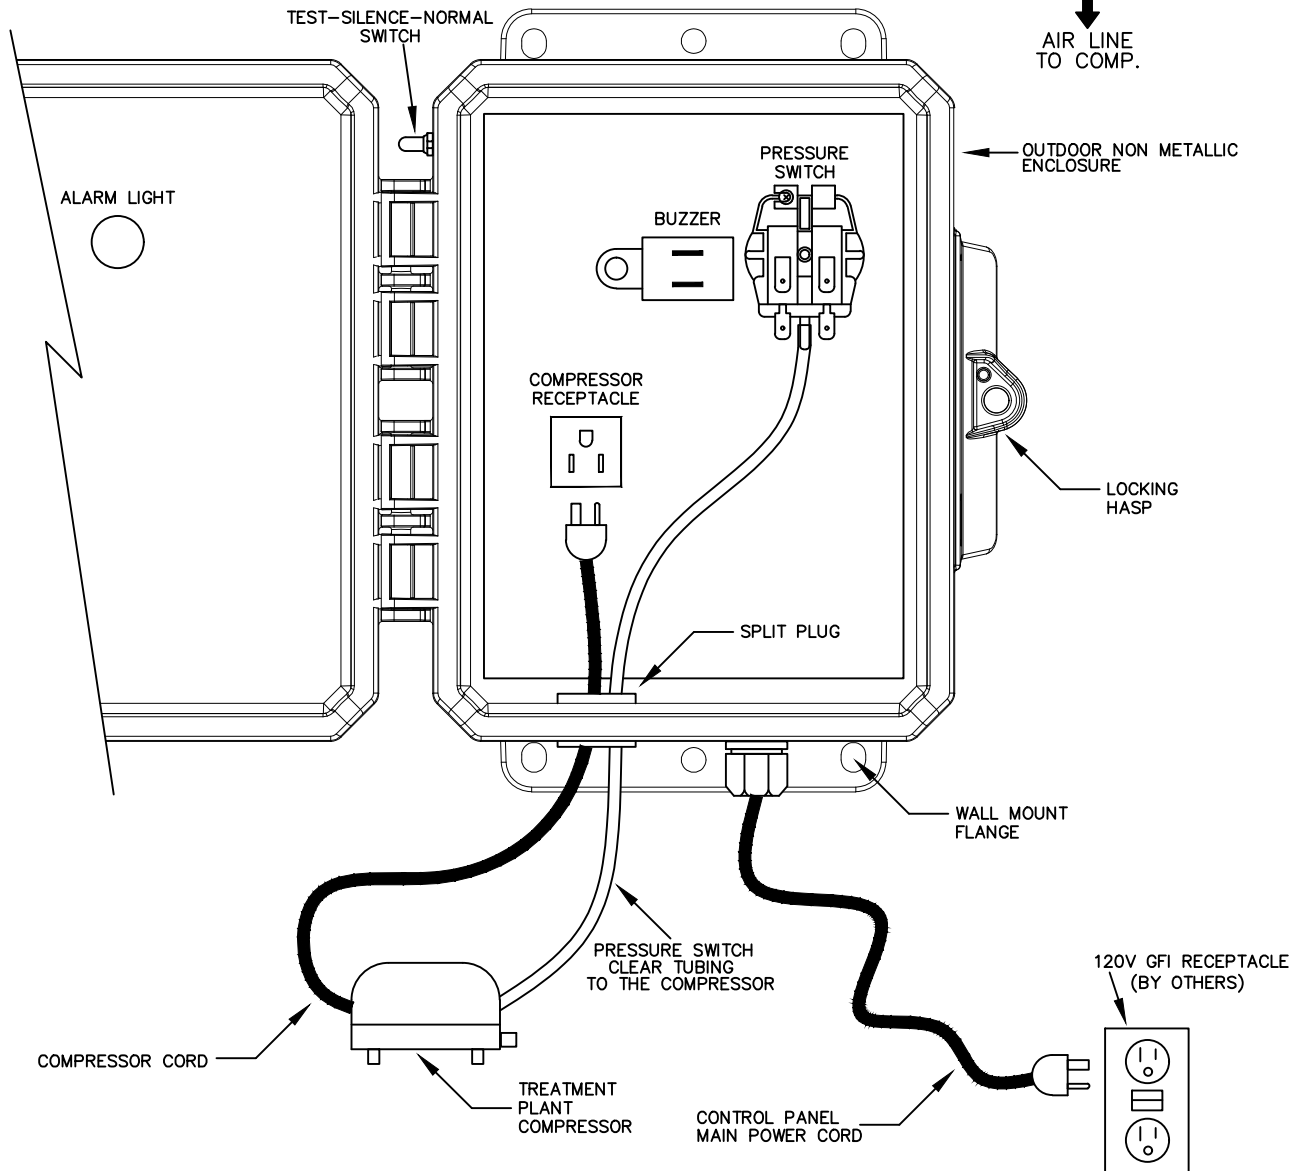



-	-		-	-					
-	-		-	-					
REV.	DATE		REVISION	DESCRIPTION	BY				

Bring plant to operating water level with compressor on. Using properly sized screw driver, turn high level alarm adjustment screw clockwise until alarm occurs, then turn the screw counter-clockwise until alarm stops.

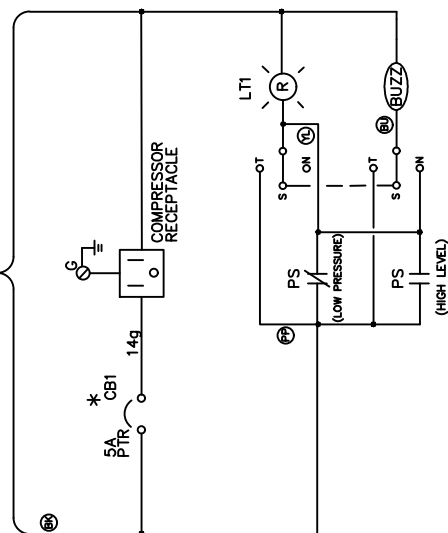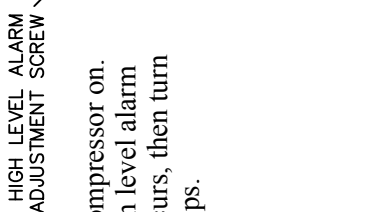


* SIZE VARIES WITH COMPRESSOR SIZE PER NATIONAL ELECTRICAL CODE

CP-2305R1/UV

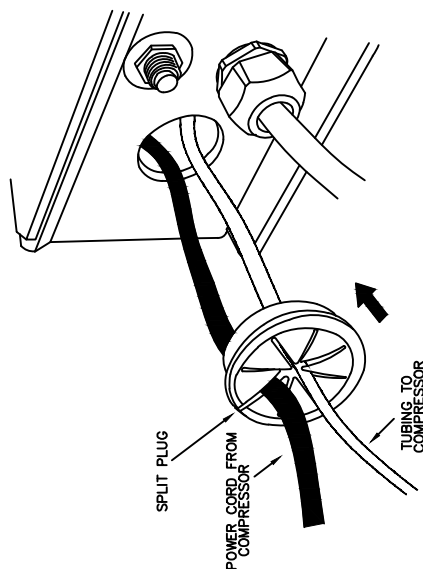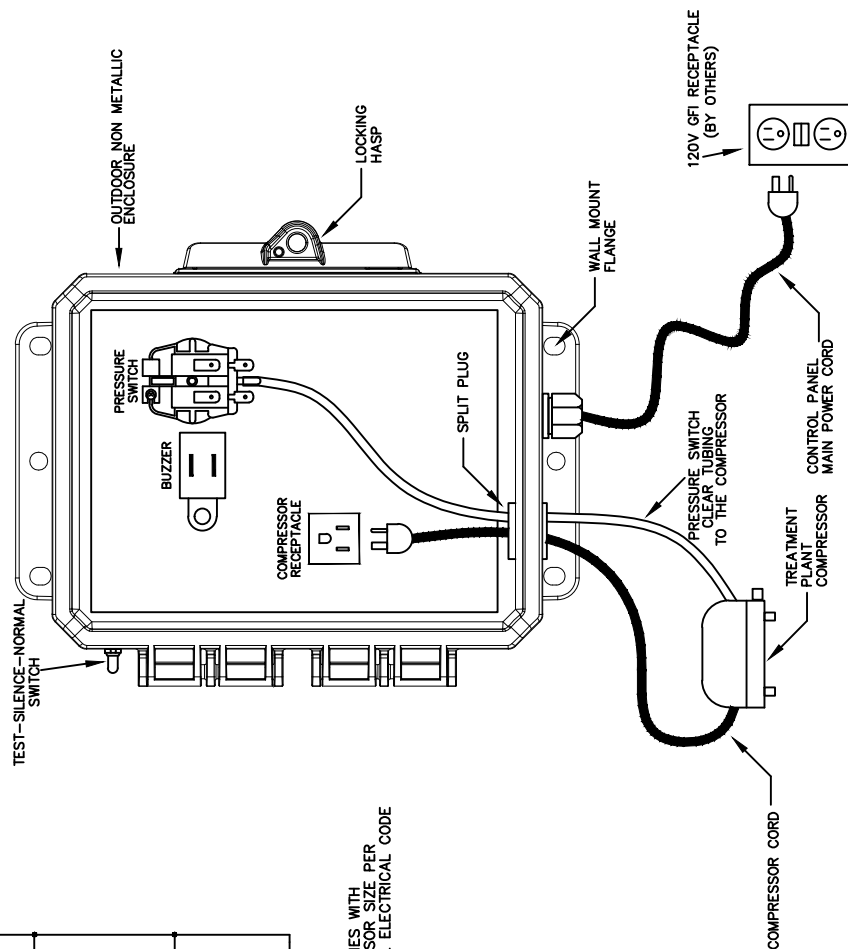

PLUG INSTALLATION

CONFIDENTIAL



SCHEMATIC/LAYOUT

PLOT SCALE	DRAWING NUMBER	DRAWN BY	DATE	SHEET OF	REV.
NTS	CP-2305R1/UV	ECH	04/23/25	5 5	A