



Toastum

Instruction Booklet

This book covers the use and care of the following Sunbeam Toasters:

TA6220 Toastum™ 2 - 2 slice cool touch stainless steel toaster

TA6420 Toastum™ 4 - 4 slice cool touch stainless steel toaster

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Features of your Toastum™ Toaster	2
Using your Toastum™ Toaster	4
Toaster Functions	5
Care and Cleaning	6

Important instructions – retain for future use.

شأنك من إقويم التعليمات السلامة المذكورة أعلاه.

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises.

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden.

Βεβαιωθείτε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές.

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda.

Accertatevi che le suddette norme di sicurezza siano comprese a dovere.

上記の注意事項をよくお読みになり、安全を保障してください。

Yazerece de parca notopre enomenatite merkur na pretnaustvoct de jacob paabpane.

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas.

إلى بى بكتيد كة التعليمات بالآ أعلاه ترك بكوند.

வாசுலிகா சீரமைக்கலாம்/வாசுலிகா சீரமைக்கலாம்.

Yukarıs belirtilen güvenlik önlemlerinin anlaşılacağından emin olunuz.

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ.

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM TOASTER.

- Do not place any objects such as toast, bread or similar on top of your toaster when in use.
- Operate the toaster on a flat level surface.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Do not leave your toaster unattended when in use.
- Clean crumb tray regularly.
- Do not allow crumbs to accumulate in the crumb tray.
- Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.
- **WARNING:** Never attempt to extract jammed toast, crumpets or muffins with a knife or any other metal object, as contact with a live element may cause electrocution.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used by children or infirm persons.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your Toastum™ Toaster

Extra wide and deep bread slots

Enables you to toast a large variety of breads - regardless of thickness.

Self-centring bread slots

Whether you are toasting thick or thin bread, your bread will always be held in the centre of the slot to ensure even toasting.

Cool touch exterior


Remains cool to touch when in use for added safety.

Removable crumb tray

Pulls out from underneath your toaster for easy removal of crumbs.


Cord storage

The cord can be wrapped underneath for safe and convenient storage.

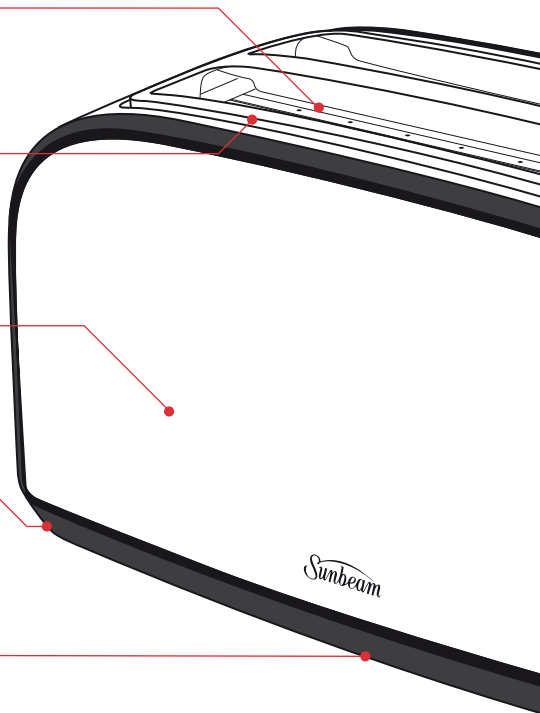

Toastum™ 2 Slice Toaster

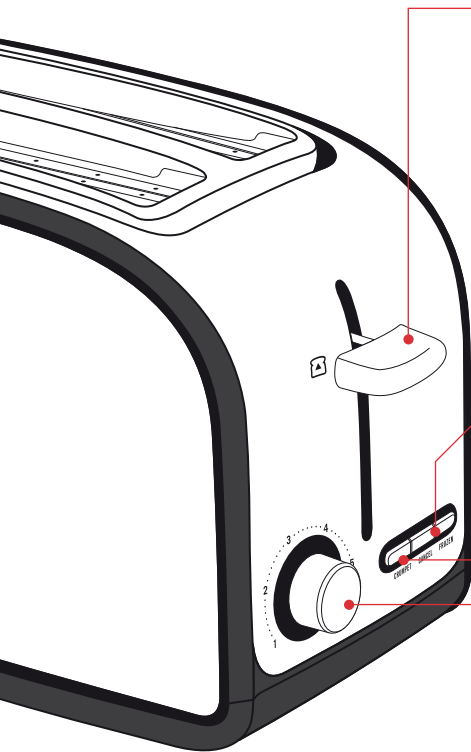

**High-lift and toasting lever**

Raises the toast above the starting position so you can remove the toast from the toaster without burning your fingers. Ideal for crumpets, muffins and bagels.

Cancel and frozen buttons

Cancel immediately interrupts any toasting cycle and pops the toast up. The Frozen setting ensures bread can be toasted straight from the freezer.

Crumpet setting

Specially designed crumpet feature emits extra heat from the centre elements, to cook the top of your crumpet perfectly without burning the bottom.

Electronic browning control

Variable toast settings from 1 - 6 allow you to toast your bread to the desired colour everytime.

Using your Toastum™ Toaster

Plug the toaster into a 230-240 volt AC power outlet and switch the power on.

Toasting Bread

1. Position the bread into the bread slot.
2. Select the desired browning setting using the Electronic Browning Control.

Important: Do not toast stale bread, rice crackers or similar on a high setting as there is a chance that they may catch fire.

3. Push the Toasting Lever down to commence the toasting cycle.

4. When the desired browning is achieved, the toaster will automatically stop toasting and pop the toast up. If you need to remove the toast before the cycle is complete, then press the Cancel button. The Cancel button will immediately interrupt the toasting cycle and pop the toast up.
5. To remove small pieces of toast, crumpets or bagels, use the High-lift Lever to lift the toast above the starting position. This will prevent burning your fingers as you remove the toast.

Toaster Functions

Crumpet Feature

The specialised crumpet setting is activated by first lowering the lever down into position, then immediately pushing the Crumpet button. This setting cooks crumpets to perfection. When activated, additional heat is emitted from the centre elements to cook the top of your crumpet faster than the bottom. The top of the crumpet(s) must be facing towards the centre element. See figure 1.

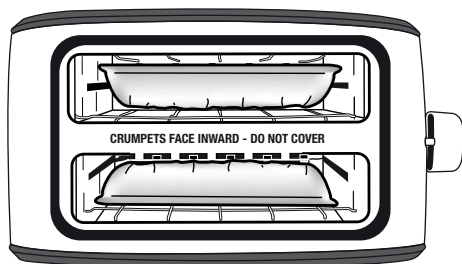


Figure 1

Cancel button

The Cancel button immediately stops any of the toasting cycles. As a consequence of this, the toast will pop up.

High-lift lever

When toasting small pieces of bread, crumpets or muffins we recommend using the High-lift lever to prevent you from burning your fingers.

Toasting frozen bread

Press the Frozen button immediately after the Toasting lever has been pressed down. This function will toast your frozen bread. The colour of your toast will brown according to the toasting setting you have chosen.

Note: When using the Crumpet and Frozen functions it is still very important to set the Electronic Browning Control to your desired setting.

Toasting tips

- If your bread jams in the toaster, switch power off, remove the plug from the power outlet and ease the bread out of the toaster.
- Ensure muffins or bagels are cut into even halves and fit freely into the bread slot. Do not force them into the toaster.
- When toasting only one piece in your Toastum 4 slice toaster (TA6420) position the bread in the middle of the bread slot. When toasting two pieces in your 4 slice toaster, position one piece in the centre of each slot.

WARNING: Never attempt to extract jammed toast, muffins, bagels or crumpets with a knife or any other metal object, as contact with the live element may cause electrocution.

Care and Cleaning

Always turn the power OFF and remove the plug from the power outlet after use and before cleaning your toaster.

To clean the exterior

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

Do not use metal scourers or abrasives as this may scratch the exterior surface.

Removable Crumb Tray

To remove the crumbs, simply slide out the tray, empty and place it back in the toaster.

Important: Clean the crumb tray regularly. Do not allow crumbs to accumulate, as they may cause a potential fire hazard.

To clean the toaster interior

Clean inside the toaster regularly. To do this, unplug the appliance, turn it upside down over the sink and gently shake all the crumbs out.

Notes

Notes

12 Month Replacement Guarantee

We are so confident of the quality of our product, should this appliance develop any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you absolutely free.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Alternatively, simply return the faulty appliance to your place of purchase, along with your purchase receipt.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling, and excludes breakables such as glass or ceramic items, and normal wear and tear.

Similarly, your 12 Month Replacement Guarantee does not cover damage to household surfaces as a result of water or other substances leaking from your appliance, nor does it cover freight costs.

In Australia, this guarantee is additional to the conditions and guarantees which are mandatory as implied under the Trade Practices Act 1974 and State and Territory legislation.

Sunbeam Service Centres

Sunbeam has established a network of authorised service centres throughout Australia and New Zealand to provide quick, convenient service for our customers.

Should your appliance require repair or service, either during or after the guarantee period, contact your nearest service centre.

For a complete list of Sunbeam's authorised service centres:

Australia

www.sunbeam.com.au/servicecentres
1300 881 861

New Zealand

www.sunbeam.co.nz/servicecentres
0800 786 232



Consumer Hotline

In Australia

Visit www.sunbeam.com.au

Or call 1300 881 861

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232

 is a registered trademark.

'Toastum' is a trademark of Sunbeam Corporation.

Made in China to Sunbeam's specification.

Due to minor changes in design or otherwise,
the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2002 - 2007.

ABN 45 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.