




RHT600RLG

ELECTRIC HEDGE TRIMMER OPERATOR'S MANUAL

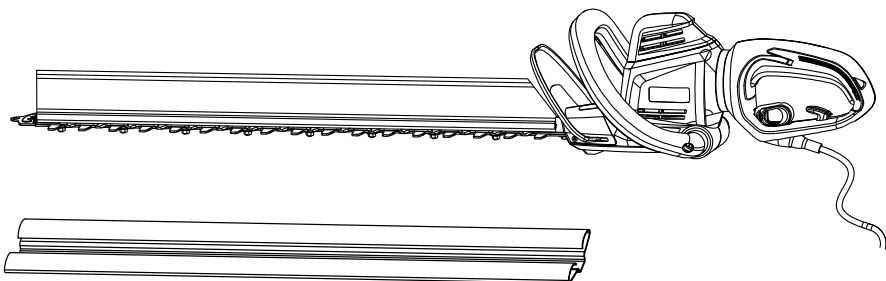

N197

Important!

It is essential that you read the instructions in this manual before operating this machine.

RYOBI RHT600RLG

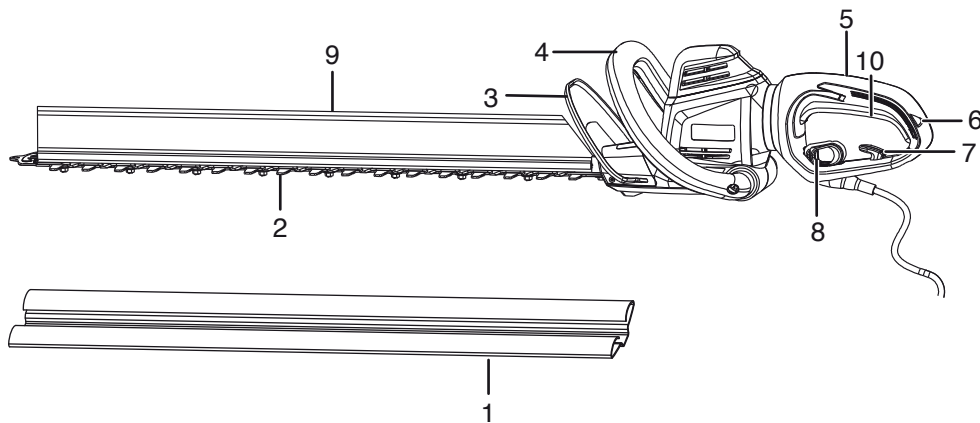


Fig.1

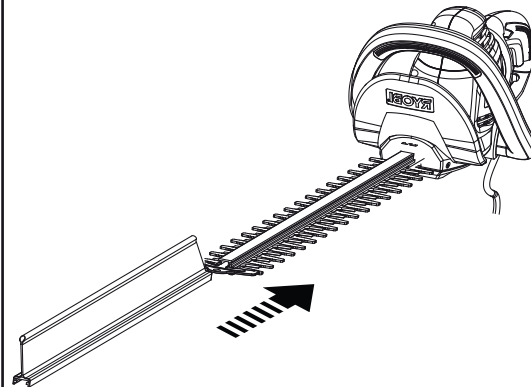


Fig.2

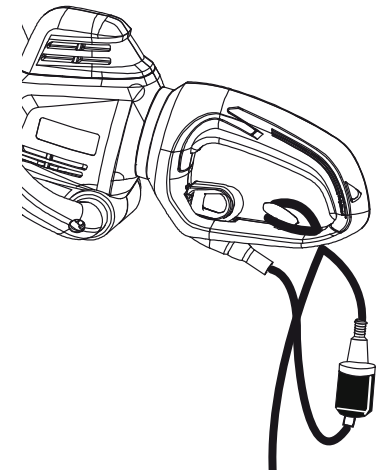


Fig.3

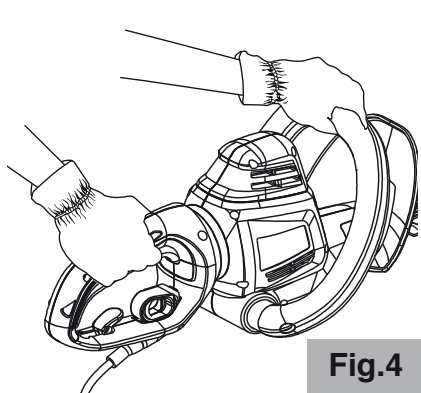


Fig.4

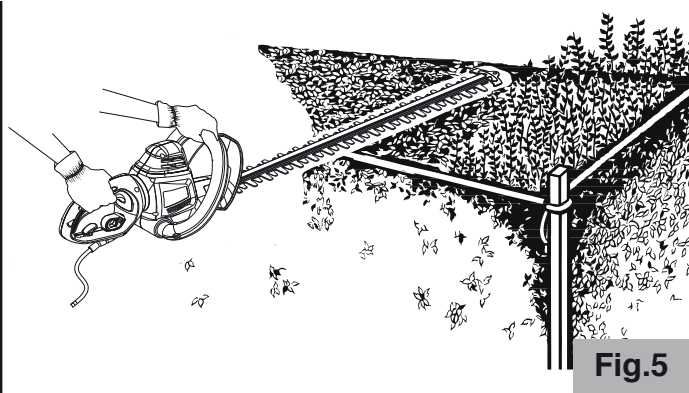


Fig.5

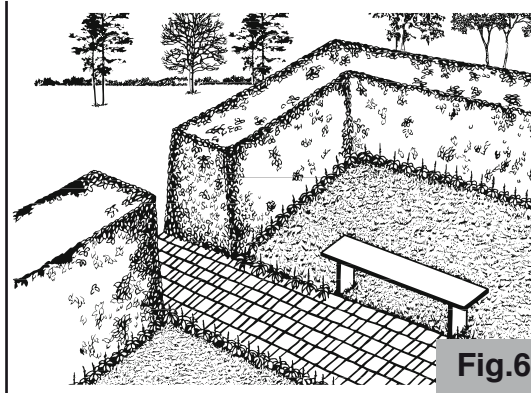


Fig.6

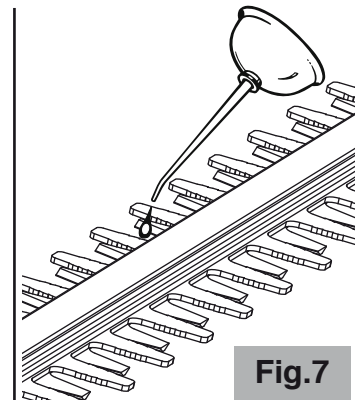


Fig.7



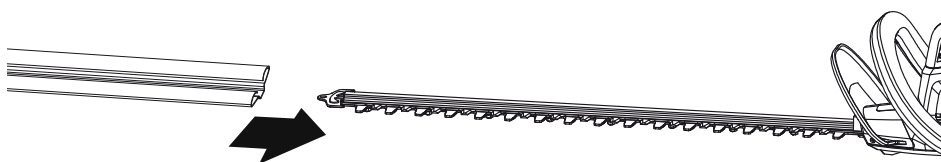



Fig.8

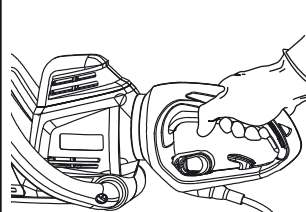

a

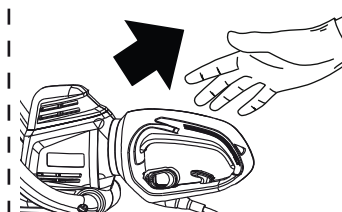

b

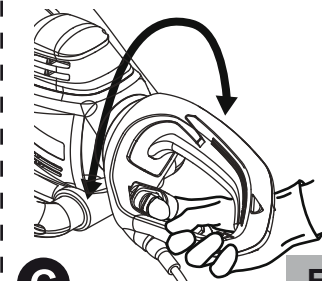

c

Fig.9

GENERAL SAFETY RULES



WARNING

Read and understand all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and serious injury.

Save all warnings and instructions for future reference

The term "power tool" in the warnings refers to your mains-operated (corded) power tool.

1) WORK AREA SAFETY

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) ELECTRICAL SAFETY

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply, the tripping current of 30mA or less.**

3) PERSONAL SAFETY

- a) **Stay alert, watch what you are doing and use**

common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before plugging in.** Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of these devices can reduce dust-related hazards.

4) POWER TOOL USE AND CARE

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.** Such preventative safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power**

tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from intended could result in a hazardous situation.

5) SERVICE

- a) **Have your power tool serviced by a qualified repair person using only genuine replacement parts.** This will ensure that the safety of the power tool is maintained.







HEDGE TRIMMER SAFETY WARNINGS

- **Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material.** A moment of inattention while operating the hedge trimmer may result in serious personal injury.
- **Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover.** Proper handling of the hedge trimmer will reduce possible injury from the cutter blades.
- **Keep cable away from cutting area.** During operation the cable may be hidden in shrubs and can be accidentally cut by the blade.
- **Hold the power tool by insulated gripping surfaces only. The cutter blade may contact hidden wiring or its own cord.** Cutter blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- **Always check the working area for foreign objects. Hedge trimmer blades should never come into contact with any wires or metal.** Only use the hedge trimmer for its intended use.




ENGLISH

SYMBOL

Important: Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product safely.

SYMBOL	NAME	EXPLANATION
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
h	Hours	Time
	Class II Construction	Double-insulated construction
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Safety Alert Symbol	Precautions that involve your safety.
	Read the Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye and ear Protection	Wear eye and ear protection when operating this equipment.
	Electric Shock Precaution	Remove plug from the mains immediately if cable is damaged or cut.

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION:	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

ENGLISH



WARNING:

Observe all normal safety precautions related to avoiding electrical shock.

SPECIFICATION

MODEL	RHT600RLG
Voltage:	220-240V/50Hz
Power:	600W
Cutting Capacity:	27mm
Blade Length	600mm
Blade Speed	1500/min
Brake Time:	<1s
Weight (without cord):	3.8kg
Sound Pressure Level:	L_{pA} : 84 dB(A) K_{pA} : 3.0 dB(A)
Sound Power Level:	L_{wA} : 99 dB(A) K_{wA} : 3.0 dB(A)
Vibration:	a_h : 3.7 m/s ² K : 1.5 m/s ²

DESCRIPTION

Fig.1

1. Blade cover
2. Cutting blades
3. Safety Guard
4. Front trigger
5. Rear handle
6. Livetool indicator™
7. Cord retainer
8. Lock lever for rotating handle
9. HedgeSweep™ debris sweeper
10. Rear handle trigger

OPERATION



WARNING:

Always remove the blade cover before using the hedge trimmer.

Warning:

1. The blades continue to move for a fraction of a second after the hedge trimmer is switched off.
2. Do not touch the moving blades.
3. When using the tool always ensure that the cord is safely held in the cord retainer as described later in this manual.

INTENDED USE

This hedge trimmer is intended for cutting and trimming hedges and bushes in domestic use. It is not intended to be used for cutting above shoulder level.

USING THE CORD RETAINER

When using the hedge trimmer make sure that you secure your extension cord in the cord retainer as shown in Figure 3.

USING THE ROTATING REAR HANDLE (Figure 9)

1. Place the hedge trimmer on a flat and even surface and disconnect from the power supply.
2. Make sure that you release the triggers.
3. Pull the lock lever (8) out and rotate the rear handle (Figure 9c).
4. Release the lock lever and ensure that it is fully locked in before operating the hedge trimmer.

USING THE HEDGESWEEP™ DEBRIS SWEEPER



WARNING:

Make sure that you disconnect the hedge trimmer from the power supply before attaching or removing the HedgeSweep™ debris sweeper.

To avoid clippings and other debris falling back into the hedge while cutting you can use the HedgeSweep™ debris sweeper to sweep the cuttings off the hedge. You can attach the HedgeSweep™ debris sweeper by sliding it onto the rail as shown in Figure 2. The sloped end should be facing the motor housing of the hedge trimmer. To remove HedgeSweep™ just pull it towards the front of the blade.

If desired you can use a string to help cut your hedge level. Decide how high you want the hedge then stretch a piece of string along the hedge at this height. Trim the hedge just above this guide line. See Figure 5. Trim the side of a hedge so that it will be slightly narrower at the top. See Figure 6. More of the hedge will be exposed when shaped this way, and it will be more uniform.

STARTING AND STOPPING (Figure 4)



WARNING:

Two handed operation is required. Hedge trimmer will not operate unless both switches are activated. Always use two hands when operating the hedge trimmer.

Starting:

Press and hold rear trigger (10) and squeeze front trigger (4).

Stopping:

Release either of the switch levers (4) and (10).

MAINTENANCE



WARNING:

Before inspecting, cleaning, or servicing the machine, disconnect the plug from power source and wait for all moving parts to stop. Failure to follow these instructions can result in serious personal injury or property damage.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use.

Use clean cloths to remove dirt, dust, oil, grease, etc.

**WARNING:**

Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken, or destroy plastic which may result in serious personal injury.

**WARNING:**

Blades are sharp. When handling the blade assembly, wear non-slip, heavy-duty protective gloves. Do not place your hand or fingers between blades or in any position where they could get pinched or cut. NEVER touch blades or service unit with the power supply connected.

BLADE MAINTENANCE

- Always clean the cutting blades after operation and lubricate as described below.
- Perform regular visual checks/inspection on the cutting edges of the blade and check the tightness of the blade bolts.

LUBRICATING THE BLADE

For easier operation and longer blade life, lubricate the hedge trimmer blade before and after each use.

- Stop the motor and disconnect from power supply.
- Lay the hedge trimmer on a flat surface. Apply light weight machine oil along the edge of the top blade.

If you will be using the hedge trimmer for an extended period, it is advisable to oil the blade during use. See Figure 7.

CLEANING THE HEDGE TRIMMER

- Stop the motor and disconnect from power supply.
- Clean dirt and debris from the body of the hedge trimmer, using a damp cloth with a mild detergent.

NOTE: Do not use any strong detergents on the plastic housing or the handle. They can be damaged by certain aromatic oils such as pine and lemon, and by solvents such as kerosene.

STORING THE HEDGE TRIMMER

- Clean all foreign material from the product.
- Always place blade cover on cutting blades before storing. See Figure 8.
- Store it in a well-ventilated place that is inaccessible to children.
- Keep away from corrosive agents such as garden chemicals and salts.

DISPOSAL

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TECHTRONIC INDUSTRIES AUSTRALIA PTY LIMITED

GUARANTEE



Subject to the guarantee condition below, this Ryobi tool (hereinafter called "the product") is guaranteed by TECHTRONIC INDUSTRIES AUSTRALIA PTY LIMITED (hereinafter called "the Company") to be free from defects in material or workmanship for a period of 24 months from the date of original purchase covering both parts and labour. Under the terms of this guarantee, the repair or replacement of any part shall be the opinion of the Company or its authorised service centre. Should service become necessary during the warranty period, the owner should contact the customer service HELPLINE 1300 361 505 or contact the retailer from whom the product was purchased.

In order to obtain guarantee service, the owner must present the sales docket and Guarantee Certificate to confirm date of purchase. This product is sold by the dealer or service centre as principal and the dealer has no authority from the Company's behalf except as herein contained or herein referred to.

Guarantee Conditions

This guarantee only applies provided that the product has been used in accordance with the manufacturer's recommendations under normal use and reasonable care (in the opinion of the Company) and such

guarantee does not cover damage, malfunction or failure resulting from misuse, neglect, abuse, or used for a purpose for which it was not designed or is not suited and no repairs, alterations or modifications have been attempted by other than an authorised service centre. This guarantee will not apply if the tool is damaged by accident or if repairs arise from normal wear and tear. The Company accepts no additional liability pursuant to this guarantee for the costs of travelling or transportation of the product or parts to and from the service dealer or service centre - such costs are not included in this guarantee.

Certain legislation, including the Trade Practices Act, 1974 (as amended) and other state and territorial laws give rights to the buyer and impose liability on the seller in certain circumstances. Nothing herein shall have the effect of excluding, restricting or modifying any condition, guarantee, right or liability imposed, to the extent only that such exclusion, restriction or modification would render any term herein void.



TECHTRONIC INDUSTRIES (AUSTRALIA) PTY. LTD.

Level 1, 660 Doncaster Road,
Doncaster, Victoria 3108,
Australia

Tel: 1300 361 505 Fax: 1800 807 993

TECHTRONIC INDUSTRIES N.Z. LIMITED

Auckland: 27 Clemow Drive, Mt Wellington, N.Z.

Tel: (09) 573 0230 Free Call: 0800 279 624 Fax: (09) 573 0231

Contact during normal business hours.

This Guarantee Form Should Be Retained By The Customer At All Times

For your record and to assist in establishing date of purchase (necessary for in-guarantee service) please keep your purchase docket and this form completed with the following particulars.

Purchased From _____

Address Of Dealer _____

Date _____ Model No _____ Serial No _____

Present This Form With Your Purchase Docket When Guarantee Service Is Required.