

NEED HELP?

Let our experts help you with a solution.

Customer Service...

Always call before contacting your place of purchase, see the warranty card for contact details.

STORAGE & CLEANING

- 1. Switch off and unplug the machine. Allow the machine to cool. The outside of the machine can be cleaned with a alcohol cloth. Do not polish the machine.
- 2. When the machine not in use for an extended period. Please cover the machine to prevent dust.

WARRANTY CARD

Please complete this warranty card and enclose it with the macchie, together with your proof of purchase.

Customer data:

Owner' name

Address:

Email:

Telephone:

Description of fault:


Date of purchase:

Dealer's Signature:

**Note:**

When claiming on the warranty, the warranty card and the proof of purchase must be included with the machine as well as a detailed description of the fault wherever possible.Warranty cards sent separately afterwards will not be accepted.

OPERATING INSTRUCTIONS  
MULTIFUNCTION LAMINATOR

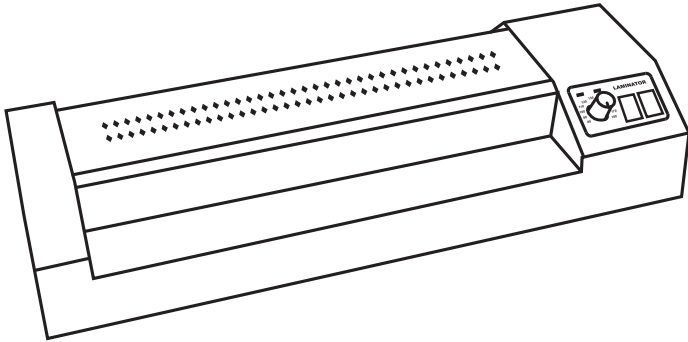


Hot & Cold laminating

Thank you for choosing !

High Quality Laminator

Before operating this unit , please read all instructions

LAMINATOR CONTROLS

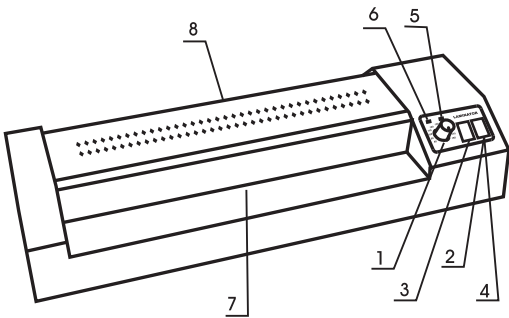

- 1.Temperature control**

**2.Hot/Cold Switch**

**3.Forward/Reverse Switch**

**4.ON/OFF Switch**
- 5.READY indication**

**6.POWER indication**

**7.Entrance**

**8.Exit**

FEATURES & TIPS

- 1. Laminating pouch film, after this machine laminated, will be transparent, it can protection and preserved your documents, photos etc.. for a long time.
- 2. When the laminating pouch film has not gone completely through the machine in normal operating time. press reverse button the laminating pouch film will return.

CAPABILITIES

Model No.	32020
Voltage frequency:	AC220V 50/60Hz
Power:	620W
Preheating time:	3-5min
Number of rollers:	4 Pcs
Max Laminating width:	330mm
Max laminating thickness:	1mm
Max laminating speed:	0.35m/min
Heating system:	Quartz electric heating tube
Weight:	4.5kg
Dimensions:	450x175x92mm

IMPORTANT SAFETY INSTRUCTIONS

- 1. The machine is for indoor use only. Plug the machine into an easily accessible socket.
- 2. To prevent electrical shock, do not use the appliance close to water, do not spill water on to the appliance, power cord or wall socket.
- 3. Always test laminate with a similar size and thickness. set the machine before final laminations
- 4. Remove staples and other metal articles prior to laminating.
- 5. Keep this machine away from children
- 6. Keep away from pets while in use.
- 7. Keep the machine away from heat and water sources.
- 8. Turn off and unplug the machine after each use.

HOW TO LAMINATE

- 1. Ensure the machine is on a stable surface.
- 2. Check there is enough clear space(min 50cm) behind the machine to allow items to pass through freely.
- 3. Plug the machine into an easily accessible main socket.
- 4. Switch the power on. the red indication is on.
- 5. For hot laminating, press the hot buttons. operating temperature 80-180℃. Examine the laminating pouch film, adjust temperature setting till satisfactory result attained. When the machine is ready, the green indication is on.
- 6. For cold laminating press the cold buttons. waiting for machine to cooling(hot laminating used), the green indication is on. ensure self adhesive pouches are only used with the cold setting
- 7. Place the document into the open pouch. Ensure the document is centered against the sealed edge. Use the appropriate pouch size for the document.
- 8. Ensure the pouch enters the machine sealed edge first. Keep the pouch straight and central within the slot, not on an angle. Use the entry marking as a guide.
- 9. Upon exit, the laminated pouch may be hot and soft. For the best quality and to prevent jamming remove the pouch immediately. Place the pouch on to a flat surface to cool. Take care when handing a hot pouch. Always remove laminate pouch before starting next laminate.

TROUBLESHOOTING

Problem	Possible	Solution
No control panel illumination	Machine not switched on	Switch on machine at rear next to plug inlet and at the wall socket
Pouch does not completely seal the item	Item maybe too thick to laminate	Check pass through thickness is correctly selected and pass through again
	Temperature setting maybe incorrect	Check pouch thickness is correctly selected and pass through again
Pouch has waves or bubbles	Temperature setting maybe incorrect	Check pouch thickness is correctly selected and pass through again
Pouch is lost in the machine	Pouch is jammed	
Jamming	Pouch was used 'open end' first	press reverse button the laminating pouch film will return.
	Pouch was not centered on entry	Turn off and unplug the machine, waiting for machine to cooling, open the machine clean it.
	Pouch was not straight upon entry	
	Empty pouch was used	
Pouch is damaged after machine	Damaged rollers or adhesive on rollers	Pass cleaning sheets through the machine to test and clean rollers