


HL INITIALISATION PROCEDURE

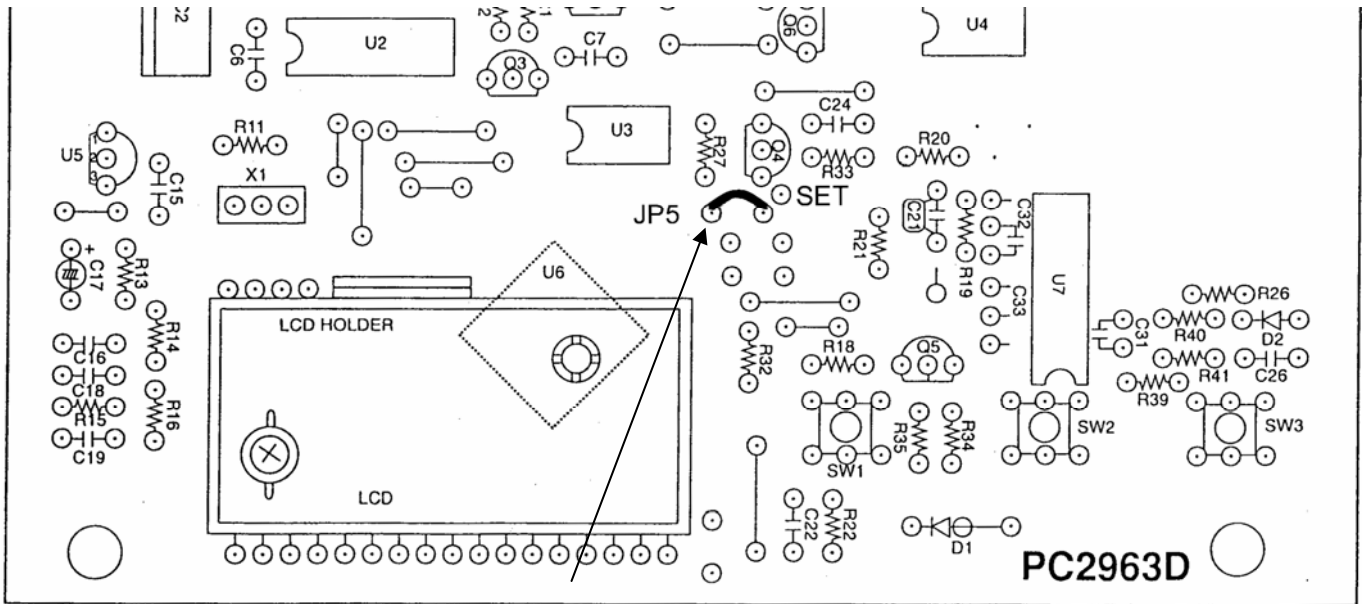

1. Remove HL cover to expose circuit board.
2. Solder link as shown above.
3. Plug power in and turn scale on.
4. Display will show - - - - then all segments.
5. Turn scale off and remove link.
6. Turn scale on and display will show " in it ".
7. Hold **Zero** button and press hidden key.
8. 0030 appears.
9. Press **Zero** key, decimal point appears. Press **Zero** key twice to display 003.2

Move decimal point to left using hidden key, e.g. 00.3.2

10. Use **Zero** key to select capacity.

e.g.

0 182 = HL-100

0382 = HL-1500GN

0002 = HL-200g

00 12 = HL-2000g

0022 = HL-300g

0032 = HL-3000g

0042 = HL-400g

0052 = HL-4000g

11. Use hidden key to move decimal point to this position; → .00 10
Then press and hold hidden key and press **Zero** key simultaneously.
12. 20 appears, press hidden key - t - appears, press hidden key again.
13. CAL t appears. Press **Zero** key.
14. CAL 0 appears. Press **Zero** key.
15. CAL F appears. Place capacity mass on scale and press **Zero** key.
e.g. HL 2000=2 kg.
16. CAL End: Turn scale off then on, scale will be weighing normally.