


HV/W-G SERIES PC COMMUNICATION CABLE WIRING

7 PIN DIN			D9 9 PIN	
			1	CD
TXD	3		2	RXD
RXD	2		3	TXD
			4	DTR
SG	5		5	SG
DSR	7		6	DSR
		LINK 7 & 8	7	RTS
			8	CTS
			9	RI

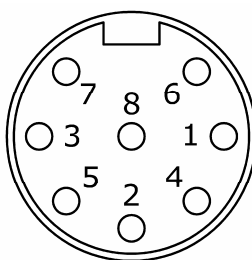

View of Din Socket in panel

HV/W-G FUNCTION SETTINGS

F4 Determines the Baud rate. Whatever is set here must also be set in WINCT

F4 0 is the factory default: 2400bps

F5 Determines the Output mode.

F5 0 is the factory default, which is Stream mode which is best left at this setting while trying to set up communication with WINCT.

RSCOM SETTINGS

1. Set the Com Port to the valid COM that the 9 way plug is connected to.
2. Set the Baud Rate to the same as the HV/W-G
3. Set Parity to E.
4. Set Length to 7.
5. Set Stop Bit to 1.
6. Set Terminator to CR/LF
7. Command Data Box is irrelevant in stream mode.
8. Time, Date, Seq. No. If ticked will add the Time, Date and or Sequence number to the end of each string of data.
9. Command should be un-ticked for stream mode
10. PU removes or adds a space between the unit (kg), and the data string, depending whether it is ticked or not.
11. Press the Start Button.