



4

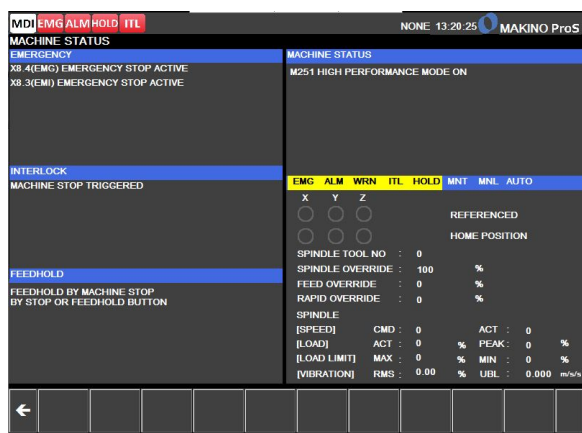

Machine Status Screen

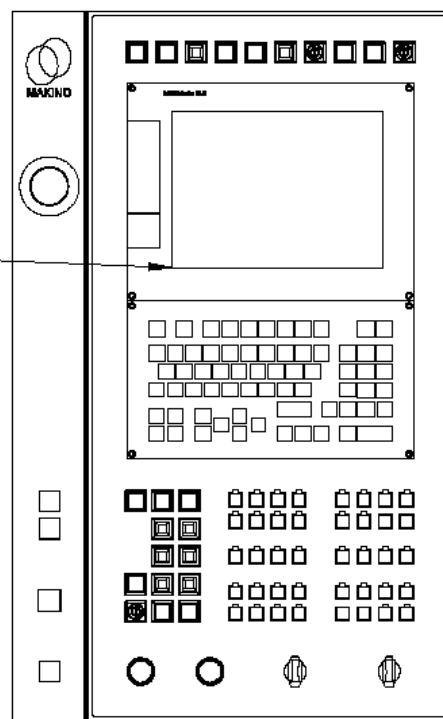

Main Operation Panel

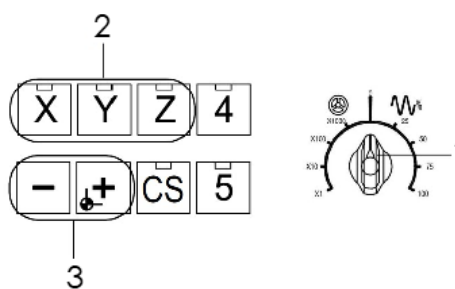


Figure 11.1 Reference Position Return Procedure