

6.3.2 Conguring OSD Sengs

Purpose:

The camera supports following on screen displays:

Time: Supports for me display.

Camera Name: Idenes the name of camera.

You can customize the on screen display of me.

Steps:

1. Enter the OSD setngs interface:



Conguraon > Image > OSD Sengs

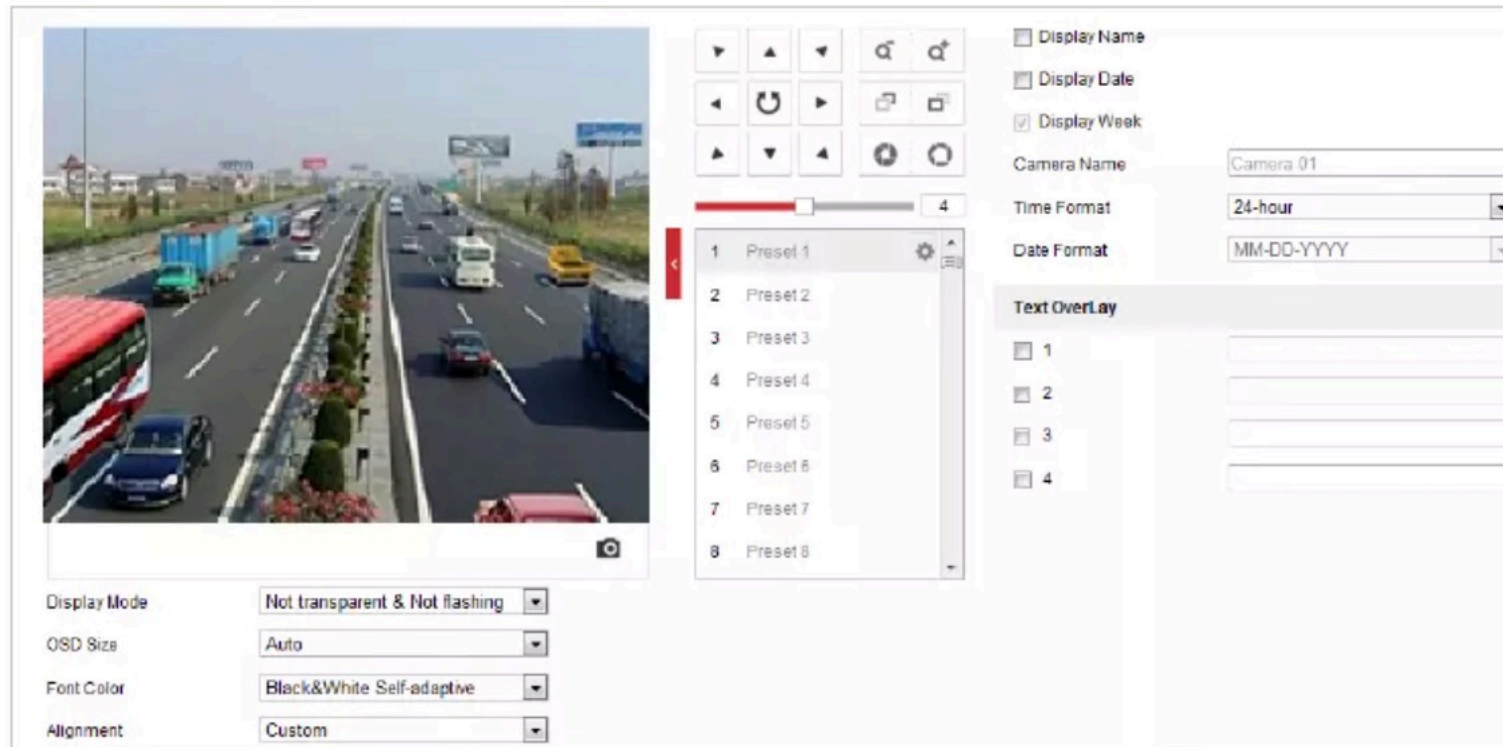



Figure 6-37 OSD Sengs

2. Check the corresponding checkbox to select the display of camera name, date or week if required.
3. Edit the camera name in the text eld of **Camera Name**.
4. Select from the dropdown list to set the me format, date format, display mode, OSD size and Font color.
5. You can use the mouse to drag the text frame **IPdome** in the live view window to adjust the OSD posion.



Figure 6-38 Adjust OSD Location

6. Click



to activate above settings.

6.3.3 Conguring Text Overlay Sengs



Purpose:

You can customize the text overlay.

Steps:

1. Enter the Text Overlay sengs interface:

Conguraon > Image > OSD Setngs

2. Check the checkbox in front of textbox to enable the on-screen display.
3. Input the characters in the textbox.
4. Use the mouse to drag the red text frame  in the live view window to adjust the text overlay posion.
5. Click  to save the setngs.