


Manual Book

Body Scale

Features

- ❖ Capacity: 150kg / 330lb / 23st: 8lb
 - ❖ Graduasi: 0.05kg / 0.2lb / 1lb
 - ❖ Weight of item: kg / lb / st: lb
 - ❖ Min of Weight: 0.1 kg
 - ❖ Key Function: UNIT
 - ❖ Display: LCD
 - ❖ Battery: 2 "AAA"
 - ❖ Auto on or Press UNIT to switch on
 - ❖ Function Auto off
 - ❖ Safety Class : Class III, Type B
- ❖ Enviromental Conditions :
 - Temperature : 5°C ~ 40°C
 - Humidity : ≤80%
 - Atmosphere : 700 hPa ~ 1060 hPa
 - ❖ Storage & Transportations:
 - Temperature : -20°C ~ 60°C
 - humidity : ≤ 95%
 - Atmosphere : 500 hPa ~ 1060 hPa

Display LCD

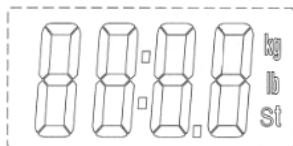


Function Indication

- ❖ UNIT: Press "UNIT" to select desired unit in weighting mode.


Instruction operational

I. Select a unit before using


- a) Open battery cover on the back chassing of scale.
- b) Put the battery inside and make sure the +/- terminal is appropriate.

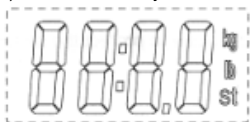

- c) Close the battery cover and wait until "0.0 kg" appears.

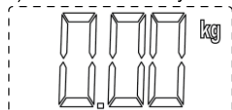

- d) Press "UNIT" to select the desired unit

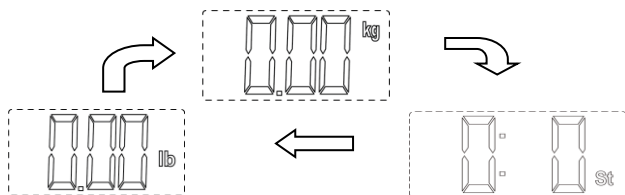

Note: Place the scales on a firm ground level after you finish selecting the unit, then you can start to stay on the scales. If the scales are not in operation then the bump will automatically shut down after 10 sec.


Manual Book

Body Scale

Features

- ❖ Capacity: 150kg / 330lb / 23st: 8lb
 - ❖ Graduasi: 0.05kg / 0.2lb / 1lb
 - ❖ Weight of item: kg / lb / st: lb
 - ❖ Min of Weight: 0.1 kg
 - ❖ Key Function: UNIT
 - ❖ Display: LCD
 - ❖ Battery: 2 "AAA"
 - ❖ Auto on or Press UNIT to switch on
 - ❖ Function Auto off
 - ❖ Safety Class : Class III, Type B
- ❖ Enviromental Conditions :
 - Temperature : 5°C ~ 40°C
 - Humidity : ≤80%
 - Atmosphere : 700 hPa ~ 1060 hPa
 - ❖ Storage & Transportations:
 - Temperature : -20°C ~ 60°C
 - humidity : ≤ 95%
 - Atmosphere : 500 hPa ~ 1060 hPa

Display LCD

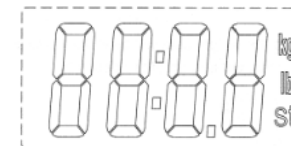


Function Indication

- ❖ UNIT: Press "UNIT" to select desired unit in weighting mode.


Instruction operational

I. Select a unit before using


- a) Open battery cover on the back chassing of scale.
- b) Put the battery inside and make sure the +/- terminal is appropriate.

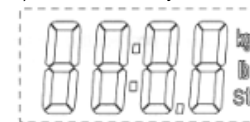

- c) Close the battery cover and wait until "0.0 kg" appears.




- d) Press "UNIT" to select the desired unit

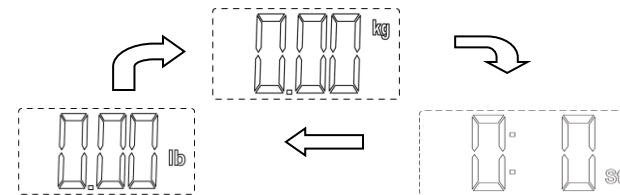


Note: Place the scales on a firm ground level after you finish selecting the unit, then you can start to stay on the scales. If the scales are not in operation then the bump will automatically shut down after 10 sec.

I. Measuring (Select Unit kg)

- Place the scales in a flat, strong surface.
- Stand directly on the scales for the on button.




- Keep standing and the weight of data will be locked automatically after flickering and then stable. Then the scales will turn off after 10 seconds.



Note : If you want try again, tool off, then on it again.

Indication of instruction

- Battery indication is weak. When the "Lo" appears, the scales will die after a few seconds of anti-battery.

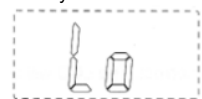









- Excessive indication. When "Err" appears, replace the weight on the scales to maintain the sensor.



Warning


- Make sure the scales are used in a flat place, and a strong surface.
- Replace the battery, if the scales can not be used for a long time.
- Clean the scales with a slightly wet cloth. Do not use any chemical / flaking material to clean the scales.

Explanation Of Symbols


1		Type B Applied Part
2		Class III
3		Operation Instructions
4		Refer to Manual Book
6		Warning
7		Serial Number
8		Manufacturer
9		Do Not Dispose

I. Measuring (Select Unit kg)

- Place the scales in a flat, strong surface.
- Stand directly on the scales for the on button.

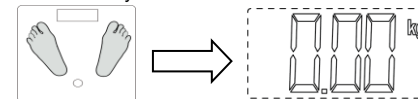

- Keep standing and the weight of data will be locked automatically after flickering and then stable. Then the scales will turn off after 10 seconds.



Note : If you want try again, tool off, then on it again.

Indication of instruction

- Battery indication is weak. When the "Lo" appears, the scales will die after a few seconds of anti-battery.











- Excessive indication. When "Err" appears, replace the weight on the scales to maintain the sensor.



Warning

- Make sure the scales are used in a flat place, and a strong surface.
- Replace the battery, if the scales can not be used for a long time.
- Clean the scales with a slightly wet cloth. Do not use any chemical / flaking material to clean the scales.

Explanation Of Symbols

1		Type B Applied Part
2		Class III
3		Operation Instructions
4		Refer to Manual Book
6		Warning
7		Serial Number
8		Manufacturer
9		Do Not Dispose