



Feature

1. USB Interface
2. HID Device
3. Plug & Play
4. Firmware upgradable over USB
5. QWERTY Layout
6. About 60% as wide as of the standard 104-Key keyboard
7. Uses Cherry MX-Series switches
8. N-key rollover
9. 6 Port dip switch for customer define
10. Multi-Lingual Layout
11. Laser-engraved Keycaps
12. Dual Led backlit function

Package Contents

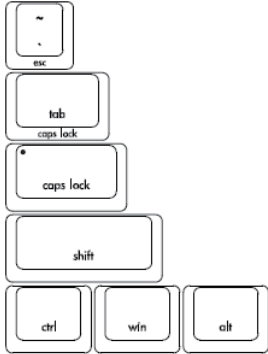
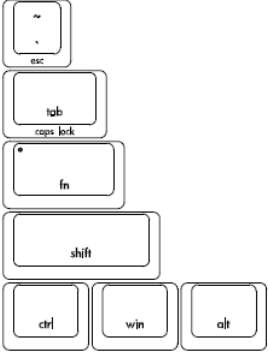
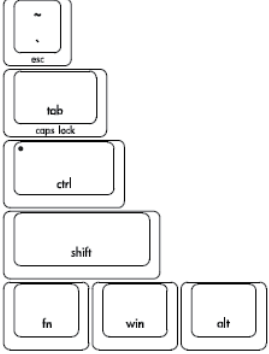
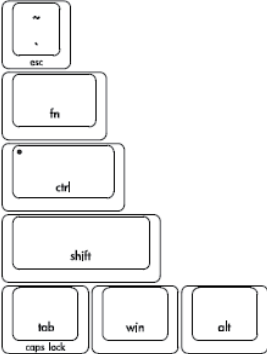
1. Keyboard
2. Replacement keycap
3. Cable
4. Keycap puller





Key combination	Function	Key combination	Function
Fn + ` (~)	Esc	Fn + 0	F10
Fn + 1	F1	Fn + -	F11
Fn + 2	F2	Fn + =	F12
Fn + 3	F3	Fn + Backspace	Delete
Fn + 4	F4	Fn + Tab	Caps Lock
Fn + 5	F5	Fn + W	Arrow Up
Fn + 6	F6	Fn + R	Backspace
Fn + 7	F7	Fn + T	Home
Fn + 8	F8	Fn + Y	Page Up
Fn + 9	F9	Fn + U	Print Screen

Key combination	Function	Key combination	Function
Fn + I	Scroll Lock	Fn + H	Page Down
Fn + O	Pause	Fn + K	Insert
Fn + P	Arrow Up	Fn + L	Arrow Left
Fn + A	Arrow Left	Fn + ;	Arrow Down
Fn + S	Arrow Down	Fn + ' (")	Arrow Right
Fn + D	Arrow Right	Fn + /	Menu
Fn + F	Delete		
Fn + G	End		
Fn + J	~ (Shift + `)		
	Only in US / EU Version		

Key combination		Function		Key combination		Function		
Fn + Z		Pre Track		Fn + Enter	Win_Right	→	Arrow Left	
Fn + X		Play/Pause			Menu		Arrow Down	
Fn + C		Next Track			Ctrl_Right		←	Arrow Right
Fn + V		Volume Decrease			Shift_Right			Arrow Up
Fn + B		Volume Increase		Note	Shift_Right Keycap lower right corner LED will bright			
Fn + N		Mute						
Fn + [Increase illumination						
		Breath mode (Press 7 times)						
Fn +]		Decrease illumination						
Fn + \		Led Color change Mode						

Dip Switch Functions

Default	Port 1	Port 2	Port 1	Port 2	Port 1	Port 2
	ON	OFF	OFF	ON	ON	ON
						

Default	Port 3	Default	Port 4
	ON		ON
			

Default	Port 5	Port 6	Port 5	Port 6	Port 5	Port 6
	ON	OFF	OFF	ON	ON	ON
