

For this tutorial, please select IESNA RP-8-00 - see Figure 169.

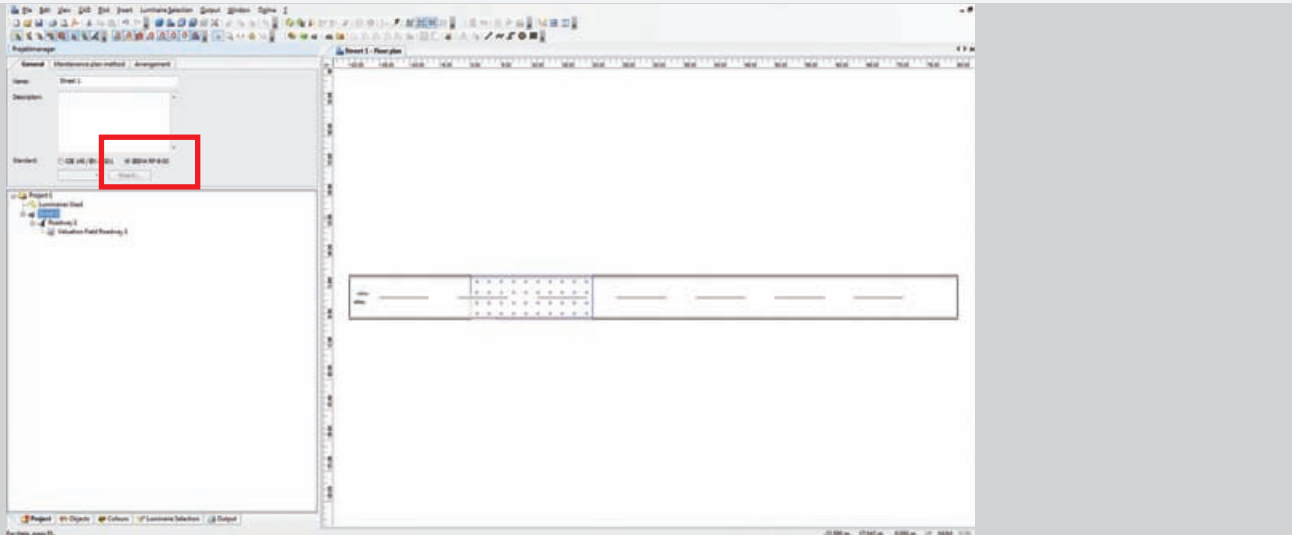


Figure 169

Under the „Maintenance plan method’ tab of ‘Street 1’ whereby the ‘Maintenance Factor’ can be specified - see Figure 170.

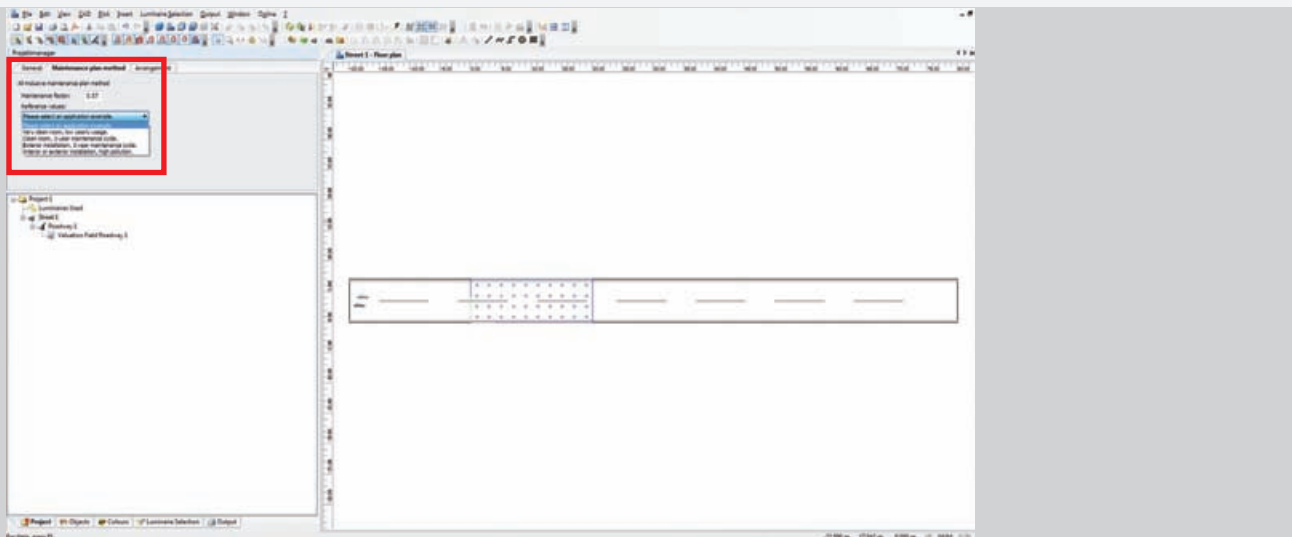


Figure 170

The default maintenance factor for exterior installations in DIALux is 0.57.

*NOTE 1 This value needs to be discussed and confirmed by the client. Other maintenance factors are only possible by reaching an agreement, and must correspond to a specific maintenance plan, as basic input of the design!*