


Port RJ-45A is developed as ROXi connector, Modbus connection is only one of its possibilities, standard Modbus connector cannot be used for connection.

Supported baud rates: 9600, 19200(default), 38400, 57600 (8 data bits, NONE parity and 1 stop bit).

Default address: 1

Possible Modes: Disabled, Read Only, Read/Write (Default)

Transmission mode: RTU (ASCII is not supported)

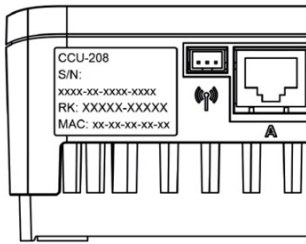

bottom side of RJ-45 connector

RJ-45 Sentio

1+2 GND
3 B (ROXi)
4+5 NC
6 A (ROXi)
7+8 + 24 V



CCU-208 – Standard Modbus device

1. Interface has to be configured to Modbus mode using LCD-200
 - a. System | Installer settings | Modbus configuration
2. Connection is made via special Modbus converted cable.
3. Port A (RJ-45) has to be used.
4. This type of connection is recommended for **device with standard Modbus RJ45 port.**
5. **Standard patch cable cannot be used.**