



Ring Manager sets Interface
to Blocking Mode

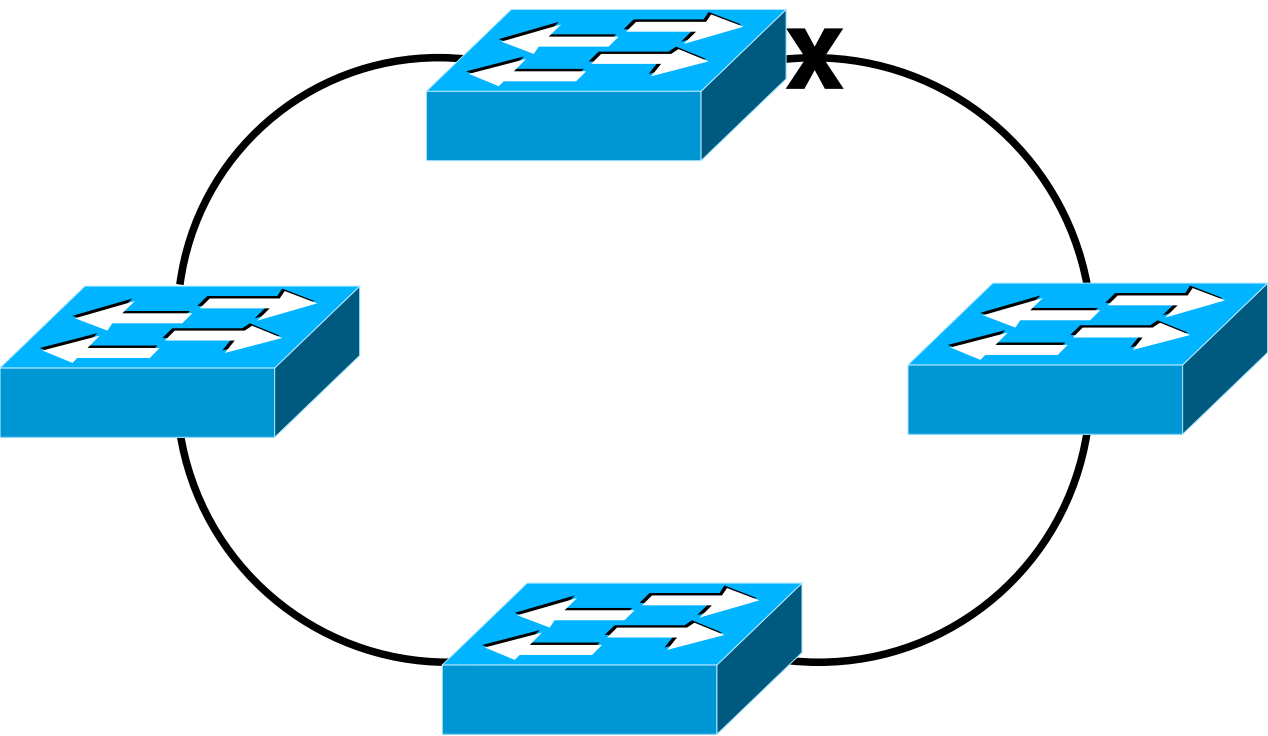

Ring Manager sets Interface
to Forward Mode

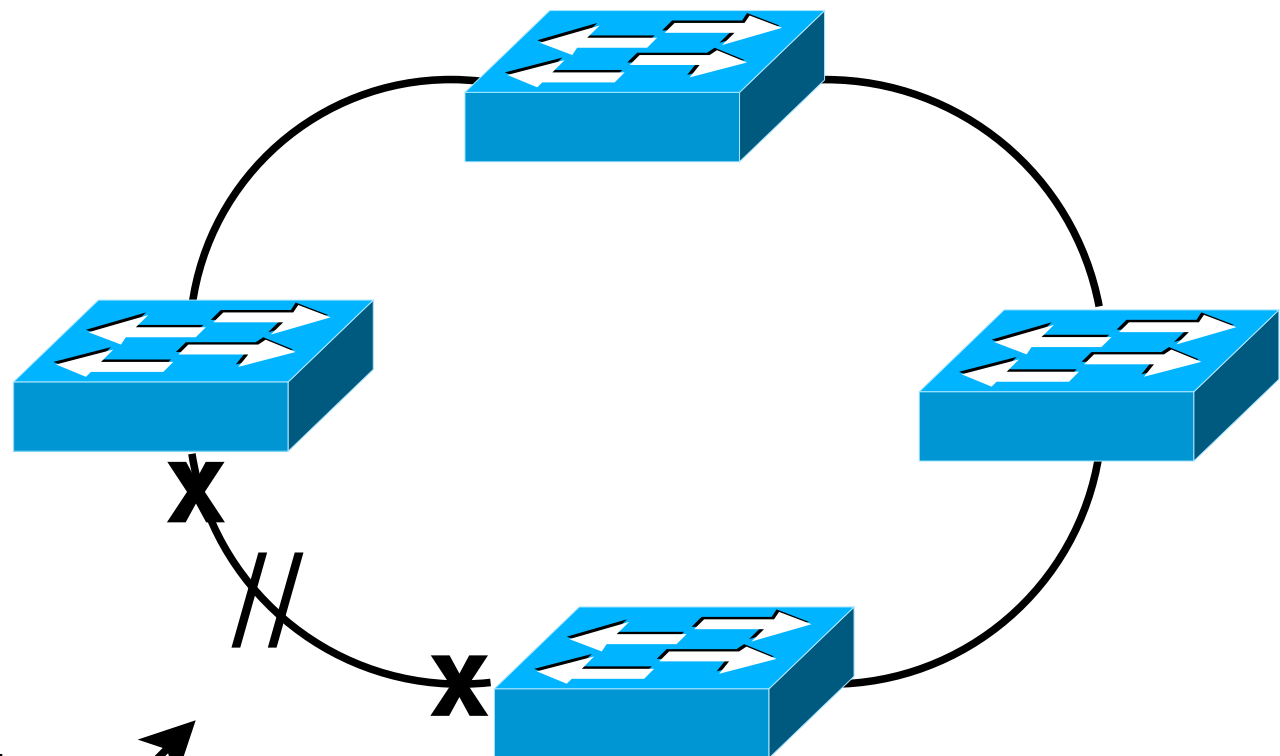

Link
Failure