

HISTORY		Drawn at our office		E-9000	13th. Jan. 2018

配 布 先	
船 主	
監 督	
JG	
協会(NK)	e
本 船	
営 業	
資 材	e
工場長	
加 工	
組 立	
外 業	
今 船 装	機装
	木工
機 電	機装
	電装
管 工	
塗 装	
生 産	
品 質	
船 渠	
生 産 設 計	船情
	機情
(丸亀)資材	e
西 条	
渦潮電機	e
控	
合 計	

**CAUTION**

THIS DRAWING OR DOCUMENT IS  
THE PROPERTY OF IMABARI  
SHIPBUILDING CO., LTD.

REPRODUCTION, COPYING,  
UTILIZATION FOR PURPOSES  
OTHER THAN AGREED,  
DISCLOSURE TO A THIRD PARTY,  
ARE STRICTLY SUBJECT TO  
PRIOR WRITTEN AGREEMENT BY  
IMABARI SHIPBUILDING CO., LTD.

**FOR WORKING**

( 92 SHEETS INC. COVER )

CON-FERRED	OUTFIT DESIGN GROUP ELECTRICAL OUTFIT D. TEAM		<p><u>63,000 M.T. D/W TYPE BULK CARRIER</u></p> <p><b>SPECIFICATION</b> ( ELECTRIC PART )</p>	
	APPROVED	<u>S. Fujisawa</u> ?		
	CHECKED	— ?		
	CHECKED	<u>E. Fujimura</u> ?		
	DRAWN	<u>Dr. Fujimura</u> ?		
	SHIP NO. :	CLASS :	SCALE :	DWG. NO. :
	S-941/942	NK(M0)	* * *	E-9000



#### **IV- ELECTRIC PART**



## INDEX

## IV - ELECTRIC PART

**SECTION 1 GENERAL**

1.1	GENERAL	E1 - 1
1.2	SUPPLY SYSTEM	E1 - 1
1.3	ENVIRONMENT CONDITION	E1 - 2
1.4	FUSE	E1 - 2
1.5	MARK, ARRANGEMENT OF BUS BAR AND CONNECTION	E1 - 3
1.6	TEST	E1 - 3
1.7	COLOUR OF ELECTRIC EQUIPMENT	E1 - 6e

**SECTION 2 ELECTRIC SOURCE**

2.1	GENERAL	E2 - 1
2.2	MAIN DIESEL GENERATOR	E2 - 2
2.3	EMERGENCY GENERATOR	E2 - 5
2.4	STORAGE BATTERY	E2 - 6
2.5	TRANSFORMER	E2 - 7e

**SECTION 3 DISTRIBUTION EQUIPMENT**

3.1	GENERAL	E3 - 1
3.2	MAIN SWITCHBOARD	E3 - 2
3.3	PANEL BOARD	E3 - 7
3.4	EMERGENCY SWITCHBOARD	E3 - 8
3.5	BATTERY CHARGING AND DISCHARGING PANEL	E3 - 10
3.6	SHORE CONNECTION BOX	E3 - 11
3.7	ELEMENTARY DIAGRAM OF MAIN DISTRIBUTION	E3 - 11



#### **SECTION 4 ELECTRIC CABLE AND INSTALLATION**

4.1	GENERAL	E4 - 1
4.2	CABLE APPLICATION	E4 - 1
4.3	CABLE INSTALLATION	E4 - 3

#### **SECTION 5 POWER EQUIPMENT**

5.1	GENERAL	E5 - 1
5.2	MOTOR	E5 - 1
5.3	MOTOR CONTROL	E5 - 4
5.4	SEQUENTIAL START OF VITAL MOTOR	E5 - 9
5.5	LIST OF MOTOR AND CONTROL	E5 - 9

#### **SECTION 6 MISCELLANEOUS ELECTRICAL EQUIPMENT**

6.1	COMMISSARY AND LAUNDRY EQUIPMENT	E6 - 1
6.2	ARC WELDER	E6 - 1
6.3	RECEPTACLE FOR GENERAL PURPOSE	E6 - 1
6.4	IMPRESSED CURRENT CATHODIC PROTECTION SYSTEM	E6 - 2e
6.5	ELECTRIC HEATER	E6 - 2e
6.6	RECEPTACLE FOR 440 V EQUIPMENT	E6 - 2e

#### **SECTION 7 LIGHTING**

7.1	GENERAL	E7 - 1
7.2	NAVIGATION AND SIGNAL LIGHT	E7 - 3
7.3	LIGHTING - DECK ETC.	E7 - 5
7.4	LIGHTING - ACCOMMODATION SPACE	E7 - 7
7.5	LIGHTING - MACHINERY SPACE	E7 - 8
7.6	LIGHTING - STORE ETC.	E7 - 8
7.7	EMERGENCY LIGHTING	E7 - 9
7.8	PORTABLE LAMP	E7 - 10e
7.9	SWITCH	E7 - 10e
7.10	RECEPTACLE	E7 - 10e



## **SECTION 8 INTERIOR COMMUNICATION EQUIPMENT**

8.1	ENGINE ORDER TELEGRAPH	E8 - 1
8.2	MAIN ENGINE REVOLUTION INDICATOR	E8 - 2
8.3	RUDDER ANGLE INDICATOR	E8 - 2
8.4	COMMON BATTERY TELEPHONE	E8 - 3
8.5	AUTOMATIC EXCHANGE TELEPHONE	E8 - 3
8.6	PORTABLE TELEPHONE	E8 - 4
8.7	SHORE TELEPHONE	E8 - 4
8.8	WHEELHOUSE GROUP PANEL	E8 - 5
8.9	WHEELHOUSE CONTROL STAND	E8 - 5
8.10	SIGNAL BELL	E8 - 6
8.11	STEERING ALARM	E8 - 7
8.12	GENERAL EMERGENCY ALARM	E8 - 7
8.13	PUBLIC ADDRESS AND DOCK ANNOUNCING	E8 - 8
8.14	AIR HORN	E8 - 9
8.15	FIRE ALARM	E8 - 9
8.16	CO <sub>2</sub> FLOODING ALARM	E8 - 10e
8.17	LAN SYSTEM	E8 - 10e

## **SECTION 9 NAVIGATION EQUIPMENT**

9.1	GYRO COMPASS	E9 - 1
9.2	MAGNETIC COMPASS	E9 - 1
9.3	STEERING CONTROL	E9 - 1
9.4	ELECTROMAGNETIC LOG	E9 - 2
9.5	ECHO SOUNDER	E9 - 2
9.6	RADAR AND TT	E9 - 3
9.7	CLEAR VIEW SCREEN	E9 - 4
9.8	ELECTRIC CONTROL CLOCK SYSTEM	E9 - 4
9.9	ANEMOMETER AND ANEMOSCOPE	E9 - 5
9.10	ELECTRIC WIPER	E9 - 5
9.11	DGPS NAVIGATOR	E9 - 6
9.12	CHART PLOTTER	E9 - 6
9.13	LOADING CALCULATOR	E9 - 6
9.14	VDR	E9 - 7e
9.15	ECDIS	E9 - 7e
9.16	BNWAS	E9 - 7e



## **SECTION 10 RADIO EQUIPMENT**

10.1	GENERAL	E10 - 1
10.2	MF/HF RADIO INSTALLATION	E10 - 1
10.3	VHF RADIO TELEPHONE	E10 - 2
10.4	WEATHER FACSIMILE	E10 - 3
10.5	ANTENNA MULTI-COUPLER	E10 - 3
10.6	TELEVISION	E10 - 3
10.7	DVD PLAYER	E10 - 3
10.8	STEREO	E10 - 4
10.9	CABIN RADIO	E10 - 4
10.10	INMARSAT	E10 - 4
10.11	MARINE TELEPHONE	E10 - 5
10.12	400 MHz TRANSCEIVER	E10 - 5
10.13	TWO WAY RADIO TELEPHONE APPARATUS	E10 - 6
10.14	SATELLITE EPIRB	E10 - 6
10.15	NAVTEX RECEIVER	E10 - 6
10.16	RADAR TRANSPONDER	E10 - 6
10.17	AIS	E10 - 6
10.18	SSAS	E10 - 7e

## **SECTION 11 ELECTRICAL SPARE PART AND TOOL**

11.1	GENERAL	E11 - 1
11.2	MAIN GENERATOR	E11 - 1
11.3	SWITCHBOARD, CONTROL PANEL AND PANEL BOARD	E11 - 1
11.4	MOTOR	E11 - 2
11.5	CONTROL EQUIPMENT	E11 - 2
11.6	LIGHTING	E11 - 3
11.7	INTERIOR COMMUNICATION EQUIPMENT	E11 - 3
11.8	ELECTRICAL NAVIGATION EQUIPMENT	E11 - 3
11.9	RADIO EQUIPMENT	E11 - 4
11.10	ACCESSORY FOR STORAGE BATTERY	E11 - 4
11.11	METER	E11 - 4
11.12	TOOL AND MATERIAL	E11 - 5e
11.13	ACCESSORY FOR ARC WELDER	E11 - 5e



## **SECTION 1 GENERAL**

### **1.1 GENERAL**

The Specification are intended to set forth the electrical equipment to be installed and the work to be executed for the construction of the Vessel.

The arrangement of the electrical equipment throughout the Vessel shall be such as to provide ready and safe access to all parts required inspection, maintenance and repair as far as practicable.

All electrical equipment and cable shall be so located that as far as practicable it is not exposed to risk of mechanical injury or damage from water, steam, oil or excessive heat. Where unavoidably exposed to such risks, the equipment shall be suitably protected or enclosed.

### **1.2 SUPPLY SYSTEM**

#### **1.2.1 Standard voltage and number of phase**

Generator	AC 450 V three-phase system
Power	AC 440 V three-phase system
Heater of large capacity ( if fitted )	AC 440 V three-phase system
Lighting feeder	AC 100 V three-phase system
Lighting branch circuit	AC 100 V single-phase system
Emergency light	AC 100 V single-phase system
Interior communication	AC 100 V single-phase and /or DC 24 V system
Navigation equipment	AC 440 V three-phase and AC 100 V three-phase and/or AC 100 V single-phase system and/or DC 24 V system
Radio equipment	AC 100 V single-phase and/or DC 24 V system

Small appliance motors such as refrigerators and drinking water fountains, and small heating apparatus may be connected to the 100 V system instead of the 440 V system.

Emergency AC 100 V system in this Specification is used as the meaning of the power source supplied from main generators by way of the AC 100 V feeder panel in normal condition or emergency generator in case of malfunction of main generators via the AC 100 V system of the emergency switchboard.



### 1.2.2 Standard frequency

A frequency of 60 Hertz (Hz) shall be applied for AC power supply system.

### 1.2.3 Wiring

The wiring shall be of three-wire insulated system for AC three-phase circuit, and of two-wire insulated system for AC single phase and DC circuits.

All systems shall be insulated from hull throughout the vessel except earth detecting circuits, secondary circuits of potential and current transformers, and necessary circuits of electronic equipment may be earthed at the switchboard, panels or equipment.

## 1.3 ENVIRONMENT CONDITION

Electrical equipment shall operate satisfactorily under all conditions with the vessel at the following conditions from the normal.

Ambient temperature	0 ~ 45°C for closed spaces by designing condition for spaces above 45°C or less than 0°C. -25°C ~ 45°C for on weather decks	
Inclination of ship	Transversely	: 22.5°
	Rolling	: 22.5°
	Longitudinally	: 10°
	Pitching	: 10°

## 1.4 FUSE

Where fuses are used for circuit overcurrent protection, cartridge non-renewable type approved by the Classification Society shall be installed.

Special type fuses for electronic equipment shall be manufacturer's standard type.





## 1.5 MARK, ARRANGEMENT OF BUS BAR AND CONNECTION

Bus bar and connection of electrical equipment shall be clearly marked with the following lettering or colours, and shall be arranged as follows :

### 1.5.1 AC system

<u>Source side</u>	<u>Load side</u>	<u>Colour</u>	<u>Arrangement</u>		
Phase R	Phase U	Red	Left	Top	Front
Phase S	Phase V	White	↓	↓	↓
Phase T	Phase W	Blue	Right	Bottom	Back

### 1.5.2 DC system

<u>Pole</u>	<u>Colour</u>	<u>Arrangement</u>		
Positive (+)	Red	Left	Top	Front
Negative (-)	Blue	Right	Bottom	Back

## 1.6 TEST

### 1.6.1 General

All electrical equipment, in general, shall be carried out the shop and/or onboard tests according to the requirements of the Classification Society and/or the Builder's standard.

After installations onboard are finished, all electrical equipment shall be tested, and shall be demonstrated their satisfactory operation and conditioned by the procedure mentioned below.

As for the tests of electrical equipment on sea trial, refer to the description in  
**I - GENERAL PART.**



### 1.6.2 Shop test at manufacturer's work

#### ( 1 ) Generator and vital motor

Temperature test  
Characteristic test  
Over speed test  
High voltage test  
Insulation resistance test

After the above tests have been finished, generator shall be sent to the prime mover manufacturer, coupled to it's own prime mover and tested according to the test schedule for the prime mover.

#### ( 2 ) Switchboard

Temperature test  
High voltage test  
Insulation resistance test  
Function test

#### ( 3 ) Other electrical equipment

In general, electrical equipment for which there are no applicable requirements of the Classification Society shall be tested according to manufacturer's standard.



### 1.6.3 Test on board

#### ( 1 ) Circuit

Electric circuits insulated from earth except interior communication and low voltage circuits shall be thoroughly measured their insulation to earth by DC 500 V megger and recorded together with the resistance values.

#### ( 2 ) Generating set and associated switchboard

Insulation resistance test

Generating sets and associated switchboard shall be carried out the following confirmation test applying water load ( Power Factor : 1.0 ).

Individual running test

Parallel running test

#### ( 3 ) Motor

Motors shall be demonstrated to direction of rotation and speed, prior to sea trial or in port according to the machinery side schedule.

#### ( 4 ) Navigation equipment

Navigation equipment shall be tested or calibrated on sea trial or in port.

#### ( 5 ) Other electrical equipment

Other electrical equipment shall be demonstrated in satisfactory operation before delivery.



## 1.7 COLOUR OF ELECTRIC EQUIPMENT

Bare metal surfaces of electric equipment shall be painted with rustproof paint and finishing paint, except those specially treated and rendered corrosion free or corrosion resistant materials may be left without paint.

Standard colour scheme of finishing paints for electrical equipment metal surfaces shall be as follows :

Equipment	Munsell No. Hue value/chroma	Colour
Generators Motors Switchboard Group starter panels Wheelhouse group panel Panel boards Other Panels Starters Transformers Switch boxes	7.5BG 7/2	Light blue green
Equipment for emergency operation	5 R4/13	Red

Lighting fixtures, interior communication equipment, navigation equipment, radio equipment and some of equipment for emergency operation shall be painted in accordance with manufacturer's standard.



## SECTION 2 ELECTRIC SOURCE

### 2.1 GENERAL

The generating plant shall consist of three (3) 750 kVA ( 600 kW ) main diesel generators and one (1) 90 kVA ( 72 kW ) emergency diesel generator.

The number of generators in operation shall be as follows :

Ship's condition	Number of generator
Normal sea going	Diesel generator × 1 set
Maneuvering ( Entering into port and departing from port )	Diesel generator × 2 sets
Unloading and loading in port	Diesel generator × 2 sets
Rest in port	Diesel generator × 1 set
At emergency	Emergency generator × 1 set

Above determined generator capacity and combination of each ship's condition shall be calculated in compliance with “ ELECTRIC POWER TABLE ” .

AC 100 V system shall be supplied through 450/105 V transformer.

The capacity of the emergency generator shall be sufficient to supply the emergency power according to the requirements of the 1974 SOLAS Convention ( including 2000 Amendment ).



## 2.2 MAIN DIESEL GENERATOR

Generators shall be installed in engine room with their shafts in a fore and aft direction of the vessel.

### 2.2.1 Particulars of generator

Number of set	3 sets
Rated output	750 kVA ( 600 kW )
Speed	900 min <sup>-1</sup>
Frequency	60 Hz
Number of phase	3 $\phi$
Power factor	0.8 ( Lagging power factor )
Rating	100 % loading continuous
Voltage	AC 450 V
Type	Horizontal, synchronous and revolving field type
Enclosure	Enclosed drip proof
Cooling	Self-ventilated
Exciter	Brushless type
Insulation	Manufacturer's standard

Other particulars of the main diesel generators shall comply with the manufacturer's standard.

### 2.2.2 Bearing and lubrication

Each generator shall have one (1) bearing of end bracket type.  
The bearing shall be of sleeve type with oil ring self lubrication.

A rod thermometer shall be provided for bearing, and a sight glass shall be provided for each generator.



### 2.2.3 Characteristics

Characteristics of main diesel generators shall be able to run in parallel.

Exciting system of the generator shall be of static exciter type.

Exciting system for static exciter consisting of current transformer, silicon rectifier and other necessary fittings according to manufacturer's standard shall be installed on the generator.

The voltage regulation of the generators with their voltage regulator shall be such that at all loads from zero (0) to full load, the voltage at rated power factor is maintained under steady condition within  $\pm 2.5$  % of the rated voltage.

The maximum voltage drop shall not exceed 15 % when a current equal to 60 % of full load current at any power factor between zero (0) and 0.4 lagging is suddenly drawn.

The voltage shall be restored to within -3 % of the final steady voltage within 1.5 second.

### 2.2.4 Space heater

A space heater of suitable capacity shall be installed in each generator frame to prevent the condensation of moisture when the generator stops.

The heaters shall be supplied from AC 100 V system in the main switchboard.

### 2.2.5 Governor motor

An efficient governor motor shall be installed on each prime mover for adjusting its speed.

The governor motors shall be controlled from the main diesel generator circuit through control switches on the main switchboard.

### 2.2.6 Prime mover

Refer to the description in **III - MACHINERY PART**.



### 2.2.7 Automatic control of diesel generator

- ( 1 ) Remote starting of diesel generator and automatic starting of stand-by diesel generator

Remote control starting apparatus for the diesel generator engine shall be installed on main switchboard. Starting push button switches shall be installed on the main switchboard.

After pressing the push button switches, the diesel engine shall be subsequently started by compressor air.

1st stand-by generator shall be started automatically when the main bus of the main switchboard becomes no-voltage.

If 1st stand-by generator is not started normally, 2nd stand-by generator shall be started automatically.

As for detail of this system, refer to the description in **III - MACHINERY PART**.

- ( 2 ) Automatic operation of synchronizing apparatus

Automatically controlled synchronizing apparatus for the generator sets which consist of the automatic speed matcher and the automatic synchronizer shall be installed in the main switchboard.

The automatic speed matcher shall equalize the generator frequency with bus bar frequency by governor motor.

The automatic synchronizer shall energize the circuit breaker to connect two circuits in parallel at the moment when both phases coincided.

- ( 3 ) Automatic power and frequency control

The automatic power and frequency control device shall be installed in the main switchboard.

It shall control the output of running generators in parallel and share each load of generator in ratio of the rated output of generators ( error : within 5 % of the rated output of generator ) at rated frequency ( error : within 1 % of the rated frequency ).





## 2.3 EMERGENCY GENERATOR

Emergency generator shall be installed in emergency generator room.

The emergency generator shall be automatically started in case of failure of main power supply and shall be manually stopped at machine side when main power supply is restored after a blackout.

The emergency generator shall not be able to operate in parallel with main generators.

### 2.3.1 Particulars of emergency generator

Number of set	1 set
Rated output	90 kVA ( 72 kW )
Speed	1,800 min <sup>-1</sup>
Frequency	60 Hz
Number of phase	3 $\phi$
Power factor	0.8 ( Lagging power factor )
Rating	100 % load continuous
Voltage	AC 450 V
Type	Horizontal, synchronous and revolving field type
Enclosure	Enclosed drip proof
Cooling	Self-ventilated
Exciter	Brushless type
Insulation	Class F

Other particulars of the emergency generator shall comply with the manufacturer's standard.

### 2.3.2 Space heater

A space heater of suitable capacity shall be installed in the generator to prevent the condensation of moisture when the generator stops.

The heater shall be supplied from emergency AC 100 V system in the emergency switchboard.

### 2.3.3 Prime mover

The prime mover of the generator shall be of air cooled diesel engine and cell motor starting.



## **2.4 STORAGE BATTERY**

### **2.4.1 Emergency battery**

One (1) set of storage battery shall be installed in battery room for the low voltage interior communication and navigation system.

Particulars of the battery shall be as follows :

Capacity	200 Ah at 10 hours discharge rate
Rated voltage	DC 24 V
Type	Lead acid type ( SS-200 )

### **2.4.2 Radio battery**

Refer to the description in **SUBSECTION 10.2 MF/HF RADIO INSTALLATION.**

### **2.4.3 Emergency generator starting battery**

Two (2) sets of storage battery shall be installed in emergency generator room for starting of the emergency generator.

Particulars of each battery shall be as follows :

Capacity	150 Ah at 20 hours discharge rate
Rated voltage	DC 24 V
Type	Lead acid type ( N-150 )

The battery boxes for above storage batteries shall be made of FRP.



## 2.5 TRANSFORMER

Transformers for supplying electric power to lighting, small power equipment, communication, etc. shall be installed.

Each transformer shall be of dry type, natural air-cooled and drip proof construction and class H insulation, and located in dry space free avoiding from dripping water and moisture.

Transformers shall be rated as follows :

- (※) 1 - Three-phase bank consisting of three (3) 25 kVA 450/105 V single-phase transformers in a common box for regular lighting, small power equipment, communication, etc., installed in engine room.
- 1 - 7.5 kVA 440/105 V single-phase transformer for the Suez canal searchlight, lighting and floodlights on fore part of weather deck, installed in boatswain store.
- 1 - 10 kVA 440/105 V single-phase transformer for lighting and floodlights on middle part of weather deck, installed in deck crane house.
- 1 - 10 kVA 440/105 V single-phase transformer for lighting and floodlights on after part of weather deck, installed in deck crane house.
- (※) 1 - Three-phase bank consisting of three (3) 7.5 kVA 450/105 V single-phase transformers for emergency service in emergency generator room.

Three (3) sets of single-phase transformers shall be connected in  $\triangle$  -  $\triangle$  .

When one (1) transformer is out of service, the other two (2) transformers connected in V - V shall be able to supply necessary power under load control.

The transformer marked (※) shall have each one or more glands per one phase for primary and secondary cable respectively.



### **SECTION 3 DISTRIBUTION EQUIPMENT**

#### **3.1 GENERAL**

One (1) main switchboard shall be provided for main generator control and power distribution.

Panel boards shall be provided in suitable positions for supply of power to the various power, heating, lighting, communication and navigation equipment circuit throughout the Vessel.

Each distribution circuit, in general, shall be protected against over-current and short circuit current by a moulded case circuit breaker with inverse time delay over-current trip and instantaneous trip devices fitted on the switchboard or panel board.

The circuit breakers, whose interrupting capacity is less than the maximum possible short circuit current at the point of installation, shall be backed up by a moulded case circuit breaker or current limiting fuses of suitable interrupting capacity and rating.

Back up moulded case circuit breakers shall have instantaneous trips only, but the back up breakers used as feeder breakers shall also have inverse time delay over-current trip.

Insulation mat shall be provided in front and rear side of main switchboard and group starter panel in the engine control room and in front side of emergency switchboard in emergency generator room.



## 3.2 MAIN SWITCHBOARD

### 3.2.1 General

The main switchboard shall be installed in engine control room, and shall consist of three (3) generator panels, generator **control** panel, 440 V feeder panel, 100 V feeder panel and group starter panel.

The main switchboard bus bars shall be subdivided into two (2) parts which shall normally be connected by the disconnecting device except for bolted links.

### 3.2.2 Installation and construction

The main switchboard shall be of dead front box frame construction, and shall have hinged front panels that can be opened without disturbing the meters, pilot lamps, etc. mounted on them.

The both sides of the main switchboard shall be protected by sheet steel plated, and the rear side shall have removable sheet steel covers so that it may be inaccessible to other than qualified persons.

Non-conducting hand rails at the front and the rear shall be provided.

Each circuit on the board shall be distinctly marked by engraved resin make label giving the name of each circuit, size of circuit breaker element and cable size.

Breakers, switches, etc. shall be arranged so that they may be easily manipulated.



### 3.2.3 Fitting part

#### ( 1 ) Generator air circuit breaker

Circuit breakers for generators shall be of motor charging operated trip free air circuit type having long time delay trip, short time delay trip, instantaneous over-current trip and under voltage trip features.

Each circuit breaker shall be provided with necessary interrupting capacity against short circuit current.

#### ( 2 ) Feeder circuit breaker

Feeder circuits emanating from feeder panels of the main switchboard shall be protected by moulded case circuit breakers with inverse time delay thermal trip and instantaneous magnetic trip features.

At least two (2) circuit breakers of 100 A frame size, one (1) is for 440 V feeder and the other is for 100 V feeder, shall be reserved as the spare for the main switchboard.

#### ( 3 ) Meter

Voltmeters, ammeters, wattmeters, etc. shall be of class 1.5 ( error : within 1.5 % of full scale ) and marked with a red line on their respective scales indicating rated value on circuit or machinery to which they are connected.

Voltmeters shall be calibrated up to about 120 % of their rated value and ammeters up to about 130 %.

Wattmeters shall be capable of indicating 15 % reverse power.

#### ( 4 ) Fuse

Control and instrument circuits shall be protected by fuses except circuits where the opening of the fuse might introduce a hazard in operation, such as circuit breaker tripping control circuits.



### ( 5 ) Pilot lamp

Globe colours of pilot lamps shall be designed to indicate operating conditions of the basis of the following :

Milky white	:	Power device
Red	:	Air circuit breaker “ OFF ”
		Shore power “ ON ”
Orange	:	Space heater “ ON ”
Transparent	:	Synchronizing lamp
Green	:	Air circuit breaker “ ON ”

### ( 6 ) Bus bar

All bus bars shall have sufficient current capacity for continuous operation, and provision shall be made for withstanding mechanical strains caused by electromagnetic force of large motor starting current or short circuit current.

All bus bars shall be made of commercial copper, and shall be provided with silver surfaced contacts.

Bus supports shall be of moisture resistant and laminated phenolic material.

### ( 7 ) Wiring

The type of wiring of instrument and control circuit shall be as follows :

660 V single core heat - resisting polyvinyl chloride insulated control wires  
( Type SYP 75°C )

660 V single core heat - resisting cross linked polyethylene insulated flexible wires ( Type SCP 85°C )



### 3.2.4 Generator panel

Each generator panel shall be provided with the following devices :

- 1 - Three-pole air circuit breaker
- 1 - Relay for preference tripping system
- 1 - Reverse power relay

Meter and switch :

- 1 - Voltmeter with change over switch to read the each phase voltage and one phase voltage of main bus
- 1 - Ammeter with change over switch to read the current of phase of the generator
- 1 - Voltage adjuster for automatic voltage regulator

Shore power shall be read with one set of each kind meters ( Voltmeter and Ammeter ).

Indicator lamp :

- 1 - Space heater indicator lamp for the generator
- 1 - Generator running indicator lamp
- 2 - Air circuit breaker indicator lamp : each one (1) for “ON” and “OFF”

Preferential tripping system shall be arranged so that the generator or generators become over-current, the following auxiliaries shall be interrupted and essential service shall be maintained by generator which shall be remained in operation.

Air conditioning refrigerating machine,  
Air conditioning supply fan,  
Hydraulic oil pump for deck machinery,  
Ballast pump,  
Bilge & ballast pump,  
and other non-essential auxiliaries, if necessary

Preference tripping shall be set at about 105 % expressed as a percentage of the rated current of the generator.





### 3.2.5 Generator control panel

Generator control panel shall be provided with following devices :

#### Meter and switch :

- 3 - Three-phase wattmeter
- 1 - Frequency meter for generator with generator select switch
- 1 - Frequency meter for bus with “BUS - OFF - SHORE” select switch
- 1 - Synchroscope with change over switch to indicate phase difference between generator and bus
- 3 - Governor control switch
- 3 - Air circuit breaker control switch
- 1 - Lamp test switch

#### Indicator lamp :

- 1 - Emergency generator “RUN” indicator lamp
- 1 - Emergency generator “STAND-BY” indicator lamp
- 1 - DC 24 V control power source indicator lamp

#### Graphic panel :

- 3 - Air circuit breaker “ON” indicator lamp
- 3 - “AUTO SYNCHRO” push button switch
- 3 - “AUTO DISCON” push button switch
- 3 - Diesel generator “READY TO START” indicator lamp
- 3 - Diesel generator “1ST STAND-BY” indicator lamp
- 3 - Diesel generator “2ND STAND-BY” indicator lamp
- 3 - Diesel generator stand-by select switch
- 3 - Diesel generator start push button switch
- 3 - Diesel generator stop push button switch
- 3 - Diesel generator “RUN” indicator lamp
- 1 - Auto load sharing indicator lamp
- 1 - “SEQUENCE CANCEL” push button switch
- 1 - Control mode “MANUAL - AUTO” change over switch



### 3.2.6 440 V feeder panel

The 440 V feeder panel shall be provided with the following devices and instruments :

Required number - Three-pole moulded case circuit breaker for AC 440 V load

1 - Three-pole moulded case circuit breaker for shore power

The circuit breaker shall be interlocked with the main generator circuit breakers to prevent paralleling.

1 - Shore power pilot lamp

1 - Insulation resistance meter for earth monitor

### 3.2.7 100 V feeder panel

The 100 V feeder panel shall be provided with the following devices and instruments :

Required number - Three-pole moulded case circuit breaker for AC 100 V load

1 - Ammeter for reading each phase of power transformer secondary circuit

1 - Voltmeter for reading each phase of power transformer secondary circuit

1 - Insulation resistance meter for earth monitor

## 3.3 PANEL BOARD

All panel boards shall be of metal cases with front door, and in general shall be of drip proof wall mounted type.

The panel board shall be provided with two-pole or three-pole moulded case circuit breaker of plug-in type to protect each branch circuit.

The panel board shall have paper name plates with a vinyl case on the rear side of the front door giving name of each circuit, size of circuit breaker element and cable size.

The panel board for electric equipment of wheelhouse shall be included in wheelhouse group panel installed in wheelhouse.

Refer to the SUBSECTION **8.8 WHEELHOUSE GROUP PANEL**.



### **3.4 EMERGENCY SWITCHBOARD**

One (1) emergency switchboard shall be installed in the emergency generator room.

The emergency switchboard shall be energized from the main switchboard while main generator is in normal operation.

And once the emergency switchboard bus bar become no-voltage, the emergency switchboard shall be recovered electric source by the emergency generator.

The emergency switchboard shall be provided with the following devices and instruments.

#### **3.4.1 Generator panel**

- 1 - Air circuit breaker
- 1 - Ammeter with a change over switch
- 1 - Voltmeter
- 1 - Three-phase wattmeter
- 1 - Frequency meter
- 1 - Generator engine running indicator lamp
- 1 - Air circuit breaker indicator lamp : "ON"
- 1 - Air circuit breaker indicator lamp : "OFF"
- 1 - Space heater "ON" indicator lamp
- 1 - Set of automatic voltage regulator with voltage adjuster
- 1 - Indicator lamp for power supply from M.S.B.
- 1 - Test switch for periodic testing for emergency generator system
- 1 - Change over switch for voltmeter and frequency meter

For emergency generator starting battery :

- 1 - Charge voltage controller
- 1 - DC voltmeter
- 1 - DC ammeter
- 1 - "TRICKLE" or "QUICK" charge select switch
- 1 - Charge power indicator lamp



#### 3.4.2 440 V feeder panel

Required number - Three-pole moulded case circuit breaker

#### 3.4.3 100 V feeder panel

Required number - Three-pole moulded case circuit breaker

- 1 - Ammeter for reading each phase of power transformer secondary circuit with a change over switch
- 1 - Voltmeter for reading each phase of power transformer secondary circuit with a change over switch
- 1 - Insulation resistance meter for earth monitor

#### 3.4.4 Feeder circuit for electric apparatus

The following electric apparatus shall be fed from the main supply on the normal condition and when the main supply fails, they shall be automatically fed from the emergency supply.

As for emergency lighting, refer to the description in SUBSECTION **7.7 EMERGENCY LIGHTING**.

##### a) AC 440 V apparatus

- No.1 steering gear
- Emergency fire pump
- Em'cy air compressor
- Battery charging and discharging panel
- Free fall life boat davit winch

##### b) AC 100 V apparatus

- MF/HF radio installation
- Nautical and intercommunication equipment
- Navigation light
- Emergency light
- Instrument and alarm system



### **3.5 BATTERY CHARGING AND DISCHARGING PANEL**

#### **3.5.1 Emergency battery**

One (1) battery charging and discharging panel shall be of the dead front construction and floor mounted type, and shall be installed in electric room.

The battery charging shall be floating charge system and the battery shall be kept at a highly charged condition at all times except immediately after discharge.

Manual boost charging facility is also included.

The panel shall be supplied from emergency AC 440 V three-phase system and provided with the following devices and instruments :

- 1 - 30 A silicon rectifier
- 1 - Silicon dropper
- 1 - Transformer
- 1 - Pilot lamp for charge source
- 1 - Voltmeter with change over switch to read the voltage of battery side and load side
- Each 1 - Ammeter to read the current of charging side and load side
- 1 - Disconnecting switch for charge source
- 1 - Charge voltage controller
- 1 - Set of earth detecting lamps with test switch for checking DC 24 V system
- Required number - Two-pole moulded case circuit breaker for 24 V load
- Required number - Fuse

The silicon rectifier shall be of dry and natural cooling type.

#### **3.5.2 Radio battery**

Refer to the description in SUBSECTION **10.2 MF/HF RADIO INSTALLATION**.



### 3.6 SHORE CONNECTION BOX

One (1) 440 V shore connection box shall be of wall mounted drip proof of metal cabinet type with front door, and shall be installed in emergency generator room.






The box shall be provided with the following devices :


- 1 - Three-pole 400 A frame 400 A element moulded case circuit breaker
- 1 - Phase sequence indicator consisting of two (2) lamps
- 1 - Set of terminals for 440 V three-phase shore power cable


### 3.7 ELEMENTARY DIAGRAM OF MAIN DISTRIBUTION

Refer to the next page.

Abbreviation and symbol in this diagram shall be as follows :

	A.C. generator
	Air circuit breaker
	Molded case circuit breaker
	Transformer
	Starter

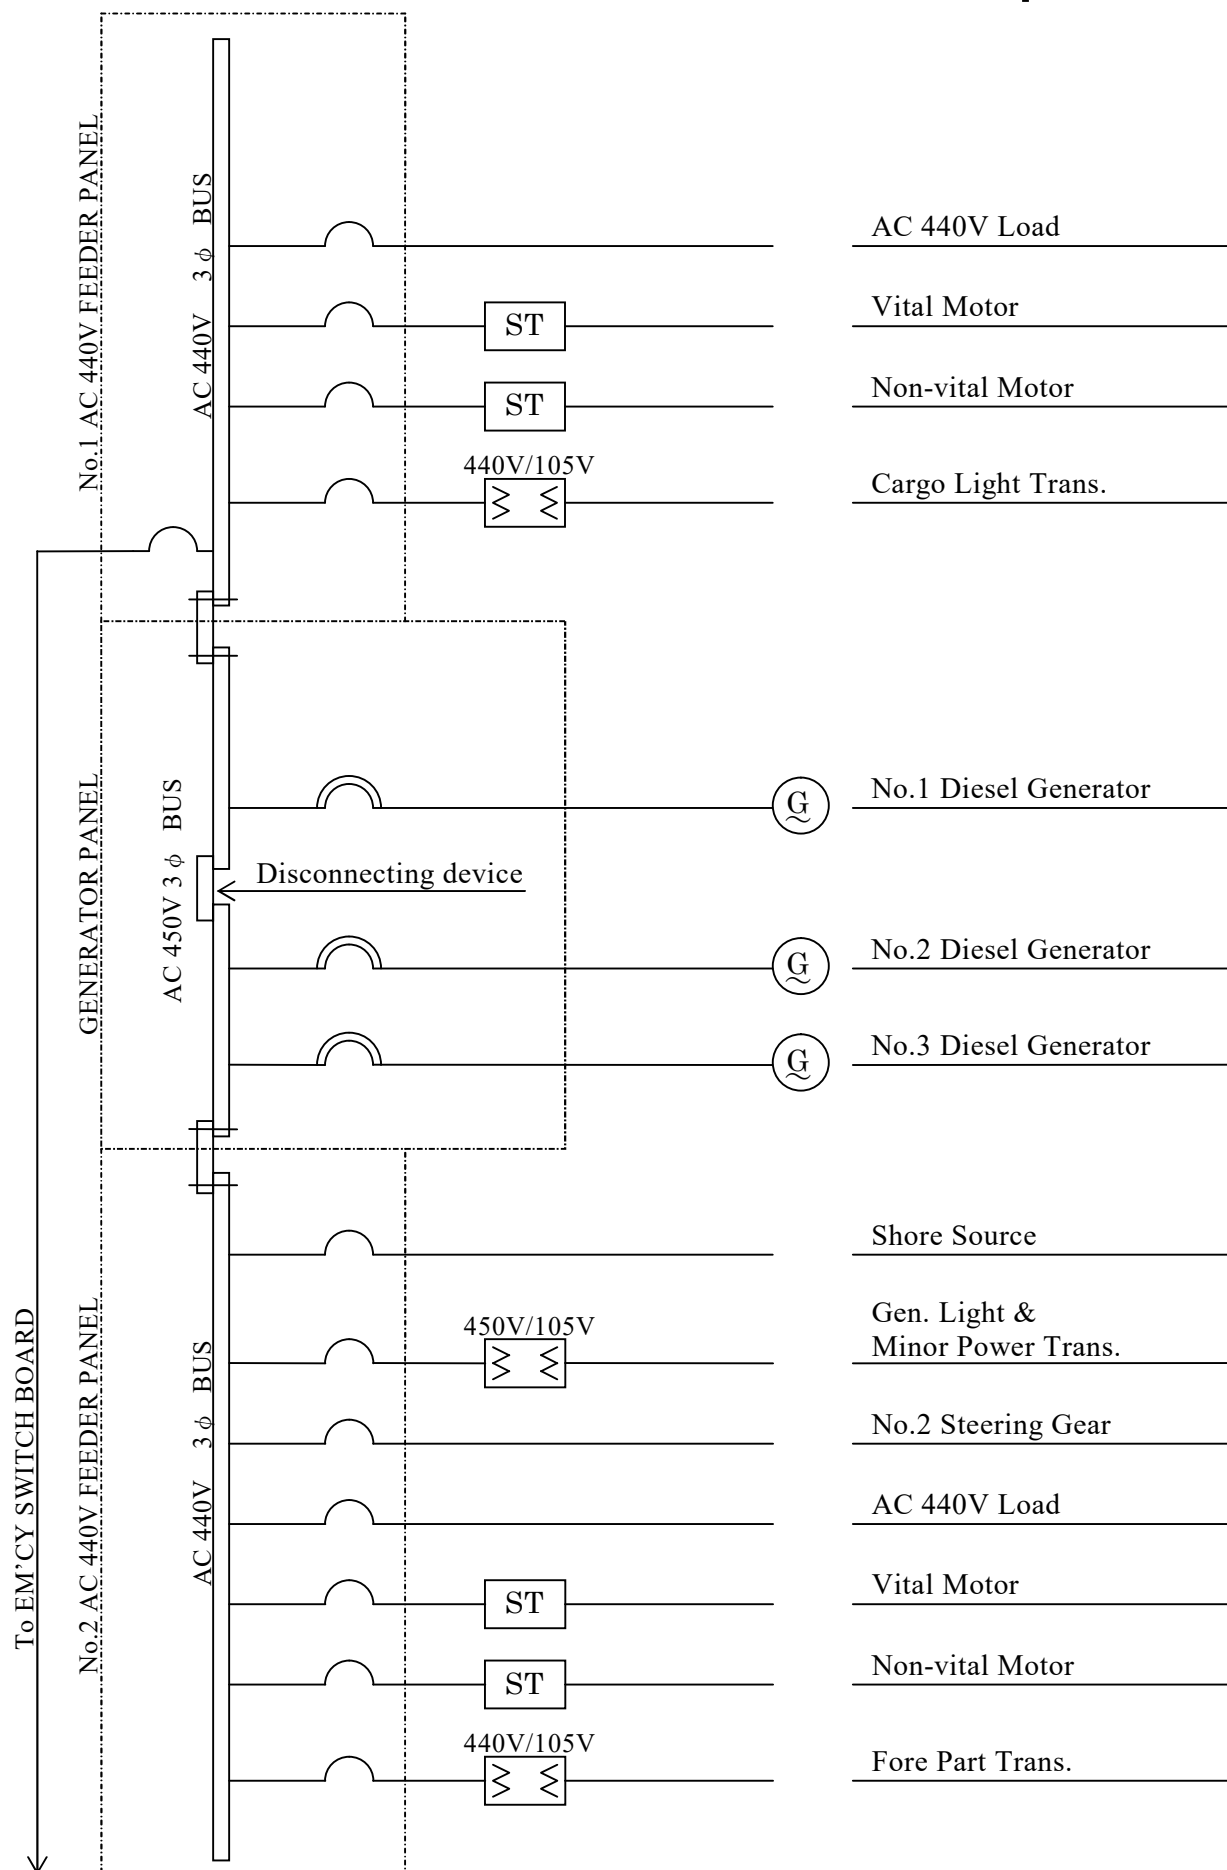

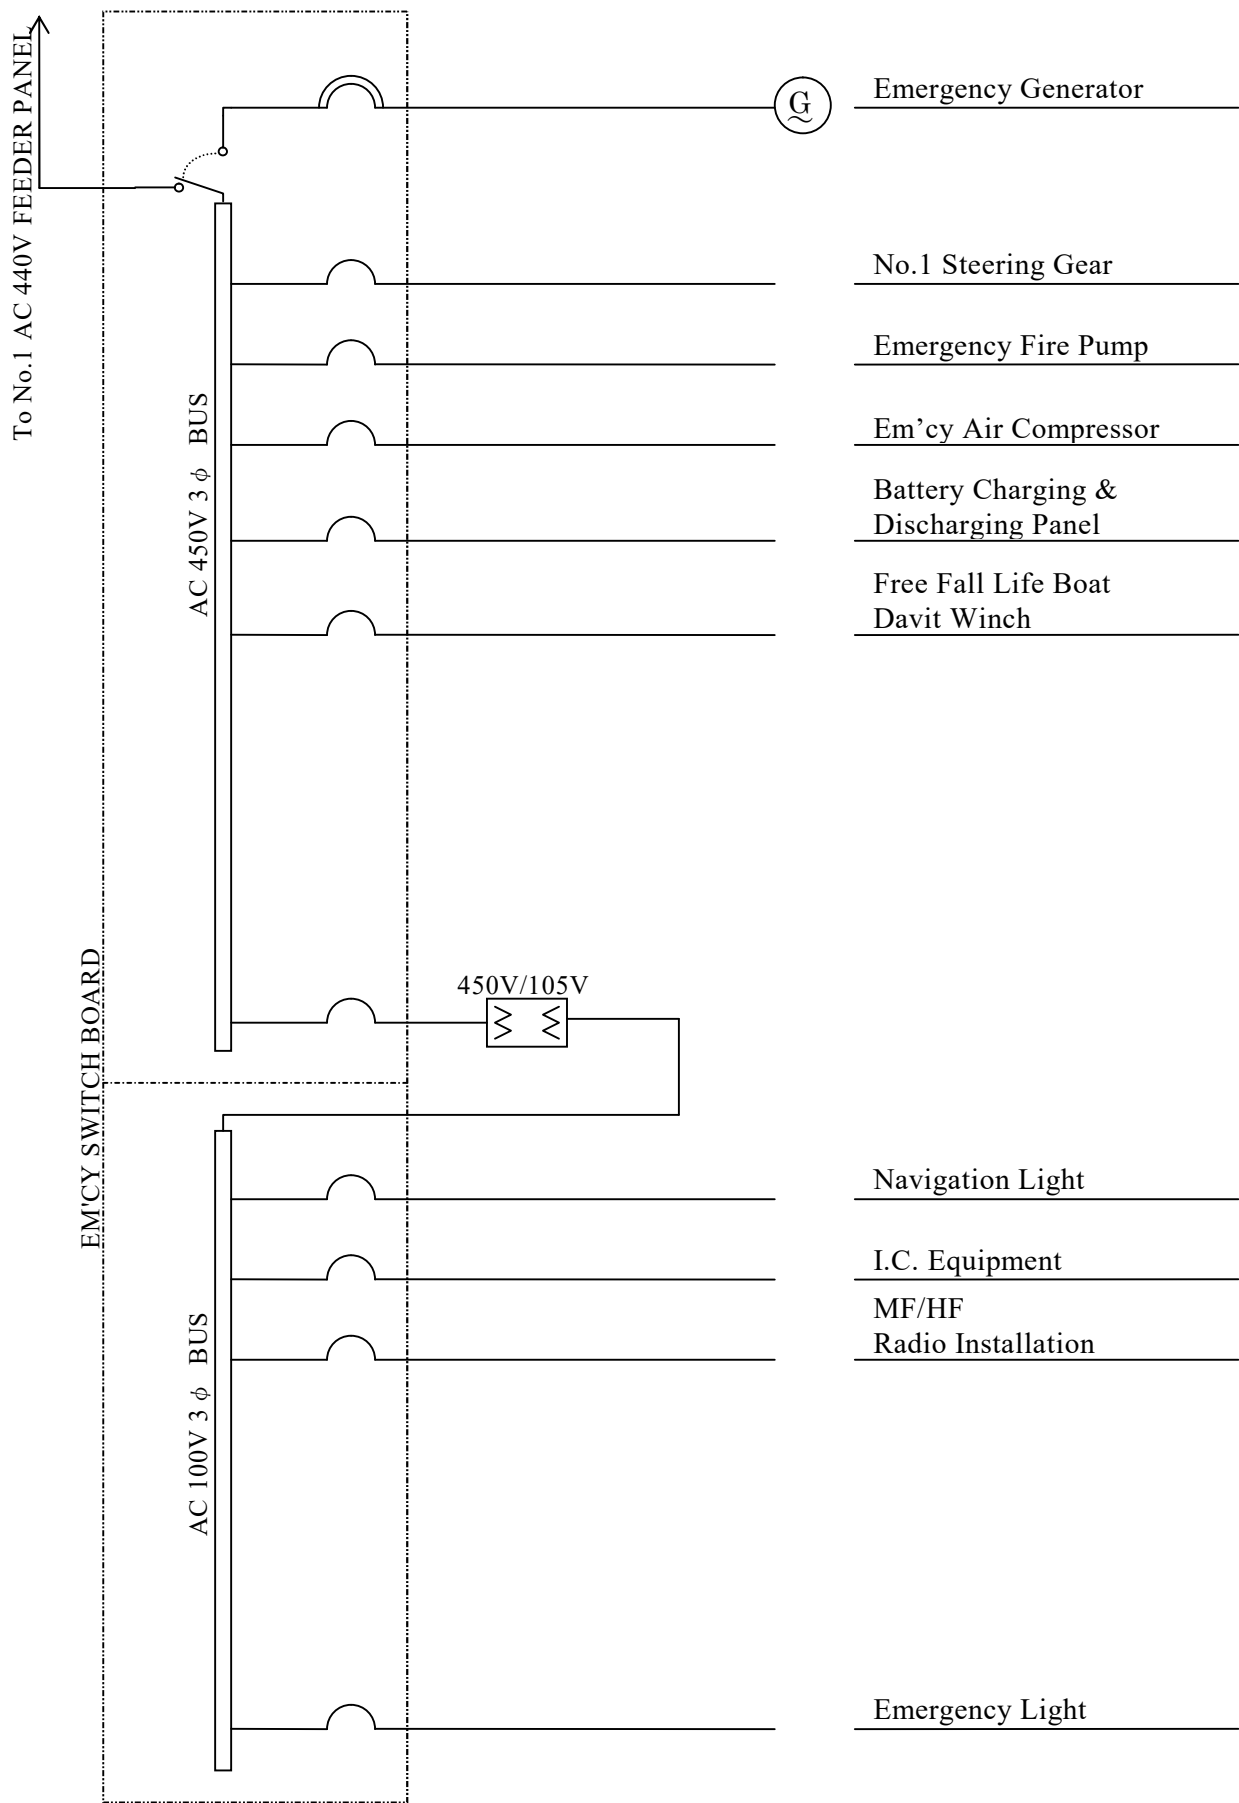





## **SECTION 4 ELECTRIC CABLE AND INSTALLATION**

### **4.1 GENERAL**

All cables throughout the Vessel shall be of JIS ( Japanese Industrial Standard ) or equivalent standard without flammability criteria of IEC 60332-3 Category A.

Installation method for preventing propagation of fire on electric cables which approved by the Classification Society shall be carried out.

All cables shall be installed in compliance with the requirements of the Classification Society.

### **4.2 CABLE APPLICATION**

The type of cables throughout the Vessel shall be selected in compliance with the following table to match to their locations.

Cable location or purpose	Type of cable
Main distribution and general use except mentioned below	PYC
Part exposed directly to weather, refrigerating provisions chamber and battery room	PYCY
Portable fixtures in living quarters	Y insulated Y sheathed flexible cord
Portable fixtures and appliance outside living quarters	P insulated N sheathed flexible cord
Electronic apparatus circuit etc.	PYC or TTYC
General use in living quarters	PYC or PY
Microphone circuit, echo sounder, etc.	PYCS



Remarks :

( 1 ) Abbreviations

Insulation ( First letter )

P	:	EP rubber
Y	:	Polyvinyl chloride
SR	:	Silicone rubber
TT	:	Telephone and instrumentation use ( Polyvinyl chloride insulated )
FR	:	Fire resisting type in accordance with IEC 60331

Sheath ( Second letter )

Y	:	Polyvinyl chloride sheath
L	:	Lead sheath
N	:	Chloroprene sheath

Armoring ( Third letter )

C	:	Steel wire braid
---	---	------------------

Protective covering ( Fourth letter )

Y	:	Polyvinyl chloride
S	:	Shield

- ( 2 ) In general, flexible cords for portable fixture shall be provided with an earth continuity conductor, which shall be effectively connected to the earth terminal of the receptacle.
- ( 3 ) Special cables such as compensating cables, shield cables, coaxial cables, etc. shall be used where necessary.



### 4.3 CABLE INSTALLATION

#### 4.3.1 General

Cables shall be located so as to avoid spaces where excessive heat and moisture may be encountered.

Cables which are liable to be exposed to mechanical damage shall be protected by suitable means.

Wiring throughout the Vessel shall be carefully arranged to eliminate fire risks.

#### 4.3.2 Cable support

Cables shall be supported on metal hangers placed with the clear from steel hull structures to permit painting except that cables may be installed directly on wooden walls or other non-rusting materials on which painting shall not be necessary for maintenance. Material of all cable hangers shall be of steel with corrosion resistant finish.

Cables shall be secured with steel hoops and steel buckles, except that cables shall be secured with stainless steel hoops and buckles on the exposed weather part and in the refrigerated provisions chambers.

Where cables pass through watertight decks or bulkheads, coaming with compound for cable penetration shall be employed.

Where cables pass through non-watertight bulkheads, beams or girders, suitable consideration shall be paid not to damage the cables.

Where cables pass through non-watertight decks, coaming for cable penetration may be used.

Where cables penetrate through fire protection divisions, the sealing material approved by the Classification Society should be applied.



#### 4.3.3 Cable installation

Cables in accommodation, where lining panel is applied over the hull structures, shall be concealed as far as practicable.

The cables shall not be embedded in structural insulation.

If the cables are exposed in the rooms of all cabin, they shall be covered.

In general, the cables in engine room, locker room, etc. shall be exposed.

Branch cable way for the fore mast shall be protected by galvanized steel pipes up to a suitable height above the deck.

#### 4.3.4 Cable and wire connection

All cables connected to the electric machinery shall be terminated at the proper terminals and/or plug/socket type cable connectors.

In addition, spring loaded type cable connectors shall be used for lighting fixtures and wiring fixtures such as junction boxes, etc.



## **SECTION 5 POWER EQUIPMENT**

### **5.1 GENERAL**

In general, the Specification described in this section shall be applied to motors, their controls and other power equipment made by the manufacturers decided in “**LIST OF SELECTED PRINCIPAL MANUFACTURERS**” .

The household service motors, motors attached to machines and their control equipment shall be constructed in accordance with manufacturer’s standard.

### **5.2 MOTOR**

#### **5.2.1 General**

All motors shall be squirrel cage induction motors of International Electrotechnical Commission Standard Frame designed for AC 440 V three-phase 60 Hz, except the motors of 0.4 kW rating and less may be of AC 100 V single-phase or three-phase type.

All motors shall be rated for continuous duty unless otherwise specified.

#### **5.2.2 Enclosure**

In general, as regards enclosure application for each motor, refer to **5.2.a Application for enclosure and insulation class**.

Motors located on weather deck shall be of totally enclosed waterproof type except accommodation ladder and pilot ladder motor installed in a steel box, if provided.

#### **5.2.3 Insulation**

In general, as regards insulation application for each motor, refer to **5.2.a Application for enclosure and insulation class**.

However, application for enclosure and insulation class of motors with which the machinery and equipment are mounted shall be in compliance with the manufacturer’s standard.



### 5.2.a Application for enclosure and insulation class

TE : Totally enclosed with or without fan cooled  
 EVDP : Enclosed ventilated drip proof  
 B : Insulation class B  
 F : Insulation class F

Pole Output (KW)	2P	4P	6P	8P	Remarks
0.4	TE, B	TE, B	TE, B	TE, B	
↓					
11				↓	
15			↓	TE, F	
18.5			TE, F		
22	↓	↓			
30	TE, F	TE, F		↓	
37				EVDP, F	
45			↓		
55	↓	↓	EVDP, F		
75	EVDP, F	EVDP, F			
↓	↓	↓	↓	↓	



#### 5.2.4 Bearing

All motors shall be provided with ball bearing of international size.

For vertical motors, thrust bearing shall be fitted to take thrust in both directions.

Radial ball bearings may be deemed as thrust bearing provided they can take thrust for the expected service.

#### 5.2.5 Lubrication

Lubrication of large capacity motors with open ball bearings shall be by means of pin type grease nipples.

Where grease nipples and relief plugs on the motors are inaccessible, they shall be extended by means of pipes so as to make them accessible.

The bearings shall be of the type designed to prevent leakage of grease to the motor windings.

For medium and small capacity motors, according to the manufacturer's standard, the bearings shall be of prelubricated ball bearing type.

Grease shall be in accordance with motor's manufacturer's standard.

#### 5.2.6 Terminal box

All motors shall be provided with waterproof terminal boxes of cast iron or steel plate construction with gland and removable cover.

The terminal box shall contain solderless terminals of suitable size secured on an insulating board facilitating connection of cable.

#### 5.2.7 Space heater

In general, space heater for motors shall not be provided.

If provided, abbreviation "SH" for space heater shall be described in **SUBSECTION 5.5 LIST OF MOTOR AND CONTROL.**



### 5.3 MOTOR CONTROL

#### 5.3.1 General

##### ( 1 ) Starting system

All controls shall be magnetic type except that starters for non-essential motors of 0.5 kW rating and less may be manually operated by moulded case circuit breakers only.

In general, the starter shall be of the across-the-line type.

When the across-the-line starting of large motor causes running motors or the control relays to drop out due to the voltage drop occasioned by the starting current, the starters shall be of reduced voltage type.

##### ( 2 ) Construction

Starters located in engine room, in general, shall be assembled in a suitable number of group starter panels, and the other starters shall be of individual starter type.

##### ( 3 ) Low voltage feature

All controls except for non-essential motors of 0.5 kW rating and less shall be provided with low voltage protection or release features.

Steering gear motors, essential service motors and motors operated automatically shall be provided with low voltage release feature to permit the restarting automatically of these motors on restoration of power.

The others shall be provided with low voltage protection.

As regards low voltage feature application for each motor,  
refer to **SUBSECTION 5.5 LIST OF MOTOR AND CONTROL.**

##### ( 4 ) Over-current protection

An ambient-compensated over-current relay of thermal type with two (2) current elements shall be provided for each starter.

The relay shall be of manual resetting type with a reset switch operated at inside of starter cabinet, except automatic resetting type for over-current alarm of steering gear motors.





( 5 ) Potential of control circuit

The potential of control circuits, in general, shall be 440 V.

However for magnet valves, thermostats, complicated master switches, etc. which are not practicable to operate on 440 V, 110 V shall be employed by means of potential transformers.

( 6 ) Line disconnecting switch

A three-pole disconnecting switch of outside operating type shall be provided for each starter.

Where the starter is situated near the switchboard or panel board to which the circuit is connected, the disconnecting switch may be omitted.

For group starter panel, this switch shall be moulded case circuit breaker which function both disconnecting means and motor branch circuit short circuit protective device.

( 7 ) Master switch

Start and stop master switch, in general, shall be mounted on the front door of starter.

Where the starter is remote from the motor ( out of sight of the motor ), a local start and stop master switch shall be provided near the motor except for ventilating fan motors.

On the local master switch near the motor, provision shall be made for locking "OFF" position.



### 5.3.2 Group starter panel

The group starter panels shall be of dead front floor mounted or wall mounted type according to the size and/or the location.

The starter for each motor shall be built into a non-draw-out type enclosed metal cubicle with a hinged door, in such manner, the troubles in any cubicles shall not extend to the others and any cubicles may be repaired and/or checked safely with energizing the adjacent cubicles.

The starter arrangements shall be of front mounted type.

Each starter, in general, shall consist of the following components :

- Three-pole moulded case circuit breaker
- Three-pole magnetic contactor
- Thermal type over-current relay
- Start and stop master switch
- Running indicating light
- Source indicating light

### 5.3.3 Individual starter

Individual starters shall be mounted in drip proof sheet steel cabinets wall mounted or floor mounted type according to the size.

Each starter, unless of moulded case circuit breaker type starters, shall consist of the following components :

- Three-pole line disconnecting switch, unless otherwise specified
- Three-pole magnetic contactor
- Thermal type over-current relay
- Start and stop master switch
- Running indicating light
- Source indicating light



#### 5.3.4 Emergency stop switch

In order to prevent the spread of fire, an emergency stop switch for engine part shall be provided for the following motors and located in the passage or changing room on the upper deck outside of the engine room and in fire station.

- Engine room ventilating fan
- Fuel oil transfer pump
- Diesel oil transfer pump
- Lubricating oil transfer pump
- Fuel oil purifier
- M/E fuel oil circulating pump
- Fuel oil booster pump
- Boiler HFO/MGO burning pump
- Boiler forced draft fan
- M/E auxiliary blower
- Package air conditioner  
( Engine control room )
- Incinerator
- Diesel generator fuel oil circulating pump
- Diesel generator diesel oil booster pump
- Main lubricating oil pump
- Lubricating oil purifier
- Lubricating oil purifier supply pump
- Stern tube lubricating oil pump
- Diesel generator lubricating oil purifier
- Diesel generator lubricating oil purifier supply pump
- Motor for M/E hydraulic system
- Fuel oil shifter pump

In order to prevent the spread of fire, an emergency stop switch for deck part shall be provided on the wheelhouse group panel and in fire station for stopping the following ventilating fans.

- Air conditioning supply fan
- Galley exhaust fan
- Sanitary space exhaust fan
- Package air conditioner  
( Galley )



These above switches shall be so located and protected ( breakable plastic cover or equivalent ) as to prevent unauthorized stopping of the equipment.

Emergency stop push button switch for Bilge pump and sludge pump shall be installed at both side of upper deck.

Emergency stop push button switch for Hydraulic oil pump for deck machinery shall be installed near the local control station.

#### 5.3.5 Special control function

##### ( 1 ) Remote control

For the Steering gear motors, remote start and stop switches shall be installed in wheelhouse.

One (1) of Engine room ventilating fan shall be remotely operated from fire station.

For the Fire & general service pump, remote start and stop switches with running lamp shall be provided on wheelhouse group panel and in fire station.

The Turning gear motor shall have a portable start and stop switch with flexible cord so that the turning gear can be operated from any position inside the crank case and upper part of main engine.

##### ( 2 ) Running indication and stop alarm

Refer to the description in **III - MACHINERY PART.**

##### ( 3 ) Auto start and/or stop

Refer to the description in **III - MACHINERY PART.**



#### ( 4 ) Ammeter

The ammeter shall be provided on the starters in accordance with the motors and fans of 5.5 kW rating or more except manufacture's standard.

Furthermore, the ammeter shall be provided on each starter for M/E F.O. pump, M/E L.O. pump, D/G F.O. or D.O. pump, D/G water pump and S/T L.O. pump irrespective of motor capacity.

The ammeters shall be of class 2.5 ( error : within 2.5 % of full scale ) and marked with a red line on their respective scales indicating rated full load current of the motor.

The ammeters shall be calibrated up to about 130 % of their rated value, and furthermore shall have about 200 % extension scales.

### 5.4 SEQUENTIAL START OF VITAL MOTOR

Vital use motors shall be started sequentially in case of recovery of main bus voltage after the power failure.

### 5.5 LIST OF MOTOR AND CONTROL

Abbreviation in this list shall be as follows :

EVDP	Enclosed ventilated drip proof
TE	Totally enclosed with or without fan cooled
TEWP	Totally enclosed waterproof
V	Vertical
H	Horizontal
IND	Individual starter
GSP	Starter assembled in group starter panel
LVP	Low voltage protection
LVR	Low voltage release
o	Fitted
-	Not fitted
MB	Motor breaker
SH	Space heater
RH	Running hour meter
( M )	Pump & etc. manufacturer's supply

Particulars in this list may be altered according to the manufacturer's standard and progress of detail design of auxiliary machinery by the Builder.

## 5.5.1 Deck part

Item	Use	No. of set	Output (kW)	Synchronous (min <sup>-1</sup> )	Type	Control type	Ammeter	Remarks
101	Steering Gear	2	11	1,800	TE, H	IND, LVR	○	50%×2 <del>No.1: Y-△ Start</del>
102	Electric Hyd. Oil Pump for Deck Machinery	2	85	1,800	EVDP, H	GSP, LVP	○	Y-△ Start SH
103								
104	Pilot Ladder Winch	2	3.7	1,800	(M)	IND, LVP	—	
105	Accommodation Ladder Winch	2	3.7	1,800	(M)	IND, LVP	—	
106	Free Fall Life Boat Davit Winch	1 1 1	7.5 7.5 7.5	1,800 1,800 1,800	(M) (M) (M)	(M), LVP (M), LVP (M), LVP	—	Y-△ Start
107	Life Raft / Rescue Boat Davit Winch	1 1	7.5 0.75	1,800 —	(M) (M)	(M), LVP (M), LVP	—	
108	Provision Refrigerating Machine	2	3	1,800	(M)	(M), LVP	—	Auto Start/Stop (LVR)
109	Air Conditioning Refrigerating Machine	1	22	1,800	(M)	(M), LVP	○	
110	Air Conditioning Supply Fan	1	15	1,800	TE, H	(M), LVP	○	
111	Galley Exhaust Fan	1	0.75	1,800	TE, V	IND, LVP	—	
112	Sanitary Space Exhaust Fan	2	0.4	1,800	TE, V	MB	—	
113								
114	Provision Crane ( 2.5 ton )	1 1	7.5 1.5	1,800 1,800	(M) (M)	(M) (M)	—	
115	Provision Crane ( 0.9 ton )	2 2	2.2 0.4	1,800 1,800	(M) (M)	(M) (M)	—	
116								
117	Emergency Fire Pump	1	26	3,600	TE, V	IND, LVP	○	Y-△ Start



Item	Use	No. of set	Output (kW)	Synchronous (min <sup>-1</sup> )	Type	Control type	Ammeter	Remarks
118	Deck Crane	4	105/240	1,800	( M )	( M )	○	SH Cont./15%ED
119	Oil Cooler Fan for Deck Crane	4	5.5	1,800	( M )	( M )	—	
120								
121	Galley Air Conditioner	1	3.7	3,600	( M )	( M ), LVP	—	
122								
123								
124								
125								
126								
127								
128								
129								
130								
131								
132								
133								
134								



## 5.5.2 Engine part

Item	Use	No. of set	Output (kW)	Synchronous (min <sup>-1</sup> )	Type	Control type	Ammeter	Remarks
201	Turning Gear	1	2.2	1,200	( M )	( M ), LVP	○	
202	Main Air Compressor	2	30	1,800	TE, H	GSP, LVP	○	Auto Start/Stop ( LVR )
203	Emergency Air Compressor	1	3.7	1,200	TE, H	IND, LVP	—	
204	Cooling Sea Water Pump	2	55	1,800	TE, V	GSP, LVR	○	Auto Change
205	Main Air Compressor Cooling Fresh Water Pump	2	1.5	3,600	TE, H	GSP, LVP	—	Auto Start/Stop ( LVR )
206	Jacket Cooling Fresh Water Pump	2	22	1,800	TE, V	GSP, LVR	○	Auto Change
207	Main Lubricating Oil Pump	2	60	1,800	TE, V	GSP, LVR	○	Auto Change Y — △ Start
208	MGO Cooling Fresh Water Pump	1	1.5	3,600	TE, H	GSP, LVR	○	
209	M/E Fuel Oil Circulating Pump	2	3.7	1,200	TE, H	GSP, LVR	○	Auto Change
210	Fuel Oil Booster Pump	2	1.5	1,200	TE, H	GSP, LVR	○	Auto Change
211	M/E Auxiliary Blower	2	45	3,600	( M )	( M ), LVP	○	Auto Start/Stop ( LVR )
212	Motor for M/E Hydraulic System	2	51	1,800	( M )	( M )	○	
213	Fuel Oil Transfer Pump	1	5.5	1,200	TE, H	GSP, LVP	○	Auto Start/Stop ( LVR )
214	Diesel Oil Transfer Pump	1	2.2	1,200	TE, H	GSP, LVP	—	Auto Start/Stop ( LVR )
215	Lubricating Oil Transfer Pump	1	1.5	1,200	TE, H	GSP, LVP	—	
216	Deck Service Air Compressor	1	30	1,800	TE, H	( M ), LVP	—	
217	Fan for Deck Service Air Compressor	1	1.5	1,800	TE, H	( M ), LVP	—	





Item	Use	No. of set	Output (kW)	Synchronous (min <sup>-1</sup> )	Type	Control type	Ammeter	Remarks
218	Fuel Oil Purifier	2	5.5	1,800	( M )	( M ), LVP	○	
219	Lubricating Oil Purifier	1	5.5	1,800	( M )	( M ), LVP	○	
220	Lubricating Oil Purifier Supply Pump	1	0.75	1,200	TE, H	GSP, LVP	—	
221	D/G Lubricating Oil Purifier	1	3.7	1,800	( M )	( M ), LVP	○	
222	D/G Lubricating Oil Purifier Supply Pump	1	0.4	1,200	TE, H	GSP, LVP	—	
223								
224	Boiler HFO/MGO Burning Pump	1	0.75	3,600	( M )	( M ), LVP	—	
225	Boiler Forced Draft Fan	1	2.2	3,600	( M )	( M ), LVP	○	
226	Boiler Feed Water Pump	2	7.5	3,600	TE, H	( M ), LVP	—	Auto Start/Stop(LVR) Auto Change
227	Boiler Fuel Oil Heater	1	6		( M )	( M )	—	
228	Boiler Pilot Burner Pump	1	0.09	3,600	( M )	( M ), LVP	—	
229								
230	Ballast Pump	2	90	1,800	EVDP, V	GSP, LVP	○	Y — △ Start SH
231	Bilge and Ballast Pump	1	50	3,600	TE, V	GSP, LVP	○	
232	Fire and General Service Pump	1	50	3,600	TE, V	GSP, LVP	○	Start/Stop from W/H & Fire station
233	Bilge Pump	1	0.75	1,200	TE, H	GSP, LVP	—	Auto Stop
234	Sludge Pump	1	1.5	1,200	TE, H	GSP, LVP	—	



Item	Use	No. of set	Output (kW)	Synchronous (min <sup>-1</sup> )	Type	Control type	Ammeter	Remarks
235	Fresh Water Pump	1	3.7	3,600	TE, V	GSP, LVP	—	Auto Start/Stop (LVR)
236	Drinking Water Pump	1	3.7	3,600	TE, V	GSP, LVP	—	Auto Start/Stop (LVR)
237	Refrigerating Machine Cooling Sea Water Pump	1	7.5	3,600	TE, H	GSP, LVR	○	
238								
239	Hot Water Circulating Pump	1	0.4	3,600	TE, H	IND, LVP	—	
240	Diesel Generator Fuel Oil Circulating Pump	2	1.5	1,200	TE, H	GSP, LVR	○	Auto Change
241								
242	Diesel Generator Diesel Oil Booster Pump	1	3.7	1,200	TE, H	GSP, LVR	○	Auto Start by D/G start signal
243	Diesel Generator Lubricating Oil Priming Pump	3	0.94	3,600	(M)	GSP, LVP	—	Auto Start/Stop (LVR)
244								
245	Stern Tube Lubricating Oil Pump	2	0.4	1,200	TE, H	GSP, LVR	○	Auto Change
246								
247	Fuel Oil Shifter Pump	1						
248								
249								
250								
251	Calorifier Unit	1	15		(M)	(M)	—	



Item	Use	No. of set	Output (kW)	Synchronous (min <sup>-1</sup> )	Type	Control type	Ammeter	Remarks
252	Engine Room Ventilating Fan	2	7.5	1,200	TE, V	GSP, LVR	○	Reversible
253	Engine Room Ventilating Fan	1	7.5	1,200	TE, V	GSP, LVR	○	
254								
255	Engine Control Room Air Conditioner	1	2.2	3,600	( M )	( M ), LVP	—	
256	Drilling Machine	1	0.4	1,800	( M )	( M ), LVP	—	
257	Lathe	1	2.2	1,800	( M )	( M ), LVP	—	
258	Grinding Machine	1	0.75	1,800	( M )	( M ), LVP	—	AC 440V 3 φ
259	Overhead Travelling Crane	1 2	2.2 0.2	900 1,800	( M )	( M ), LVP	—	
260	Fresh Water Generator	1 1	0.75 5.5	3,600 3,600	( M )	( M ), LVP	— ○	
261	Waste Oil Incinerator	1 1 1	0.1 7.5 1.5	1,800 3,600 3,600	( M )	( M ), LVP	—	
262	Water Pressure Pump for Local Fire Fighting System	1	6.3	3,600	( M )	( M ), LVP	○	Auto Start/Stop ( LVR )
263								
264								
265								
266								
267								
268								





## **SECTION 6 MISCELLANEOUS ELECTRICAL EQUIPMENT**

### **6.1 COMMISSARY AND LAUNDRY EQUIPMENT**

Electrical commissary and laundry shall be installed according to **II - HULL PART**.

The motors shall be of the manufacturer's standard and suitable for 440 V three-phase, except that motor of 0.4 kW rating and less may be designed for 100 V single-phase or three-phase.

The fixed heating equipment of large capacity shall be suitable for AC 440 V three-phase, and other equipment for AC 100 V single-phase.

### **6.2 ARC WELDER**

Two (2) sets of arc welder of single-wire system, rating 300 A capacity, fixed type, shall be installed in engine room and No.2 deck crane house.

The arc welder shall be of AC 440 V single-phase transformer type and extension cable of 120 m length in total, i.e. 4 - 30 meters length.

### **6.3 RECEPTACLE FOR GENERAL PURPOSE**

Receptacles for general purpose shall be installed as follows :

#### **6.3.1 Capacity up to approximately 600 W**

- 1 - Hospital
- 1 - Captain's day room
- 1 - Chief engineer's day room
- 1 - Radio instruments space
- 2 - Saloon
- 2 - Crew's smoking room
- Each 1 - Inner passage (each deck)



### 6.3.2 Capacity up to approximately 1.2 kW

3 - Galley	3 - Wheelhouse
4 - Officer's mess room	3 - Ship's office
1 - Saloon	3 - Meeting room
4 - Crew's mess room	Each 1 - Each pantry
1 - Crew's smoking room	
1 - Work shop	
1 - Engine control room	
1 - Gymnasium	

## 6.4 IMPRESSED CURRENT CATHODIC PROTECTION SYSTEM

Not fitted

## 6.5 ELECTRIC HEATER

Not fitted

## 6.6 RECEPTACLE FOR 440 V EQUIPMENT

Receptacle with switch for 440 V equipment ( AC 440 V 16 A 3 phase ) shall be installed as follow :

- 1 - Air conditioning & Refrigerating machine room



## SECTION 7 LIGHTING

### **7.1 GENERAL**

#### **7.1.1 General**

The Vessel shall be illuminated throughout with fluorescent lamps designed for location and service requirements, except that stores, lockers, outside passages and weather deck shall be illuminated with incandescent lamps.

Mercury flood light shall be used for deck illumination and also for general illumination in engine room.

In general, fixtures and fittings shall be arranged for surface mounting and shall be of the following type depending upon their location.

Waterproof type	Spaces exposed to the weather, refrigerated provisions chamber, etc.
Non-waterproof type	Living quarters, wheelhouse, etc.
Drip proof type	Machinery spaces, galley, deck stores, laundry and other location exposed to heat or moisture
Explosion proof type	Battery room, paint & lamp store

Fixtures and fittings shall be generally constructed to meet Japanese Industrial Standard ( JIS ) type and/or the Builder's standard.

Lighting shall be arranged so as to obtain the average illumination level which is in compliance with JIS standard ( Recommended intensity of illumination ) for accommodation and machinery spaces.



### 7.1.2 Lighting fixture and fitting

All construction of fixtures shall be made of cast iron or PVC except that corrosion resistant materials or materials with corrosion resistant finishes shall be used for fixtures exposed to the weather.

Fluorescent lamps shall be of preheat type, using starters ( glow lamps ) and their ballasts shall be of low power factor type.

Fiber-contained bakelite material may be used for switches, plug and receptacles, branch boxes, etc. and phenol resin material for those of non-waterproof type.

### 7.1.3 Lamp bulb and lamp holder

All lamp bulbs and lamp holders shall be used on JIS size as follows :

<u>Kind</u>	<u>Lamp bulb</u>	<u>Lamp holder</u>
Incandescent lamp	100 V lamps up to 250 W	E - 26
	100 V lamps above 250 W	E - 39
Fluorescent lamps ( straight tubes )	10 W, 15 W, 20 W and 40 W	G - 13
	Glow lamps	P - 21
Mercury flood light lamps	400 W and 700 W	E - 39
Pilot lamps	18 V incandescent lamps of 2 W	E - 12
	30 V incandescent lamps of 1 W	BA - 9S

Where the mounting spaces do not permit the use of E-26 base lights, special illuminating lights mounted inside instruments may be B-15d base or other suitable size by using a transformer.

Lamp holders shall be of porcelain or other heat resistant material and shall be designed to prevent loosening of the lamp.



## **7.2 NAVIGATION AND SIGNAL LIGHT**

### **7.2.1 Electric navigation light**

A complete set of waterproof electric navigation lights shall be installed as follows :

- 2 - Masthead light
- 1 - Stern light
- 1 - Port side light
- 1 - Starboard side light

The navigation lights shall be controlled from navigation light indicator panel on wheelhouse group panel and shall be of duplicate 60 W or 40 W incandescent lamp type.

The navigation light indicator panel shall have a control switch for each running light, which shall cause audible and visible indication of the failure of any of the above-mentioned navigation lights in use.

The navigation light indication panel shall be supplied by two (2) separate feeders : one (1) from AC 100 V system and the other from emergency AC 100 V system.

### **7.2.2 Anchor light**

Two (2) fixed electric anchor lights of waterproof single 40 W incandescent lamp type shall be provided, one (1) forward and one (1) aft, and shall be controlled from switches in the navigation light indicator panel.

### **7.2.3 Not under command light**

Two (2) lamps and two (2) flexible cord with plugs for hanging type electric not under command lights of single 60 W incandescent red lamp shall be provided.

Provision for hanging this light shall be provided on the radar mast.

Two (2) receptacles for them shall be installed on lower part of the radar mast.

These lights shall be supplied from emergency AC 100 V system and controlled from a switch on wheelhouse group panel.

### **7.2.4 Maneuvering light**

One (1) set of Maneuvering light ( 60 W incandescent lamp ) shall be installed on radar mast.

This light shall be commonly used also for the air horn lamp emitter.

The light shall be supplied from AC 100 V single-phase system.





#### 7.2.5 Daylight signaling light

One (1) set of 60 W incandescent portable daylight signaling light shall be provided as follows :

- 1 - Pistol type portable daylight signaling light with 10 m cord
- 1 - Battery charger
- 1 - Lamp case with battery
- 1 - Relay cord for connection between battery charger and battery

Each one (1) receptacle ( total 2 ) shall be installed on the wall of both sides in wheelhouse and supplied from DC 24 V system.

One (1) receptacle for battery charger shall be installed in wheelhouse and supplied from emergency AC 100 V system.

#### 7.2.6 Suez Canal signal light

One (1) set of fixed type Suez Canal signal lights ( 4 - red lamp, 5 - white lamp and 1 - green lamp ) shall be installed on radar mast.

Each lamp shall be of 40 W incandescent lamp type and controlled from the switches on wheelhouse group panel.

Furthermore 40 W incandescent portable light ( 1 - red lamp ) and a receptacle shall be provided on suitable position of stern.

The light shall be supplied from AC 100 V system.

#### 7.2.7 Propeller warning light

Not fitted

#### 7.2.8 Steering light

Two (2) 40 W fixed type blue lamps shall be installed on the fore mast, and controlled from wheelhouse.

One (1) dimmer switch shall be installed in wheelhouse.

The light shall be supplied from AC 100 V system.

#### 7.2.9 Suez Canal searchlight

One (1) set of 3 kW Suez Canal searchlight shall be supplied by the Owner, and wiring of AC 100 V 3 kW capacity and junction box for the searchlight shall be installed on the upper deck.



#### 7.2.10 Warning light

Not fitted

### 7.3 **LIGHTING - DECK ETC.**

#### 7.3.1 Boat deck light

Three (3) 300 W incandescent flood lights shall be installed : one (1) for each space of lifeboat station, rescue boat station and after life raft station.

These lights shall be mounted on brackets so constructed that they can be swung inboard for deck lighting and outboard for overside lighting, and shall be rigidly locked in either position.

These lights shall be controlled from wheelhouse group panel, and shall be supplied from emergency AC 100 V system.

#### 7.3.2 Boat preparation light

One (1) 60 W incandescent light shall be installed near the lifeboat.

The light shall be supplied from emergency AC 100 V system.

#### 7.3.3 Life raft installation light

Total three (3) 60 W incandescent lights shall be installed near the life raft; one (1) for each life raft.

These lights shall be supplied from emergency AC 100 V system.

#### 7.3.4 Life raft launching light

One (1) 300 W portable reflector type incandescent life raft launching light shall be installed.

One (1) receptacle shall be installed near the fore life raft and shall be supplied from emergency AC 100 V system.



#### 7.3.5 Funnel flood light

Total two (2) 300 W incandescent flood lights shall be installed ; one (1) for each side of the funnel.

These lights shall be controlled from wheelhouse and supplied from AC 100 V system.

#### 7.3.6 Accommodation ladder light

One (1) 300 W portable reflector type incandescent accommodation ladder light shall be installed.

Two (2) receptacles shall be installed at both side of gangway and supplied from AC 100 V system.

#### 7.3.7 Deck light

The following flood lights for illumination on weather deck shall be installed.

- 1 - 500 W incandescent flood light on forward side of fore mast
- 2 - 500 W incandescent flood light on aft side of fore mast for windlass
- 2 - 700 W mercury flood light on aft side of fore mast
- 2 - 700 W mercury flood light on navigation bridge wings ; one (1) on each bridge wing
- 2 - 400 W mercury flood light on forward side of compass bridge deck
- 2 - 500 W incandescent flood light for aft mooring winch

These above lights shall be controlled from wheelhouse.

These lights shall be supplied from AC 100 V system.

#### 7.3.8 Portable cargo light

Twelve (12) 300 W portable incandescent cargo lights and eight (8) 300 W portable special type ( air tight ) incandescent cargo lights shall be provided with 30 m flexible cord and plug respectively.

Receptacles for them shall be provided as follows :

Each 4 - for No.1 through No.5 cargo hold  
(Total 20)

These receptacles shall be supplied from AC 100 V system.

#### 7.3.9 Ship's name light

Not fitted



## **7.4 LIGHTING - ACCOMMODATION SPACE**

Living quarters, commissary, sanitary and navigation spaces shall be generally illuminated by fluorescent lamp fixtures.

The lighting system shall be supplied from AC 100 V system.

### **7.4.1 Ceiling light**

Ceiling lights, in general, shall consist of single or twin 20 W fluorescent lamp tubes, and shall be of surface mounted type or flush mounted type.

In general, the ceiling lights shall be installed with globe for all rooms.

### **7.4.2 Berth light**

One (1) berth light of 10 W fluorescent lamp wall mounted type with globe shall be installed over the head of each berth except 15 W fluorescent lamp with globe for captain's room and chief engineer's room.

Berth light shall be supplied from emergency AC 100 V system.

### **7.4.3 Desk light**

One (1) desk light of wall mounted type with receptacle and radio antenna outlet box without globe or stand type shall be provided on the writing desk in each room.

Three (3) bracket type chart table lamps with dimmer switch shall be installed over chart table.

### **7.4.4 Mirror light**

One (1) mirror light with globe shall be installed for each mirror with wash basin, and wattage of the fluorescent lamp shall be of 10 W for cabin and/or 15 W for lavatory.

### **7.4.5 Passage light**

Passage lights shall be arranged to be of surface mounted type.

Inside passage shall be illuminated by 20 W fluorescent lamp fixtures with globe and shall be controlled by breakers in distribution boards.

Outside passage shall be illuminated by 60 W incandescent lamp fixtures with globe and guard and shall be controlled by switches on wheelhouse group panel.



### **7.5 LIGHTING - MACHINERY SPACE**

Machinery spaces and their stores shall be generally illuminated by 20 W fluorescent lamp tubes, except for local illumination where incandescent lamps shall be used.

Each fluorescent lamp fixture shall consist of single or twin lamp tubes.

Two (2) 400 W mercury flood lights shall be installed in engine room.

The ceiling lights of engine control room shall be of suitable 20 W fluorescent lamp with globe.

The lighting system shall be supplied from AC 100 V system.

### **7.6 LIGHTING - STORE ETC.**

Stowage spaces shall be illuminated by incandescent lamp fixtures of pendant or bracket type.

One (1) explosion proof pendant lighting fixture of 60 W incandescent lamp with globe and guard shall be installed in battery room and paint & lamp store respectively.

Refrigerated provisions chambers shall be illuminated by waterproof 60 W incandescent lamp fixtures, and controlled by switches with red pilot lamp at the outside of the chambers.

The lighting system shall be supplied from AC 100 V system.



## 7.7 EMERGENCY LIGHTING

Emergency lighting shall be installed throughout the vessel to furnish proper illumination for guiding crew to lifeboat stations and to permit the operation of essential services.

Emergency lights shall be automatically supplied from emergency generator via AC 100 V system of emergency switchboard in case of normal AC 100 V failure.

Emergency lights of fluorescent or incandescent type may be commonly used with the general lighting fixtures.

Emergency lights shall be installed as follows :

- 1 - Wheelhouse
- 1 - Chart space
- 1 - Radio instruments space
- 1 - Hospital
- 1 - Galley
- 1 - Fire station
- 1 - Battery room ( Explosion proof type )
- 1 - Captain's day room
- 1 - Chief engineer's day room
- 1 - Cabin bed space
- 1 - Chief officer's day room
- 1 - 1st engineer's day room
- 1 - Officer's & crew's shower room
- 1 - Officer's & crew's W.C.
- 1 - Ship's office
- 1 - CO<sub>2</sub> bottle room
- 1 - Meeting room
- Each 1 - Public space
- 1 - Electric room
- Suitable number - Accommodation passage & stair way
- 3 - Steering gear room
- 1 - Emergency fire pump room
- 2 - Engine control room
- 1 - Emergency generator room
- 1 - Gymnasium
- 1 - Fireman outfit locker
- Suitable number - Engine room
- About 6 - Passage of near the lifeboat, rescue boat and life raft  
(2 for each space)
- About 3 - Escape trunk



One (1) receptacle shall be installed at the rear of main switchboard.

Furthermore suitable numbers of emergency light supplied from radio battery shall be installed nearby MF/HF remote controller, VHF radio telephone and INMARSAT standard-C (EGC).

### **7.8 PORTABLE LAMP**

Eight (8) waterproof 60 W incandescent portable lamps with globe, guard and hook shall be supplied.

Each lamp shall have 15 m three (3) core flexible cord and plug.

Two (2) non-waterproof 60 W incandescent portable lamps with guard and hook shall be provided.

Each lamp shall have 15 m three (3) core flexible cord and plug.

These portable lamps shall be used in machinery spaces, stores, lockers and other necessary spaces, and supplied from AC 100 V system.

### **7.9 SWITCH**

Switches shall be of double and single pole tumbler type with quick make and break action, and shall be of surface mounted type or flush mounted type.

Switching of lights connected to the ship's service lighting system, in general, shall be local, i.e. one (1) switch for lights in space or room shall be located at inside of each entrance, except outside of each entrance for battery room, paint & lamp store and galley.

Weather deck lights, flood lights, passage lights and machinery space lights, in general, shall be divided into suitable groups and controlled by branch circuit breakers in lighting panel board.

Switches for berth lights, desk lights and 10 W mirror lights shall be built into their own fixtures.

### **7.10 RECEPTACLE**

Receptacles, in general, shall be of three-pole type, one-pole of which shall serve as earth connection of metal frame of portable appliances except two-pole type for electric razor.

Receptacles shall be of surface mounted type or flush mounted type.

One (1) receptacle shall be installed in each mirror lighting fixture for using the AC 100 V electric razor.



## **SECTION 8 INTERIOR COMMUNICATION EQUIPMENT**

### **8.1 ENGINE ORDER TELEGRAPH**

#### **8.1.1 Engine order telegraph**

One (1) complete set of engine order telegraph system shall be installed as follows :

- 1 - Transmitter of built-in type on wheelhouse control stand
- 1 - Receiver of built-in type with a sounding device on the engine control console in engine control room
- 1 - Receiver of single face wall mounted type ( with reply ), near main engine emergency maneuvering station
- 1 - Gong in engine room
- 1 - Telegraph indicator in wheelhouse
- 1 - Telegraph logger for recording order and their times ( Hour, minute, 1/2 minute ) shall be installed on wheelhouse control stand

Dials of the maneuvering lever shall be eleven (11) orders as follows :

Ahead dead slow	Astern dead slow	stop
slow	slow	
half	half	
full	full	
nav. full	emergency full	

The system shall be supplied from emergency AC 100 V single-phase system.

#### **8.1.2 Sub engine telegraph**

One (1) complete set of sub engine telegraph system of lamp type shall be installed on wheelhouse control stand and engine control console in engine control room.

The units shall be three (3) orders consisting “ Finished with engine”, “Stand-by” and “Rung up”.

The system shall be supplied from emergency AC 100 V single-phase system.





## **8.2 MAIN ENGINE REVOLUTION INDICATOR**

One (1) complete set of main engine revolution indicator system of contactless type shall be installed as follows :

- 1 - Transmitter in main engine
- 1 - 200 mm diameter indicator of wall mounted type with an EL illumination in wheelhouse and a dimmer switch attached to the body
- 1 - 150 mm square indicator of built-in type on engine control console in engine control room
- 1 - 110 mm square or digital indicator of built-in type on wheelhouse control stand
- 1 - Main engine revolution counter of built-in type on engine control console in engine control room
- Total 2 - 200 mm diameter indicator of wall mounted type with an EL illumination on both bridge wings outside of wheelhouse and a dimmer switch attached to the body

## **8.3 RUDDER ANGLE INDICATOR**

One (1) complete set of rudder angle indicator system of synchronous motor type shall be installed as follows :

- 1 - Transmitter connected to rudder stock through lever
- 1 - 200 mm diameter indicator of wall mounted type with an EL illumination in wheelhouse and a dimmer switch attached to the body
- Total 2 - 200 mm diameter indicator of wall mounted type with an EL illumination on both bridge wings outside of wheelhouse and a dimmer switch attached to the body
- 1 - 110 mm square indicator of built-in type on engine control console in engine control room

The indicator shall have maximum indicator of 40° right and left respectively, and shall be graduated in 1° .

The system shall be supplied from emergency AC 100 V single-phase system.



#### 8.4 COMMON BATTERY TELEPHONE

One (1) system of common battery telephone system shall be installed as follows :

##### Built-in type

- 2 - Wheelhouse control stand,  
engine control console in engine control room

The system shall be supplied from DC 24 V system.

#### 8.5 AUTOMATIC EXCHANGE TELEPHONE

One (1) complete set of automatic exchange telephone system ( with paging ) shall be installed as follows :

- 1 - Automatic telephone exchanger in cable trunk

The electric exchanger shall have capacity of 40 lines and 12 simultaneous talking path.

The exchanger shall be supplied from emergency AC 100 V single-phase system and DC 24 V system.

Paging systems shall be connected public addresser.

Telephones as follows :

##### Built-in type and noise cancel type

- 2 - Wheelhouse control stand,  
engine control console in engine control room

##### Desk type and noise cancel type

- |   |   |
|---|---|
| 8 - Radio instruments space,<br>senior officer class day room(2),<br>crew's smoking room, | captain class day room(2),<br>saloon,<br>tally office |
|---|---|

##### Desk type

- |   |  |
|---|--|
| 15 - Hospital,<br>senior office's class bed room(2),<br>all petty officer's cabin(3),<br>pilot's room | captain class bed room(2),<br>all junior's cabin(4),<br>officer's spare room(2), |
|---|--|



Wall mounted type and noise cancel type

5 - Gymnasium, ship's office,  
mess room(2), meeting room

Wall mounted type

1 - Fire station

Wall mounted drip proof and noise cancel type

2 - Steering gear room(※), galley

Wall mounted drip proof type with sub receiver and noise cancel type

1 - Main engine emergency maneuvering station(※)

(※) mark indicate telephone with 120 mm bell.

The following pairs of telephones shall be connected in parallel.

Captain's day room - Captain's bed room  
Chief engineer's day room - Chief engineer's bed room  
Chief officer's day room - Chief officer's bed room  
1st engineer's day room - 1st engineer's bed room

## **8.6 PORTABLE TELEPHONE**

Not fitted

## **8.7 SHORE TELEPHONE**

Not fitted



## **8.8 WHEELHOUSE GROUP PANEL**

One (1) wheelhouse group panel of dead front and steel frame construction type shall be installed in wheelhouse.

The following equipment specified in the other sections shall be included in the wheelhouse group panel.

Such equipment in wheelhouse not included in the wheelhouse group panel shall be of wall and surface mounted type.

- Feeder switches for electrical equipment on the bridge wings etc.
- Control switches for flood lights on the fore mast, bridge wings etc.
- Control switches with pilot lamps for navigation light
- Control switch for general emergency alarm system
- Emergency stop switch for accommodation fans
- Air horn control panel
- Dimmer switch for magnetic compass
- Fire alarm panel
- Steering gear alarm panel
- Start/stop push button switch with running indicator lamp for Fire & general service pump
- Master clock

## **8.9 WHEELHOUSE CONTROL STAND**

One (1) wheelhouse control stand of dead front and steel frame construction type shall be installed in wheelhouse.

The control stand shall be included the following equipment.

- Transmitter of engine order telegraph
- Transmitter of sub engine telegraph
- Telegraph logger
- Main engine revolution indicator
- Common battery telephone
- Automatic exchange telephone
- Dimmer switch
- Indicator & alarm lamps



## 8.10 SIGNAL BELL

Four (4) systems of signal bell and buzzer shall be installed as follows :

### 1 system - From refrigerated provisions chamber to galley

One (1) 120 mm bell with a red pilot lamp shall be provided in galley, and each one (1) waterproof switch in meat room, fish room, vegetable room and lobby respectively.

The system shall be supplied from emergency AC 100 V single-phase system.

### 1 system - From engine control room to engine room

Five (5) electric horns with a flash light in engine room and one (1) switch in engine control console in engine control room.

These electric horns shall be commonly used in following cases.

- i ) in case of occurrence of calling bell of common battery telephone or auto exchange telephone in unmanned engine control room.
- ii ) in case of occurrence of alarm in engine room.
- iii ) in case of calling engineers in engine room.

The system shall be supplied from AC 100 V single-phase system.

### 1 system - From engine control room to engineer's passage or room and public rooms

Each one (1) buzzer with red pilot lamp shall be provided in engineer's passage or room and public rooms and one (1) switch on engine control console in engine control room.

The system shall be supplied from DC 24 V system.

### 1 system - From hospital to wheelhouse

One (1) 120 mm bell with lamp or buzzer with lamp shall be installed in wheelhouse and one (1) push button switch shall be provided at bed side in hospital.

The system shall be supplied from emergency AC 100 V single-phase system.



### 8.11 STEERING ALARM

In addition to the steering alarms on the engine control console in engine control room described in **III- MACHINERY PART**, the following alarm and running indicator for the steering gear motors and hydraulic oil tank shall be provided on the wheelhouse group panel.

- 2 - Over load alarm lamp, one for each motor
- 2 - No voltage alarm lamp, one for each motor
- 2 - Hydraulic oil tank level alarm lamp
- 2 - Phase fail alarm lamp, one for each motor
- 2 - Running indicator, one for each motor
- 2 - Hydraulic lock alarm lamp
- 1 - Buzzer for alarm

The system shall be supplied from DC 24 V system.

### 8.12 GENERAL EMERGENCY ALARM

One (1) complete set of general emergency alarm system shall be installed as follows :

- 1 - Control switch “Auto” and “Manual” on wheelhouse group panel
- 1 - Control switch for auto mode in ship’s office
- About 31 in total - 120 mm bell in steering gear room, engine control room, engine workshop, main passage in living quarter (about 12), stair way (5), galley, pantry (2), gymnasium, laundry, shower room (2), W.C. (2), **changing room**, **engine store**
- About 37 - Buzzer in cabin (29), tally office, hospital, ship’s office, mess room (2), saloon, crew’s smoking room, meeting room
- About 3 - Air horn in engine room
- About 3 - Rotating light (red) in engine room

The above sounding equipment and flash light may be altered according to detail design based on SOLAS and class rules.

The switch shall be clearly identified by lettering “ GENERAL EMERGENCY ALARM” on a suitable background.

The bell and air horn shall be sounded as the general emergency alarm which consists of seven short blasts followed by one long blast by auto mode switch on wheelhouse group panel.

The bell and air horn shall be used commonly for described in SUBSECTION **8.15 FIRE ALARM**.

The system shall be supplied from emergency AC 100 V single-phase system.



### 8.13 PUBLIC ADDRESS AND DOCK ANNOUNCING

One (1) complete set of public address system and dock announcing system of press-to-talk shall be installed as follows :

- 1 - Amplifier with control panel, a monitor speaker and a hand microphone in wheelhouse

Total capacity of the above amplifier and booster shall be decided in compliance with speakers of emergency announcements.

#### Portable microphone

- 3 - For common use on bridge wings front wall, upper deck forward, aft mooring station

#### Speaker

- 1 - 50 W waterproof fixed type on compass bridge deck
- 3 - 5 W waterproof type, each one (1) on both bridge wings (2) and at the muster station (1).
- 2 - 10 W waterproof portable type on upper deck forward and aft mooring station
- 1 - 5 W drip-proof type in galley
- About 36 - 2 W without volume control in

radio instruments space	captain class day room (2),
senior officer class day room(2),	officer's mess room,
crew's mess room,	saloon,
crew's smoking room,	ship's office,
gymnasium,	passages (about 15),
stair way (about 7),	engine control room,
tally office,	meeting room

The above speaker arrangement may be altered according to detail design based on SOLAS and class rules.

#### Waterproof type receptacle for microphone

- 2 - For both bridge wings front wall

#### Waterproof type receptacle for microphone and speaker

- 3 - For upper deck forward, aft mooring station, steering gear room

The system shall be supplied from emergency AC 100 V single-phase system and DC 24 V system.



#### **8.14 AIR HORN**

One (1) complete set of horn system shall be installed as follows :

- 1 - Air horn on the radar mast
- 1 - Air horn on the fore mast
- 1 - Time controller in wheelhouse group panel
- 3 - Free sound push button switch, on wheelhouse front wall and both bridge wings

Maneuvering light described in SUBSECTION **7.2 NAVIGATION AND SIGNAL LIGHT** shall be interlocked with horn operation, and shall be used as lamp emitter.

The system shall be supplied from emergency AC 100 V single-phase system.

#### **8.15 FIRE ALARM**

One (1) complete set of fire alarm system shall be installed as follows :

- 1 - Fire alarm panel with main buzzer in wheelhouse group panel
- 1 - 120 mm bell in captain's day room
- Suitable number - Push button in wheelhouse, engine control room, engine room entrance, passage
- Suitable number - Fire detector in inner passage in accommodation space and engine room  
( Smoke type and temperature type )

The fire detector ( smoke type and flame type ) shall be commonly used with the detector for local fire fighting system.

The bell and air horn shall sound continuously and be used commonly for described in SUBSECTION **8.12 GENERAL EMERGENCY ALARM**.

The system shall be supplied from AC 100 V single-phase system and DC 24 V system.





## 8.16 CO<sub>2</sub> FLOODING ALARM

One (1) system of CO<sub>2</sub> flooding alarm shall be installed as follows :


- 5 - Baby motor siren in engine room
- 3 - 120 mm bell in engine control room, engine workshop and engine store

Above alarm equipment may be altered in accordance with manufacturer's standard.

The system shall be supplied from emergency AC 100 V single-phase system.

## 8.17 LAN SYSTEM

Wiring for LAN cable ( 100/10 BASE-T category 5 ) shall be carried out in the following space.

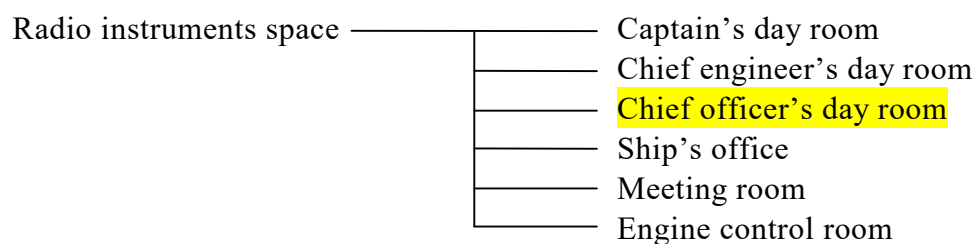

It is possible to communicate between ship and shore ( E-mail ) from the personal computer ( PC ) connected with INMARSAT - FB in radio instruments space.

The personal computer and HUB shall be provided by the Owner.



## **SECTION 9 NAVIGATION EQUIPMENT**

### **9.1 GYRO COMPASS**

One (1) complete set of gyro compass shall be installed as follows :

- 1 - Master compass in steering stand  
( The device shall be supplied from emergency AC 100 V single-phase system and DC 24 V system. )
- 1 - Steering repeater built into steering stand
- 2 - Bearing repeater with pedestal, each one (1) on both bridge wings
- 1 - Azimuth circle for the above bearing repeaters
- 1 - Bearing repeater with bracket in wheelhouse front
- 1 - Bearing repeater with bracket in steering gear room
- Each 1 - Repeater signal to built into RADARS, AIS and VDR

One (1) heading monitor shall be provided on the auto pilot stand by detecting deviation of the heading information between the master gyro compass and the magnetic compass.

### **9.2 MAGNETIC COMPASS**

One (1) magnetic compass of 165 mm reflector type with spare bowl shall be provided.

A dimmer switch of separate type for the magnetic compass shall be installed in wheelhouse.

One (1) magnetic heading converter shall be provided.

The illumination lamp shall be supplied from emergency AC 100 V single-phase system.

### **9.3 STEERING CONTROL**

One (1) complete set of double electric circuit type steering control equipment ( Non-adaptive type / heading control ) shall be installed as follows :

- 1 - Steering stand in wheelhouse  
( The stand shall be of gyro automatic steering and electric hand steering with necessary switches, compass connections, contactors, etc., and connected with double wiring to steering control equipment. )
- 2 - Control & power box in steering gear room  
( The box shall be supplied from AC 440 V single-phase system or three-phase system. )



#### **9.4 ELECTROMAGNETIC LOG**

One (1) complete set of electromagnetic log shall be installed as follows :

- 1 - Log mechanism at bottom of engine room
- 1 - Master apparatus in wheelhouse
- 1 - Speed and distance indicator on the table of chart space in wheelhouse
- 1 - Speed indicator of wall mounted type with an EL illumination in wheelhouse and a dimmer switch attached to the body

The speed indicator shall have maximum indication of 25 knots, and the scales shall be graduated in 0.5 knots.

The distance receiver shall be of maximum indication 9999.99 nautical miles.

The equipment shall be supplied from emergency AC 100 V single-phase system.

#### **9.5 ECHO SOUNDER**

One (1) complete set of echo sounder shall be installed as follows :

- 1 - Transducer of 200 kHz operating type at bottom of engine room
- 1 - Main display unit on the front wall in wheelhouse  
( The displayed record shall be shown at least fifteen (15) minutes of soundings on LCD display. )

The equipment shall be supplied from emergency AC 100 V single-phase system and DC 24 V system.



## 9.6 RADAR AND TT

Two (2) complete sets of radar shall be installed as follows :

### No.1 RADAR with TT

- 1 - Aerial unit with transceiver on the radar mast ( 12 feet )
  - Frequency band : S band
  - Maximum range : About 96 nautical miles
  - Peak power : About 30 kW
- 1 - Display unit of raster-scan type in wheelhouse
  - ( Effective diameter : 320 mm corresponding 16 inches )
  - ( Display size : 23.1 inches colour LCD )
- 1 - Performance monitor

The equipment shall be supplied from emergency AC 100 V single-phase system.

### No.2 RADAR with TT

- 1 - Aerial unit with transceiver on the radar mast ( 6 feet )
  - Frequency band : X band
  - Maximum range : About 96 nautical miles
  - Peak power : About 25 kW
- 1 - Display unit of raster-scan type in wheelhouse
  - ( Effective diameter : 320 mm corresponding 16 inches )
  - ( Display size : 23.1 inches colour LCD )
- 1 - Performance monitor

The equipment shall be supplied from emergency AC 100 V single-phase system.



## 9.7 CLEAR VIEW SCREEN

Not fitted

## 9.8 ELECTRIC CONTROL CLOCK SYSTEM

One (1) complete set of marine use quartz crystal control electric clock system shall be installed as follows :

- 1 - Master clock and slave clock control equipment in wheelhouse
- 42 - Slave clock

Slave clocks shall be installed as follows :

Two (2) hands wall mounted type with an EL illumination and a dimmer switch attached to the body

- 1 - Wheelhouse

Three (3) hands wall mounted or built-in type

- 1 - Engine control room

Two (2) hands wall mounted decorative type

- 4 - Officer's mess room, saloon,  
captain class day room(2)

Two (2) hands wall mounted type

- |   |   |
|---|---|
| 34 - Captain's class bed room(2),<br>ship's office,<br>crew's smoking room,<br>senior officer class day room(2),<br>officer's spare room(2),<br>all crew's cabin(10),<br>pilot's room,<br>hospital, | wheelhouse,<br>crew's mess room,<br>all junior's cabin(4),<br>senior officer class bed room(2),<br>all petty officer's cabin(3),<br>crew's spare room,<br>tally office,<br>meeting room |
|---|---|

Two (2) hands drip-proof wall mounted type

- 1 - Galley



Two (2) hands double face type

- 1 - Inner passage on upper deck

The hands of the two (2) - hands clock shall move at every 30 seconds.

The system shall be supplied from emergency AC 100 V single-phase system and DC 24 V system.

### **9.9 ANEMOMETER AND ANEMOSCOPE**

One (1) complete set of anemometer and anemoscope shall be installed as follows :

- 1 - Propeller type transmitter on radar mast
- 1 - Anemometer and anemoscope, wall mounted type with an EL illumination in wheelhouse and a dimmer switch attached to the body

The equipment shall be supplied from emergency AC 100 V single-phase system.

### **9.10 ELECTRIC WIPER**

Three (3) complete sets of following type wiper shall be installed on the front of windows in wheelhouse.

- 3 - Swing type

The equipment shall be supplied from emergency AC 100 V single-phase system.



### **9.11 DGPS NAVIGATOR**

Two (2) sets of DGPS ( Differential Global Positioning System ) navigator shall be installed as follows :

- 2 - Receiver in chart space in wheelhouse
- 2 - Set of antenna equipment on compass deck
- 1 - Select switch

Output signal of two (2) GPS navigators through a select switch shall be connected to DSC equipment ( No.1 VHF, No.2 VHF, MF/HF radio installation and INMARSAT standard-C ), AIS, VDR, RADARS, gyro compass, electromagnetic log, NAVTEX receiver, electric clock, echo sounder and ECDIS.

The equipment shall be supplied from emergency AC 100 V single-phase system and radio DC 24 V system.

### **9.12 CHART PLOTTER**

Not fitted

### **9.13 LOADING CALCULATOR**

One (1) set of loading calculator shall be installed in ship's office.  
The loading calculator shall be of manufacturer's standard.

The equipment shall be supplied from AC 100 V single-phase system.



#### **9.14 VDR**

One (1) set of VDR ( Voyage Data Recorder ) shall be installed.

The recording signal for VDR shall be of time, position, speed, bearing, alarm and communication voice and etc, required by SOLAS, and necessary signal shall be connected from each equipment.

The system shall be supplied from emergency AC 100 V single-phase system.

#### **9.15 ECDIS**

Two (2) complete sets of ECDIS ( Electronic Chart Display and Information System ) without auto-tracking function shall be installed as follows :

2 - ECDIS of stand type in wheelhouse

The chart software shall be supplied by the Owner.

The system shall be supplied from emergency AC 100 V single-phase system.

#### **9.16 BNWAS**

One (1) set of BNWAS ( Bridge Navigational Watch Alarm System ) shall be installed.

The equipment shall be supplied from emergency AC 100 V single-phase system and DC 24 V system.





## **SECTION 10 RADIO EQUIPMENT**

### **10.1 GENERAL**

The following radio equipment shall be provided to meet the requirements for the operating of Global Maritime Distress and Safety System ( GMDSS ).

For maintenance requirements on the vessel engaged on voyages in sea areas A1, A2 and A3, the vessel shall be adopted as the condition both of duplication of equipment and shore-based maintenance.

### **10.2 MF/HF RADIO INSTALLATION**

One (1) complete set of MF/HF radio installation shall be installed as follows :

- 1 - MF/HF radio installation of simplex operation in wheelhouse

The console shall be incorporated as the following units.

- 1 - 150 W MF/HF transmitter
- 1 - MF/HF receiver
- 1 - MF/HF DSC function
- 1 - MF/HF DSC watch receiver
- 1 - NBDP function
- 1 - Battery charger

The equipment shall be supplied from emergency AC 100 V single-phase system and DC 24 V system from radio battery.

Furthermore the following equipment shall be provided.

- 1 - MF/HF remote controller in wheelhouse
- 1 - RO printer in wheelhouse
- 1 - Complete set of accessories  
( 1 - tester, 1 set - tools, 1 - flash light )
- 1 - Radio battery in battery room  
( DC 24 V 200 Ah at 10 hour discharge, lead acid type SS-200 )
- 1 - Transmitter antenna ( self-supporting type )
- 1 - Receiving antenna ( whip type ) on compass deck



### **10.3 VHF RADIO TELEPHONE**

Two (2) complete sets of VHF radio telephone shall be installed as follows :

#### **No.1 VHF RADIO TELEPHONE**

- 1 - Transmitter receiver of simplex operation with control unit, DSC watch receiver and DSC function in wheelhouse  
No. of channels ----- 54
- 1 - Printer in wheelhouse
- 2 - Antenna on radar mast and compass deck
- 2 - Receptacle for handset on both bridge wings
- 1 - Emergency spot light

The equipment shall be supplied from emergency AC 100 V single-phase system and DC 24 V system from radio battery.

#### **No.2 VHF RADIO TELEPHONE**

- 1 - Transmitter receiver of simplex operation with control unit and DSC function in wheelhouse
- 1 - Antenna on radar mast
- 1 - Emergency spot light

The equipment shall be supplied from emergency AC 100 V single-phase system and DC 24 V system from radio battery.



#### **10.4 WEATHER FACSIMILE**

One (1) complete set of weather facsimile recorder ( 10 inches ) shall be installed in radio instruments space or wheelhouse.

One (1) whip antenna shall be installed on compass deck.

The equipment shall be supplied from the power source of the radio console or emergency AC 100 V single-phase system.

#### **10.5 ANTENNA MULTI-COUPLER**

One (1) complete set of antenna multi-coupler for broadcast radio receivers shall be installed as follows :

- 1 - Amplifier in radio instruments space  
The amplifier shall be supplied from emergency AC 100 V single-phase system.
- Each 1 - Outlet box in all cabins and public rooms
- 1 - Antenna ( whip type )

#### **10.6 TELEVISION**

Television receiver shall be installed as follows :

- 1 - Saloon ( 42 inches LCD )
- 1 - Crew's smoking room ( 26 inches LCD )
- Each 1 - TV outlet in captain's day room and chief engineer's day room

Television antenna shall be of omnidirectional type.

The equipment shall be supplied from AC 100 V single-phase system.

#### **10.7 DVD PLAYER**

Two (2) sets of DVD player ( multi region type ) shall be installed as follows :

- 1 - Saloon
- 1 - Crew's smoking room

The equipment shall be supplied from AC 100 V single-phase system.



### **10.8 STEREO**

Two (2) sets of stereo with CD player shall be installed as follows :

- 1 - Saloon
- 1 - Crew's smoking room

The system shall be supplied from AC 100 V single-phase system.

### **10.9 CABIN RADIO**

Not fitted

### **10.10 INMARSAT**

Two (2) complete sets of INMARSAT shall be installed as follows :

#### **INMARSAT - FB**

- 1 - Main unit in radio instruments space
- 1 - Antenna unit on compass deck
- 2 - Telephone set in radio instruments space and ship's office
- 2 - Receiving buzzer in wheelhouse and ship's office
- 1 - Facsimile in radio instruments space

Each ID for 1st telephone, facsimile and data communication shall be got for INMARSAT - FB by the Owner.

The personal computer and printer shall be provided by the Owner.

The system shall be supplied from emergency AC 100 V single-phase system.



### INMARSAT STANDARD-C

- 1 - Data terminal in wheelhouse
- 1 - Printer in wheelhouse
- 1 - Telex receiving buzzer in wheelhouse
- 1 - Remote distress button in wheelhouse
- 1 - Antenna unit on radar mast

The INMARSAT standard-C shall be included EGC ( Enhanced Group Call ) reception function.

~~Furthermore, the Ship Security Alert System shall be incorporated into INMARSAT standard C and two (2) push button switches shall be provided.~~

The system shall be supplied from emergency AC 100 V single-phase system and DC 24 V from radio battery.

### **10.11 MARINE TELEPHONE**

Not fitted

### **10.12 400 MHz TRANSCEIVER**

One (1) complete set of 400 MHz transceiver for general use and fire-fighter's communication shall be installed as follows :

- 3 - Walkie-talkie ( Intrinsically explosion-proof type )
- 3 - Spare battery pack
- 3 - Battery charger
- 1 - Ledge for battery charger in wheelhouse

The battery charger shall be supplied from AC 100 V single-phase system.



### **10.13 TWO WAY RADIO TELEPHONE APPARATUS**

One (1) set of two way radio telephone apparatus shall be installed as follows :

- 3 - Walkie-talkie
- 3 - Battery charger
- 1 - Ledge for battery charger in wheelhouse
- 3 - Lithium primary battery pack

The battery charger shall be supplied from AC 100 V single-phase system.

### **10.14 SATELLITE EPIRB**

One (1) set of satellite EPIRB shall be installed on bridge wing outside of wheelhouse.

### **10.15 NAVTEX RECEIVER**

One (1) set of NAVTEX receiver shall be installed as follows :

- 1 - Receiver in wheelhouse
- 1 - Antenna equipment on compass deck

The system shall be supplied from DC 24 V system.

### **10.16 RADAR TRANSPONDER**

Two (2) sets of radar transponder shall be installed in wheelhouse and free fall life boat.

### **10.17 AIS**

One (1) set of AIS ( Automatic Identification System ) shall be installed as follows :

- 1 - AIS controller with display on the front wall in wheelhouse
- 1 - Antenna equipment on compass deck
- 1 - Pilot plug on the front wall in wheelhouse
- 1 - AC 100 V receptacle for P.C.

The signal for AIS shall be supplied from DGPS navigator and gyro compass.

The system shall be supplied from DC 24 V system.

**10.18 SSAS**

One (1) set of SSAS ( Ship Security Alert System ) shall be supplied by the Owner.

The equipment shall be supplied from DC 24 V system.



## **SECTION 11 ELECTRICAL SPARE PART AND TOOL**

### **11.1 GENERAL**

The following spare parts and tools for electrical equipment shall be furnished for the Vessel.

The number of spare parts shall be calculated on the basis of the sum of identical fitting parts of equipment for the Vessel supplied by each manufacturer.

The spare parts and tools shall be stowed in suitable steel boxes or wooden boxes and shall be protected against deterioration due to long term stowage on board the Vessel.

### **11.2 MAIN GENERATOR**

Bearing	1 for each 4 or less
Rectifier for exciter	1 phase unit
Resistor	1 for each kind

### **11.3 SWITCHBOARD, CONTROL PANEL AND PANEL BOARD**

Operation Coil or shunt coil	1 for each 1, up to a maximum of 10
Contact	1 for each 1, up to a maximum of number corresponding to 10 sets of each type breaker or contactor
Spring	1 for each 1, up to a maximum of 10
Moulded case type circuit breaker	1 for each 10 or less, up to a maximum of 5
Auxiliary relay	1 for each kind
Resistor	1 for each kind
Pilot lamp bulb	1 for each 1, up to a maximum of 30
Pilot lamp lens	1 for each 10 or less, up to a maximum of 5
Indicator lamp	1 for each kind
Switch	1 for each kind
Non-renewable fuse	1 for each 1, up to a maximum of 20
Fuse puller	1





#### 11.4 **MOTOR**

The following spare parts shall be furnished for motors which are installed as important use.

Bearing	1 for each 4 or less, with a minimum of 1 set
---------	---

However, spare parts of motors with which the machinery and equipment are mounted shall be in compliance with the manufacturer's standard.

#### 11.5 **CONTROL EQUIPMENT**

Operation coil or shunt coil	1 for each 10 or less, up to a maximum of 2
Resistor	1 for each 10 or less, up to a maximum of 5
Pilot lamp bulb	1 for each 1, up to a maximum of 30
Pilot lamp lens	1 for each 10 or less, up to a maximum of 5
Non-renewable fuse	1 for each 1, up to a maximum of 20



## 11.6 LIGHTING

Lamp bulb for navigating lights	2 for each 1
Incandescent lamp bulb for general lights	1 for each 4 or less
Fluorescent lamp tube	1 for each 10 or less, up to a maximum of 20
Mercury lamp bulb	1 for each 10 or less, up to a maximum of 20
Pilot lamp bulb	1 for each 1
Glow lamp	1 for each 10 or less, up to a maximum of 20
Pilot lamp globe or lens	1 for each 10 or less
Glass globe	1 for each 10 or less, up to a maximum of 10
Plastic globe	1 for each 20 or less, up to a maximum of 10
Lamp socket	1 for each 20 or less, up to a maximum of 20
Non-waterproof type switch	1 for each 20 or less, up to a maximum of 10
Non-waterproof type plug and receptacle	1 for each 20 or less, and receptacle up to a maximum of 10
Fuse case	1 for each 10 or less, up to a maximum of 10
Fuse element	1 for each 1

## 11.7 INTERIOR COMMUNICATION EQUIPMENT

Spare parts for interior communication equipment shall be furnished in accordance with the manufacturer's standard.

## 11.8 ELECTRICAL NAVIGATION EQUIPMENT

Spare parts for electrical navigation equipment shall be furnished in accordance with the manufacturer's standard.



## 11.9 RADIO EQUIPMENT

Spare parts for radio equipment such as MF/HF radio installation, VHF radio telephone etc. shall be furnished in accordance with the manufacturer's standard.

### 11.10 ACCESSORY FOR STORAGE BATTERY

Portable DC voltmeter 0 ~ +18 V	1
Hydrometer with spout 1.100 ~ 1.300	2
Rod thermometer -20°C ~ 0 ~ +100°C	2
Syringe with plastic tube of 6 m	1
Plastic jug ( 2 liters )	1
Plastic funnel ( 148 φ )	1
Distilled water in can of 18 liters	1
Spout	1

### 11.11 METER

500 V megger for reading from 0 to 100 M ohm	1
Clamp ammeter for reading from 0 to 300 A	1
Circuit tester	1



### 11.12 TOOL AND MATERIAL

Screw driver of assorted size	1 set ( 6 drivers in total )
Open ended spanner of assorted size	1 set ( 6 spanners in total )
Cutting nipper	1
Cutting plier	1
Round nose plier	1
Adjustable angle wrench	1
Steel file	1
Jack knife	1
Electric soldering iron	2 ( 1 - 60 W, 1 - 150 W )
Check lamp	1
Electric cable ( TPYC-2.5 )	1 length ( 30 meters )
Electric cabtyre cord ( H-TPNP-1 )	1 length ( 30 meters )
Vinyl tape	6
Solder	1 roll

### 11.13 ACCESSORY FOR ARC WELDER

Hand shield	2
Cover glass	2
Filter lens	2
Leather glove	2 pairs
Electrode holder	2