



# OTA Firmware Update Guide


1. Turn off the power of whole system through main power breaker

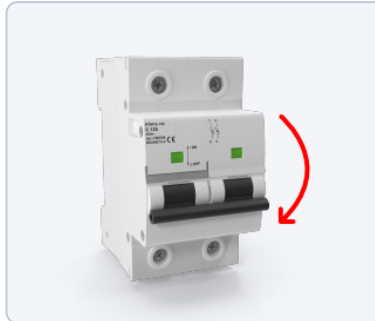


2. Turn ON the small single pole breaker

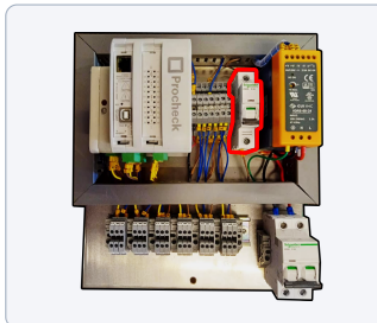


3. Now turn ON the main power breaker ( The RED LED on Wi-Fi Shield keep on blinking )

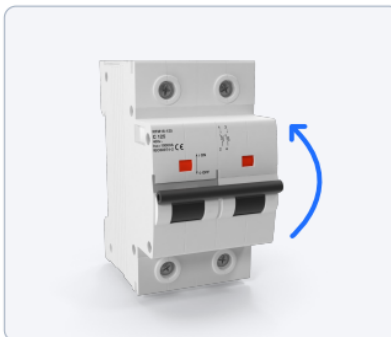

4. After 3 minute of blinking, it will connect to Wi-Fi and update firmware via cloud api for OTA Firmware Update.
5. During OTA update, the LED stay turned off. After the successful update, it again start blinking with the same pattern.
6. So now just Turn off the main breaker

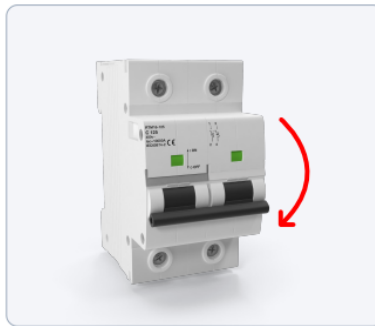

7. Turn off the small single pole beaker

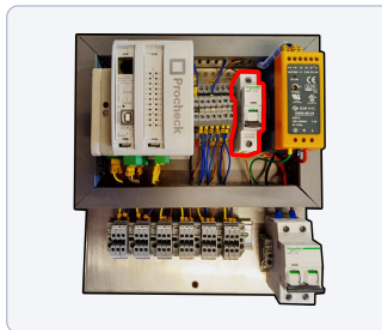

8. Finally turn on the main power breaker

