



1. Board Pins: PPM_PWM009

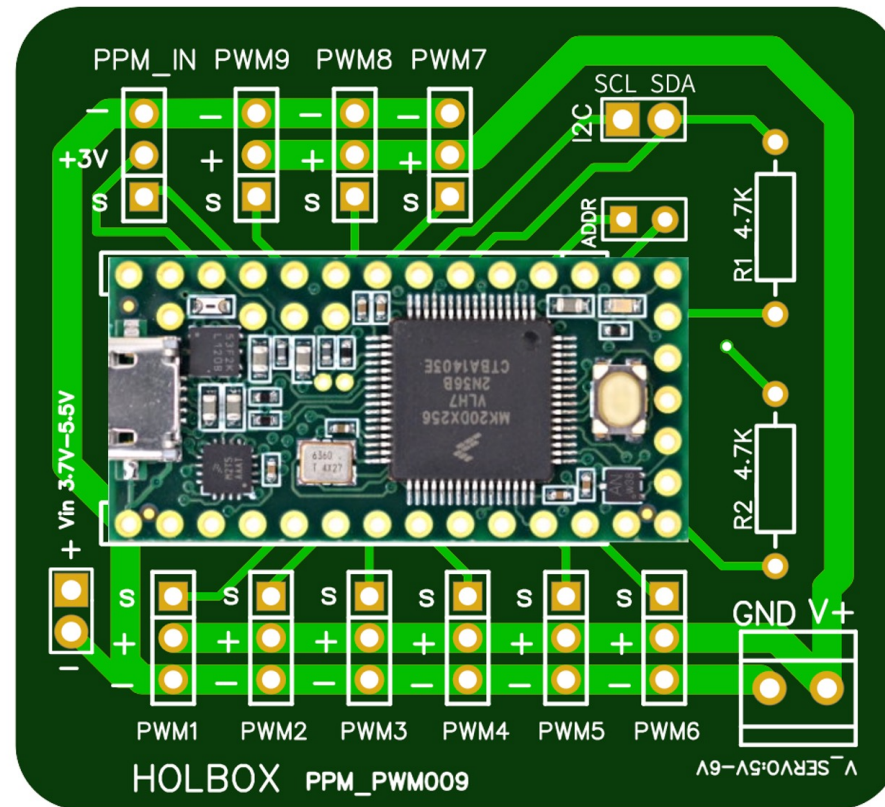


2. Connection for RC read (PPM decoding)

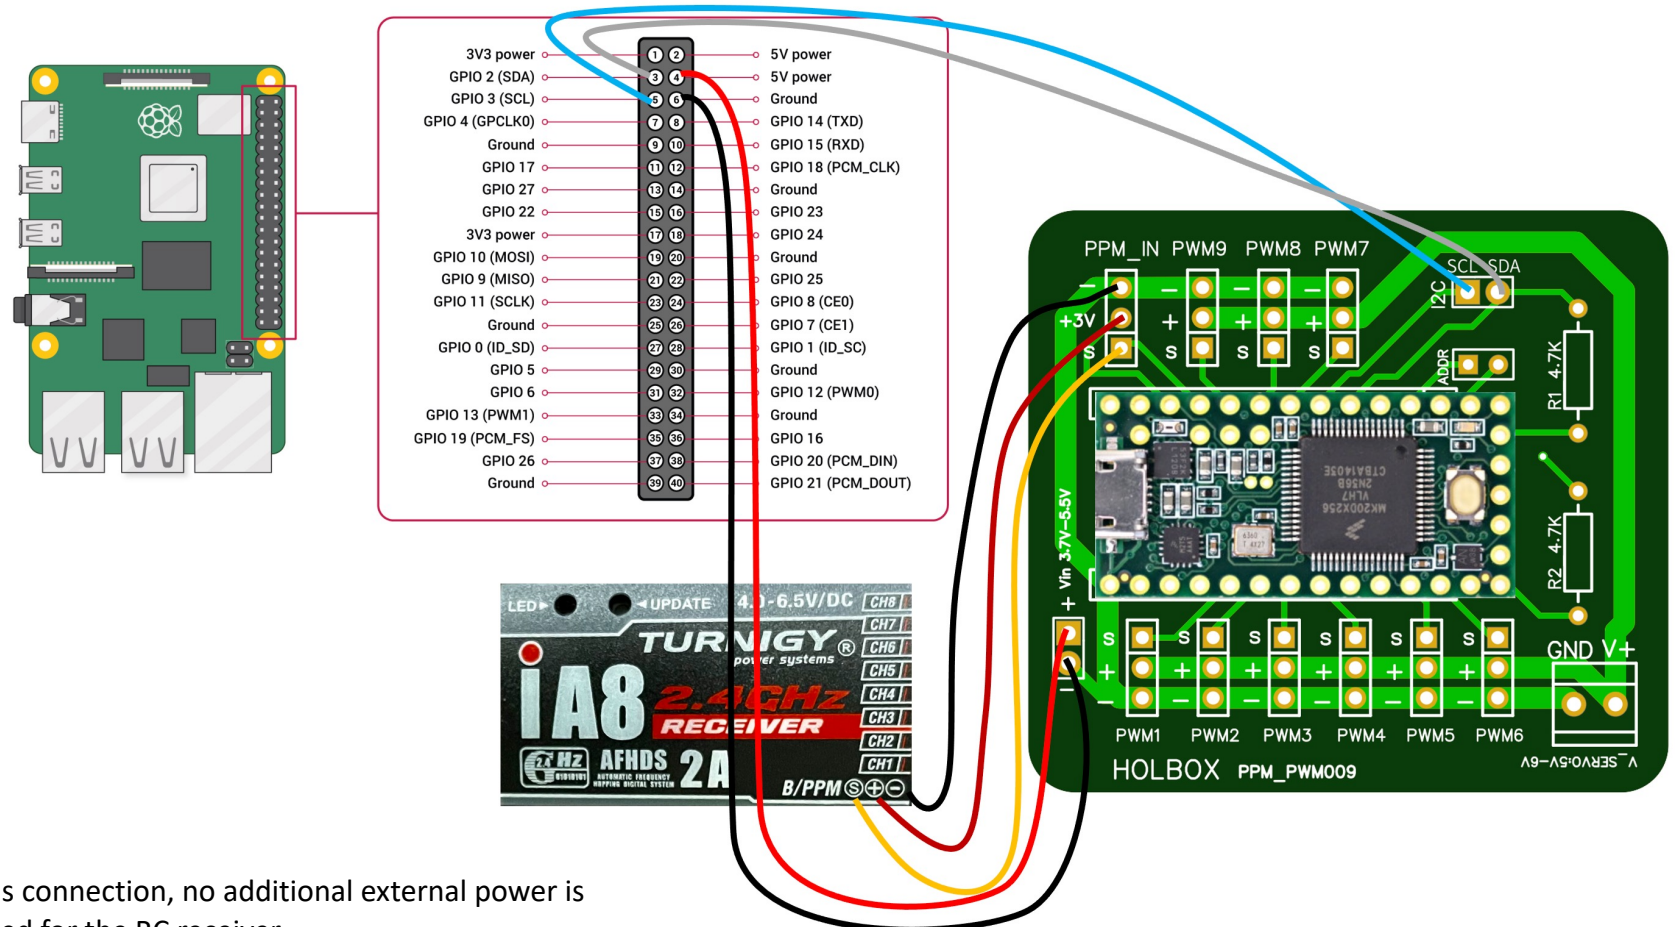


In this connection, no additional external power is needed for the RC receiver.

3. Connection for Servo/Brushless control

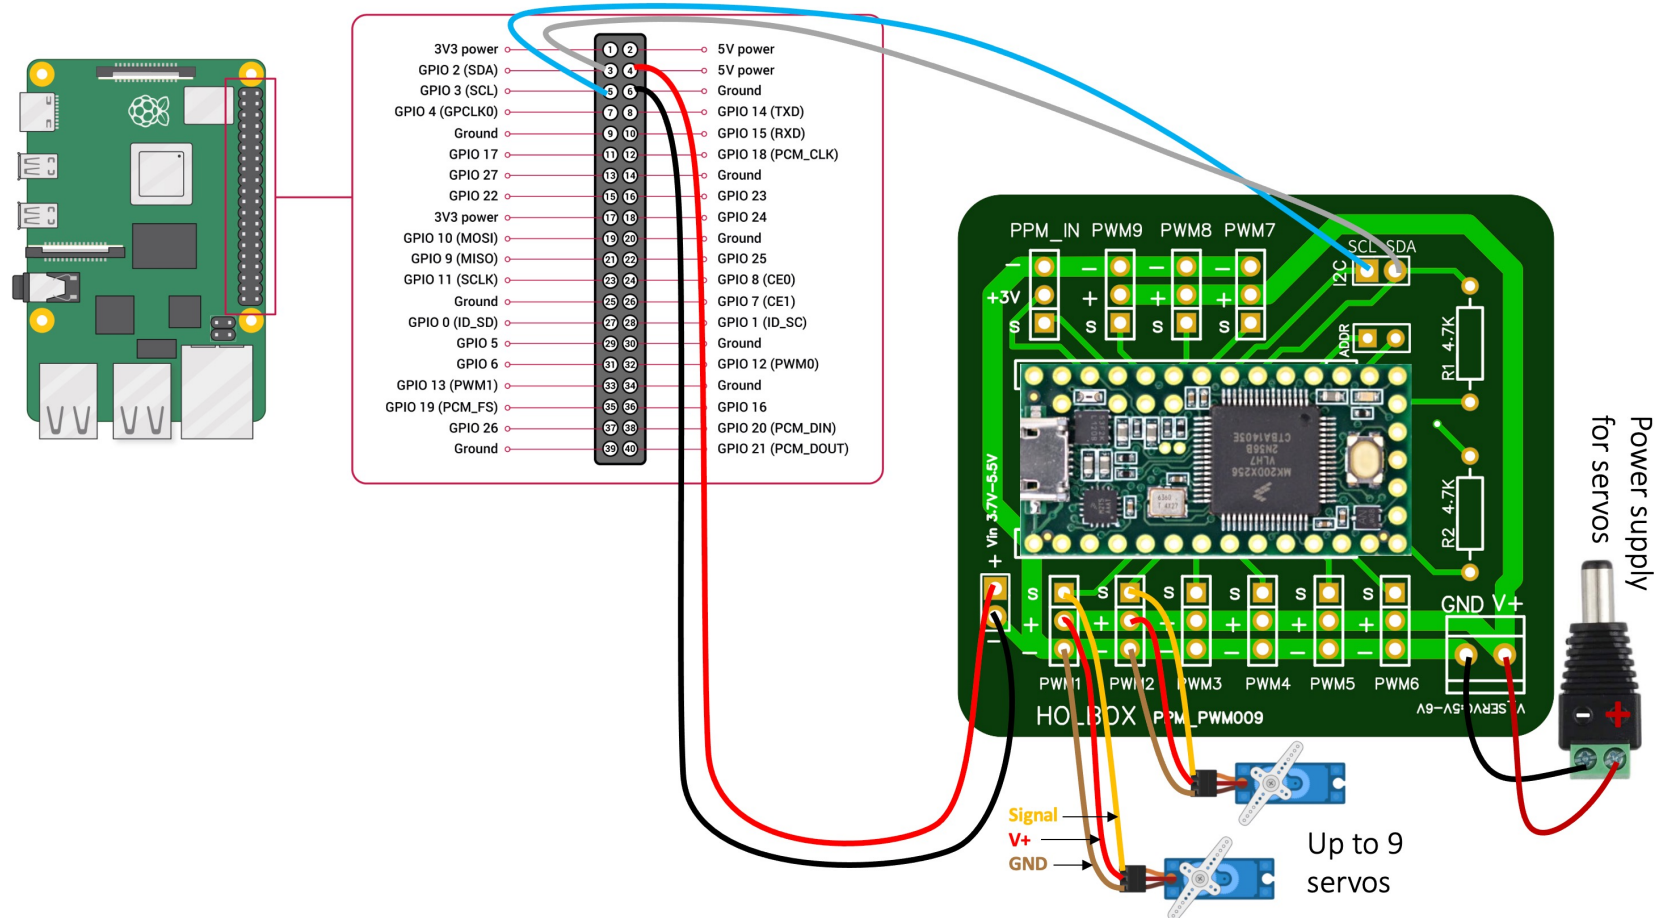

4. Connection for RC read (PPM decoding) and Servo/Brushless control

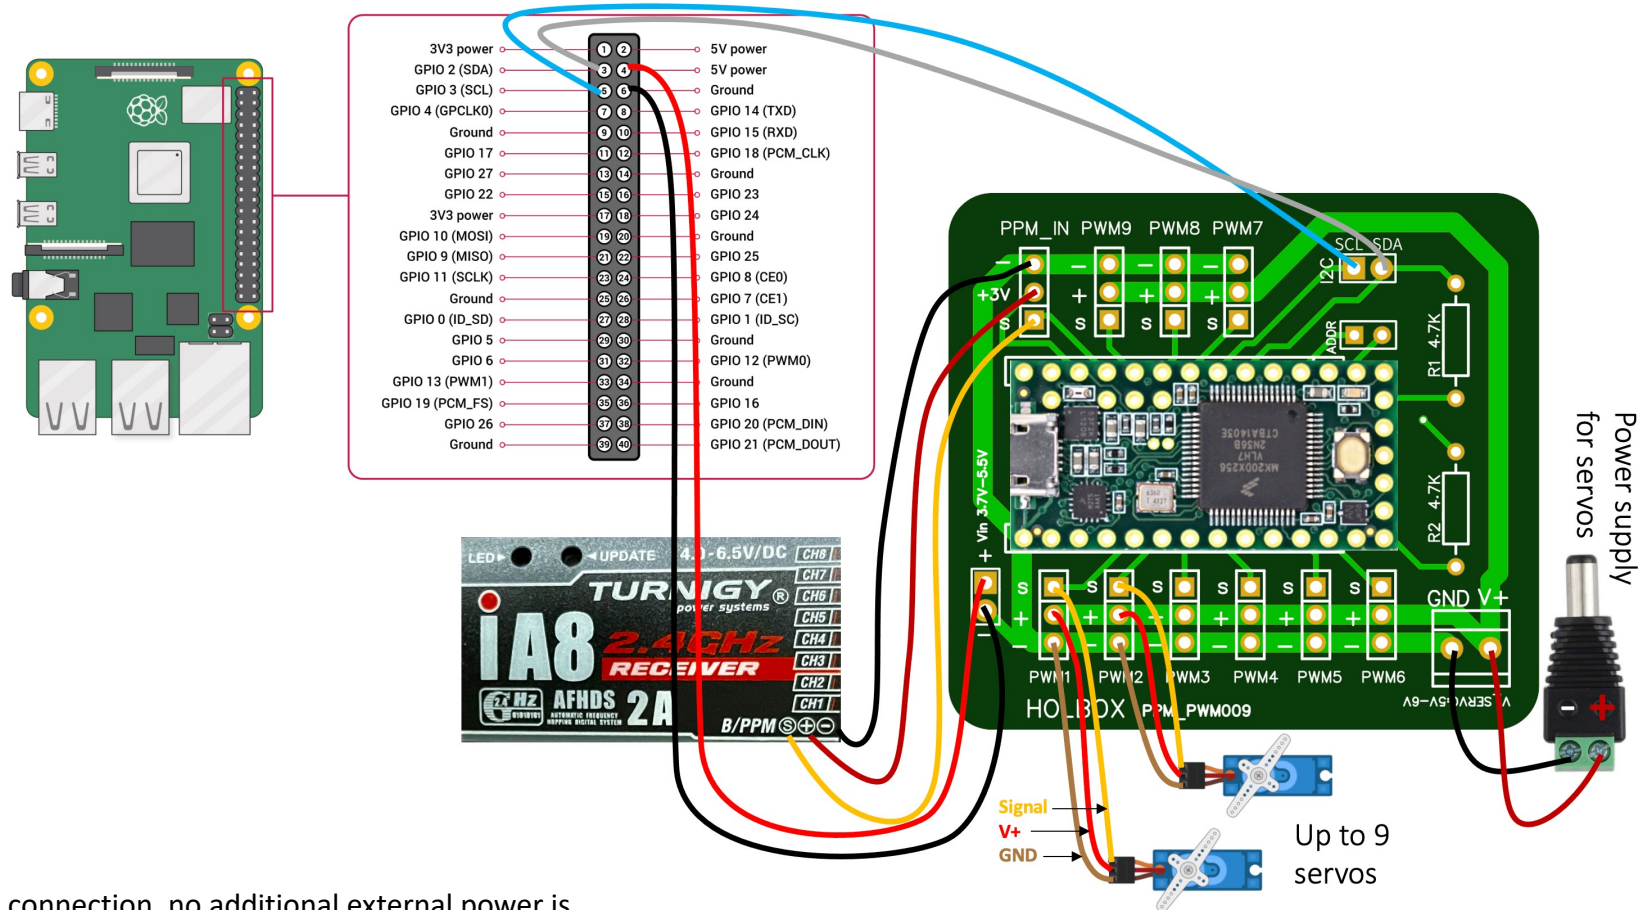

In this connection, no additional external power is needed for the RC receiver.

5. Change I2C address

