

Tasha® BreadMaker & Toaster

Tasha® BreadMaker & Toaster is an investment that will prove its worth every time you use it. Exclusively designed aluminum encapsulated base provides superior heat conductivity and even heat distribution to meet the demands of gourmet chefs everywhere. When properly cared for, your Tasha® BreadMaker & Toaster will give countless years of service and pleasure. Follow the use and care suggestions in this leaflet to preserve and maintain the cookware's original beauty.


Some tips to enhance and maintain the qualities of the product:



Hamilton Beach Premium Bread Maker

Hamilton Beach Professional Professional 2 Slice Toaster

PARTS AND FEATURES

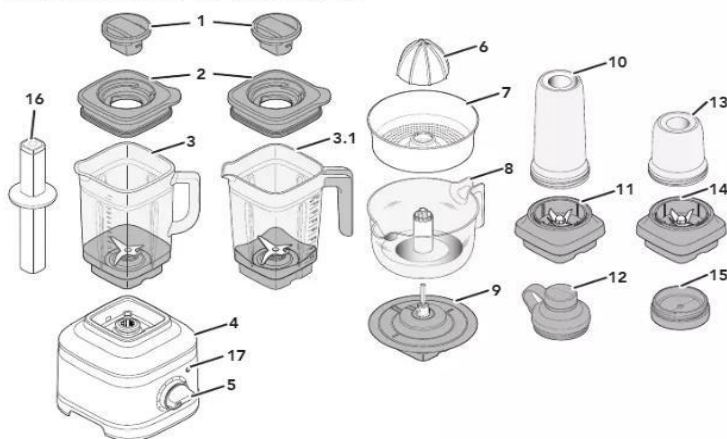

- | | | | |
|-----|---------------------------------|----|--------------------------------------|
| 1 | Lid Centre Cap | 9 | Gear Assembly* |
| 2 | Lid with Vent Well | 10 | Personal Jar** (500 ml capacity) |
| 3 | Glass Jar**** (1.4 L capacity) | 11 | Blade Assembly of Personal Jar** |
| 3.1 | Jar (1.6 L capacity) | 12 | Personal Jar Easy-Drink Lid** |
| 4 | Base | 13 | Small Batch Jar*** (200 ml capacity) |
| 5 | Control Dial | 14 | Blade Assembly of Small Batch Jar*** |
| 6 | Reamer* | 15 | Small Batch Jar Lid*** |
| 7 | Pulp Strainer/Basket* | 16 | Tamper***** |
| 8 | Juice Container* (1 L capacity) | 17 | START/STOP button with LED ring |

PRODUCT SAFETY**▪ IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. European Union only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
3. European Union only: This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. To protect against risk of electrical shock do not put the Stand Blender Base in water or other liquid.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
8. Avoid contacting moving parts.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair or adjustment.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter.
12. Keep hands and utensils other than the provided tamper, out of container while blending to reduce the risk of severe injury to persons or damage to the Blender.

The cover must remain in place when using the tamper through the cover opening. A scraper may be used but must be used only when the Blender is not running.

13. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the jar and during cleaning.

14. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to sudden steaming.

15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

16. Refer to the "Care and Cleaning" section for instructions on cleaning the surfaces in contact with food.

17. Always operate the Blender with cover in place.

18. When blending hot liquids or ingredients, Lid Centre Cap shall remain in place over the lid opening. Always start on lowest speed and slowly ramp to desired speed when blending hot liquids or ingredients.

19. Do not blend hot liquids and ingredients in the Personal Jar or Small Batch Jar.

20. To reduce the risk of injury, never place cutter-assembly blades on Base without Personal Jar or Small Batch Jar properly attached.

21. The use of attachments, including canning jars, not recommended or sold by the manufacturer may cause a risk of injury to persons.

22. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices, or other working environments;
- farmhouses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.


▪ USING THE BREADMAKER & TOASTER

Before first use, clean all parts and accessories (see "Care and Cleaning" section).


Be sure the countertop beneath the Blender and surrounding areas are dry and clean.

IMPORTANT : When moving your Blender, always support/lift from Blender Base. Base will become disengaged from jar if carried by Blender jar or Blender jar handle only.


NOTE: For variable speeds (from 1 to 5), the Blender will stop automatically after 3 minutes of run time. For preset recipe programmes, the blender will automatically stop blending once the cycle is complete.

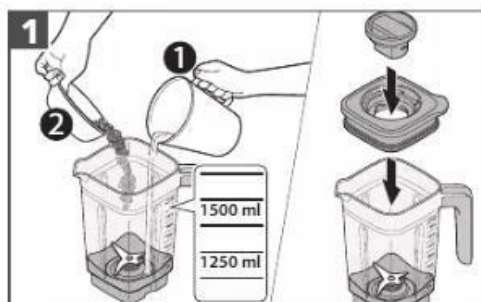


Add ingredients into Jar (max. 1.6 L or 1.4 L for Glass Jar). Secure the Lid and Lid Centre Cap.

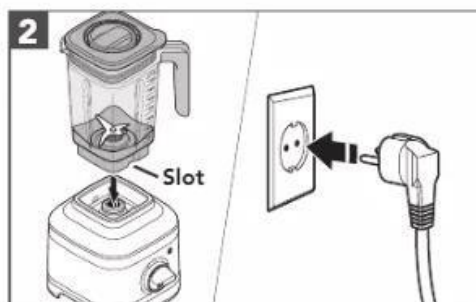


Place and align the Jar with the Slot to fit inside the jar pad, facing Jar handle towards Control Dial. Plug the Blender into an earthed outlet.

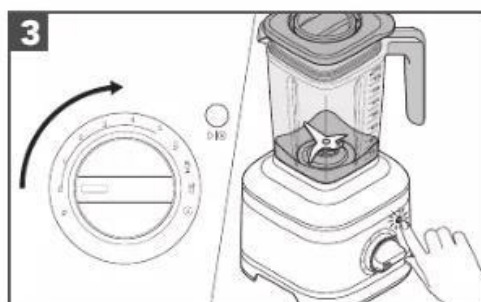

Turn from (O) to desired speed or preset recipe programme. Press (▶|⊙) to start. See "Blender Function Guide" for more details.

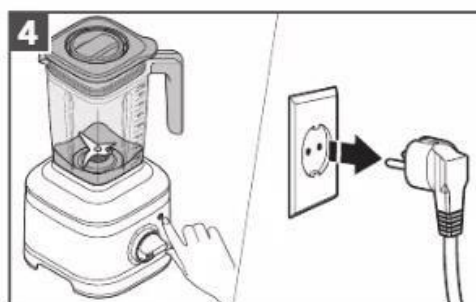

When finished, press (▶|⊙) to stop. Unplug before removing the Blender Jar.

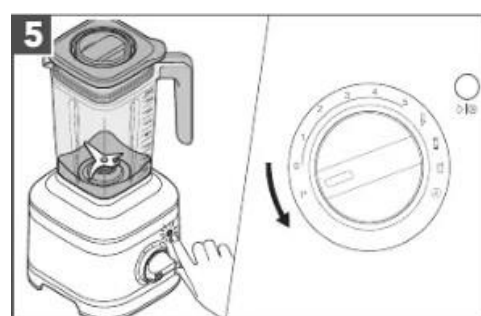


Pulse mode: Press (▶|⊙). Turn and hold the Control Dial from (O) to (P) as per desired interval of time. When finished, release the Control Dial to stop.




Tamper accessory: Remove the Lid Centre Cap only. Stir or press contents down towards the blade. Then, place the Lid Centre cap back before resuming blending. **IMPORTANT:** Use the Tamper ONLY with the 1.6 L capacity Blender jar.

■ CARE AND CLEANING

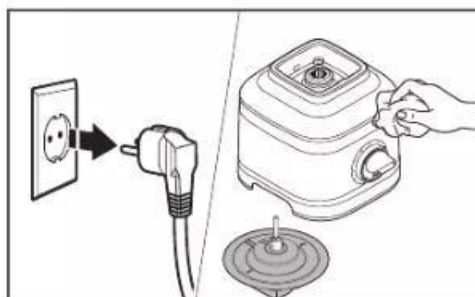


Unplug the Blender before cleaning. Wipe clean the Base, Power Cord and the Gear Assembly of the Citrus Press with a warm, damp cloth and dry with a soft cloth.

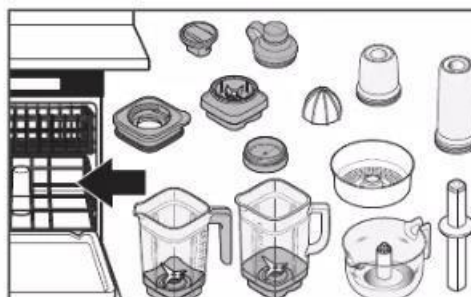


Dishwasher-safe, top rack only: Personal Jar, Small Batch Jar, Lids, Blade Assembly, Reamer, Juice Container, Pulp Basket and Lid Centre Cap.

Blender Jar and Glass Jar can also be washed in the bottom rack.

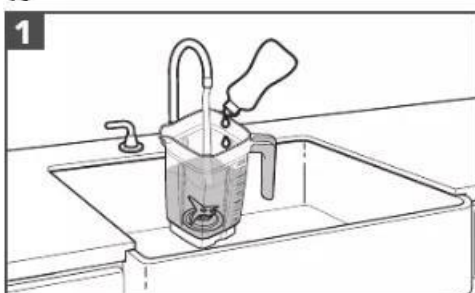

1 Fill half of the Jar with warm water and add **1** or **2** drops of dish-washing liquid. Place the Jar on the base. Secure the Lid and Lid Centre Cap.

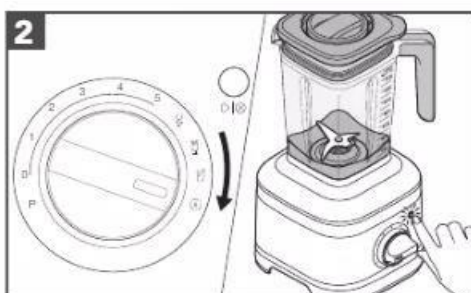

2 Turn from (O) to (P). Press (▶) to start. When cycle ends, remove the Jar and empty contents and rinse with warm water and dry thoroughly.

Problem	Solution
If Blender fails to start:	Check to see if the Blender is securely plugged into an earthed electrical outlet. If you have a circuit breaker box, make sure the circuit is closed.
If Blender stops after 3 minutes:	It's a part of the Blender operation to ensure lasting durability. Turn the Control Dial to (O) and repeat the process until desired consistency.
If Blender stops while blending:	When overloaded or jammed, it will automatically shut off to prevent motor damage. Unplug the Blender. Remove the Jar and use a spatula to rearrange ingredients. Or, divide contents into smaller batches. For certain recipes, adding liquid in the Jar may also reduce the load.
If ingredients are stuck or not blending:	Unplug the Blender. Remove the Jar from the Base, and use a spatula to rearrange ingredients in the Jar.
If Blender stops while blending with Personal Jar or Small Batch Jar:	Unplug the Blender. Remove the Personal Jar or Small Batch Jar with the Blade Assembly from the base. Shake it a little bit. Place it back on the base, plug in the Blender and turn it back on to continue regular use.
If Blender stops while blending and the white LED ring flashes rapidly:	An error is detected in the Blender. Contact an authorised Service Centre for assistance. See the "Product Warranty and Customer Care" sections.
If the white LED ring is off	After 10 minutes of no activity the Blender will go into Sleep mode. To wake up the Blender, press (▶) button.

If the problem is not due to one of the above items, see the “Product Warranty and Customer Care” sections. Do not return the Blender to the retailer. Retailers do not provide service.

▪ **HASSLE-FREE REPLACEMENT WARRANTY**

Your ultimate satisfaction in Tasha products is our goal, so if your Tasha® BreadMaker & Toaster should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, visit us at <https://www.tasha.com/contact>.

Or call our Consumer Service Center toll-free at 1800- 678 8888 to speak with a representative. This warranty excludes damage caused by accident, misuse, or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration, or other damage to external or internal surfaces that does not impair the functional utility of the cookware. This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.