

# Air Conditioning Operation

## Instructions

1. Check aircon salt water cooling intake valves are open and salt water filters are clean
2. If using shore power only turn on one air con unit as the boats transformer will trip if more than 15 amps. The shore power fuse may also trip if more than one unit is turned on.
3. If using the generator all 3 units may be turned on at same time.
4. Adjust temperature as required at the switchboard
5. Check salt water cooling pump is working by outflow of saltwater between the hulls. Seen by looking under boat from rear scoops.
6. If no flow a blockage may have occurred in the cooling water line or the salt water pump is faulty. Remove hose from pump and check you have water coming into system . Blockages can also be removed by blowing air through the system just with your breath.



Aircon unit switches and controllers are located at the switchboard.



These salt water cooling intake valves are under floor on Port side of boat



The salt water cooling water filters and pumps for Port and Saloon aircons under floor Port side




Saloon aircon unit shown top is under dining seat cushion. Saloon aircon unit salt water cooling water discharges on Starboard side.




Port side aircon unit above under centre floor panel at steps

# Air Conditioning Operation

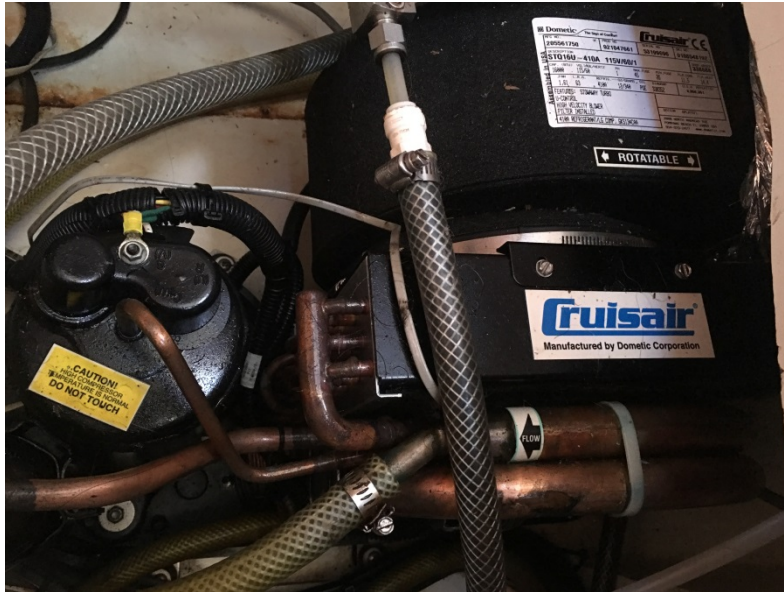

Aircon unit switches and controllers are located at the switchboard.

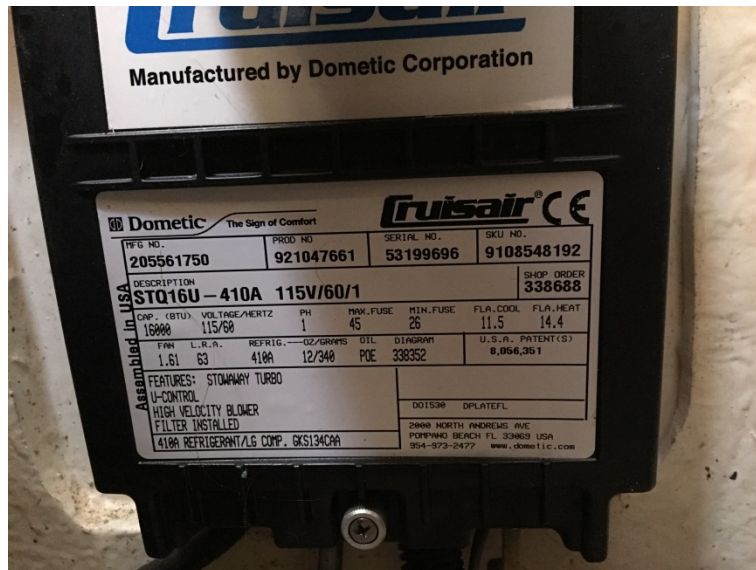

Aircon unit starboard side under step floor

